



## safety

- Avoid contact with steam coming out of the spout area when pouring and out of the lid when refilling.
- Keep small children away from the kettle and never let the cord hang down over the worktop edge - a child could grab it and pull the kettle down.
- If you do not need so much cord, shorten it by wrapping any excess cord around the powerbase ⑥.
- **Always unplug your kettle when not in use.**
- Never overfill - boiling water may splash out.
- Never put the kettle, powerbase, cord or plug in liquid.
- Do not use if there is **any** damage to the kettle, powerbase, cord or plug. Get it checked or repaired: see 'service'.
- This kettle is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the appliance.
- **Caution:** Do not operate the kettle on an inclined surface.
- Only use the powerbase supplied and keep it clean and dry.
- Make sure the lid is secure before switching the kettle on.
- **Warning:** Do not remove the lid while the water is boiling.
- Make sure the kettle is switched off before lifting or pouring.
- Remove the kettle from the base before filling or pouring.
- This kettle is for boiling water only.
- This kettle is for domestic use only.
- Failure to observe these cautions may result in damage to the kettle.

## before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your kettle.

## important - UK only

- The wires in the cord are coloured as follows:  
Green and Yellow = Earth, Blue = Neutral, Brown = Live.
- This kettle complies with European Economic Community Directive 89/336/EEC.

## before using for the first time

- Remove all packaging and any labels.
- Fill to 'MAX', boil, then pour the water away. Repeat 2 to 3 times.

## know your Kenwood jug kettle

- ① lockable lid
- ② ring pull lid release
- ③ on/off switch with neon
- ④ water level window
- ⑤ 360° powerbase
- ⑥ "easi-wind™" cord wrap
- ⑦ scale filter

## to use your jug kettle

- 1 Fill it through the spout or lid. To open the lid, lift the ring pull. The water level must be between 'MAX' and 200mls (1 cup).
- Be economical: do not boil more water than you need.
- To improve the quality of your drinks always use fresh water.
- Empty the kettle after each use.
- 2 Check the lid is closed.
- 3 Plug in and switch on. The neon will come on.
- 4 Your kettle will boil and switch off automatically. To re-boil, wait a few seconds - the on/off switch needs time to reset.

- **If you experience problems with your kettle switching on and off during use or switching off before boiling, check that the flat element is free from scale - see "descaling". If descaling does not solve the problem contact Kenwood customer care.**

- Your kettle is fitted with a scale filter to hold back limescale particles.
- If you find drops of water under your kettle, don't worry - it is just condensation.

## boil-dry protection

- If you switch on with too little water, your kettle will cut out automatically. Switch off and let it cool down before re-filling. When it has cooled down, the switch will reset itself.

## care and cleaning

- Before cleaning, unplug your kettle and let it cool down.

## the outside and powerbase

- Wipe with a damp cloth, then dry. Do not use abrasives - they will scratch the plastic.

## the inside

- Wipe with bicarbonate of soda on a damp cloth. Rinse thoroughly.
- Even though your kettle comes with a scale filter, you still need to clean the inside (and the filter) regularly.

## the scale filter

- 1 Open the lid using the ring pull ①.
- 2 Lift the tab and gently pull the scale filter off ②.
- 3 **either** rinse under the tap or use a soft brush.  
**or** when descaling your kettle, drop the filter in too. Rinse thoroughly.

- 4 To re-fit the scale filter, slide it in until secure ③.

## descaling

- Regular descaling of the flat element will improve the performance of your kettle. If the kettle is not descaled regularly the build up of limescale may result in the following:

- problems may be experienced with the kettle switching on and off during use or switching off before boiling.
- the kettle may take longer to boil.
- the flat element may be damaged.

Please note: not descaling your kettle may invalidate your guarantee.

- When limescale starts to build up on the heating element, buy a suitable descaler and descale your kettle. After descaling, boil with fresh water several times and discard. Clean any descaler off the kettle - it can damage the parts.
- Some regions of the country have chalky water. This makes boiled water look cloudy and leaves a deposit on the side of the kettle. This is normal but can be removed with regular cleaning.
- Alternatively, to reduce limescale build up, use filtered water to fill your kettle.
- A range of Kenwood jug water filters are available.

☎ Call Kenwood on **023 92392333** and ask for customer care.

## service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

### UK

If you need help with:

- using your kettle
- servicing or repairs (in or out of guarantee)

call Kenwood customer care on **023 92392333**. Have your **model number ready** - it is located on the underside of your kettle.

### Eire

- See our advertisement in Golden Pages.

### other countries

- Contact the shop where you bought your kettle.

### guarantee (UK only)

If your kettle goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

## children and burns or scalds

### advice from the British Burn Association

Every year, 30,000 children go to hospital with burns. What might be a minor burn for an adult could horrifically injure - or even kill - a child.

take these precautions

- Keep hot drinks out of children's reach.
- Don't drink while holding your baby. If you're passing someone a drink, make sure a child isn't underneath.
- Keep your kettle, and its cord, well back from the worktop edge so that children can't grab them.
- Keep children away from the kitchen work area.
- For baby's bath, run the cold water first, then add the hot. Mix well and test the temperature with your elbow before you put baby in.
- Teach children about hot things.

**run cold water over a burn immediately, then get medical help.** Don't stop to remove clothing.

# KENWOOD

