



# KENWOOD

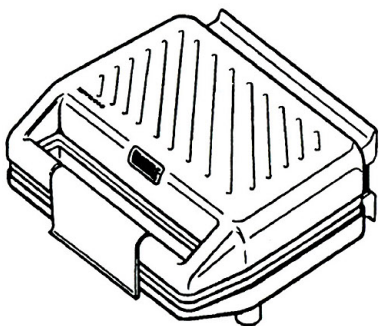

**SM200 & SM250**

## KNOW YOUR KENWOOD SANDWICH TOASTER

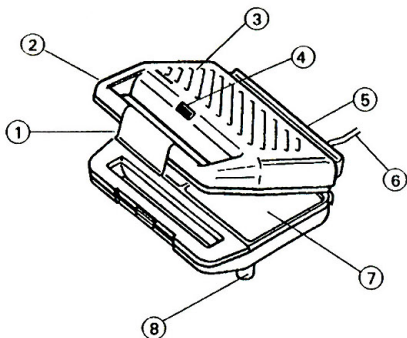

### KEY

- |                    |                              |
|--------------------|------------------------------|
| 1. Handle Latch    | 5. Cord Wrap                 |
| 2. Handle          | 6. Cord                      |
| 3. Lid             | 7. Non-Stick Toasting Plates |
| 4. Indicator Light | 8. Feet                      |



Fig 1



Fig 2



Fig 3

## OPERATION

Please read all instructions before using this appliance.

1. Close the lid of the sandwich toaster.
2. Plug the appliance into the power supply. The indicator light will illuminate to show that the sandwich toaster is heating.
3. Prepare the bread and filling for your sandwich while the sandwich toaster is pre-heating.
4. Wait until the indicator light goes out. The sandwich toaster is then at the correct temperature for use.
5. Open the sandwich toaster by pulling the handle latch outwards and lifting lid (see fig 1).
6. For golden toasted sandwiches, spread butter on the outside of the bread. Beware of some spreads which are not suitable for toasting. Always select bread of a suitable size to fit the plates. Place the filling between the unbuttered sides of bread. Ensure the sandwiches are evenly filled to assist with even browning. Place the sandwiches into the appliance (see fig 2).
7. Close the lid, using a wooden spatula to hold the bread in place if necessary, until the handle latch locks.
8. Allow the sandwich to toast for 3-8 minutes according to taste and ensuring that raw ingredients (eg bacon) are thoroughly cooked, alternatively pre-cook them before toasting. During toasting the indicator light will cycle on and off to maintain the correct toasting temperature. Beware of steam which may escape from the front of the appliance.
9. Remove the toasted sandwiches. Do not use a metal implement for this as it may damage the toasting plates.
10. After use, unplug the appliance and allow to cool.

## IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:-

1. Read all instructions.
2. Do not touch hot surfaces, and beware of steam which may escape from the appliance during the toasting operation.
3. To protect against electric shock do not immerse cord, plug or appliance in water or other liquids.
4. Do not insert metal objects, knives, forks or similar implements into the bread slot.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not leave appliance unattended.
7. Do not use any unauthorised attachments with your toaster, they may be hazardous.
8. Unplug from outlet when not in use and before cleaning.
9. Do not cover your toaster whilst it is hot or in use.
10. Appliance should not be used if the supply cable is damaged or dropped causing visible damage.
11. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or worktop or touch hot surfaces.
14. Do not use appliance for other than intended use.

## BEFORE USING YOUR SANDWICH TOASTER

Before using your sandwich toaster for the first time, clean the appliance and plates as described in the 'Cleaning' section. Brush a little butter on the plates, heat the appliance with the lid open for 5 minutes and then remove any surplus butter. The sandwich toaster is ready for use.

## SAVE THESE INSTRUCTIONS

### DO NOT IMMERSE THIS APPLIANCE IN WATER


#### Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

**IMPORTANT! (UK ONLY)** The wires in the mains lead are coloured in accordance with the following code:-

GREEN and YELLOW	- EARTH
BLUE	- NEUTRAL
BROWN	- LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the 'Earth' symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

The appliance must be protected by a 13A ASTA approved (BS1362) fuse if a 13A (BS1363) plug or a non-rewireable plug is used or if any other type of plug is used by a 15A fuse either in the plug or adaptor or at the distribution board.

#### WARNING - THIS APPLIANCE MUST BE EARTHED

If your appliance has been fitted with a mains lead terminated in a factory fitted plug you must comply with the following regulations:-

1. The plug fitted to the lead contains a fuse. For replacement use only a 13A ASTA approved (BS1362) fuse.
2. For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover for the plug is identified by colour and replacements may be obtained from your Kenwood Authorised Repairer (see detail under SERVICE).
3. If the socket outlets in your home are not suitable for the plug fitted then the plug should be removed. Non-rewireable plugs must be cut off and **IMMEDIATELY DESTROYED**. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
4. Fit a suitable plug to the appliance taking note of the information contained in the plug wiring instructions above.

This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

## CLEANING

Remove the plug from the power supply before cleaning.

Do not clean the sandwich toaster under running water and do not immerse in water.

To clean, allow the sandwich plates to cool then wipe the appliance with a damp cloth plus a little washing up liquid if necessary. Dry carefully afterwards.

## STORAGE

When the appliance is cool, the cord can be wrapped around the cord wrap. The sandwich toaster can then be stored upright (see fig 3).

## SERVICE

If the supply cord of this appliance is damaged, it must only be replaced by an Authorised Kenwood Repairer because special purpose tools are required.

### U.K.

For any repairs in or out of guarantee, servicing or selected spare parts, contact your local dealer in the block advertisement in **YELLOW PAGES** under the heading of **ELECTRICAL APPLIANCE REPAIRERS** or telephone 0705 476000 extension 2800 Service Department.

### Fire

Contact local repairer from advertisement in **Golden Pages**.

### All Other Markets

Contact the dealer from whom you purchased your appliance.

**KENWOOD** LIMITED

New Lane, Havant, Hants, PO9 2NH

85504/1

English