

## safety

- Burnt food can catch fire, so:
  - never leave your toaster on unattended;
  - keep your toaster away from anything (eg curtains) that could catch fire;
  - set the browning control lower for thin or dry bread;
  - set the browning control no higher than ☺ when using the warming rack; and
  - never warm food with a topping or filling (eg pizza): if it drips into the toaster, it could catch fire.
- To avoid electric shocks, never:
  - let the toaster, cord or plug get wet; or
  - put **your hand or** anything metal, eg a knife or foil, into the toaster.
- Always unplug the toaster before cleaning or attempting to clear jammed bread.
- Never cover your toaster with a plate or anything else - it could overheat and catch fire. For the same reason, never completely cover the warming rack.
- When using the warming rack, never wrap the food up. Plastic wrapping will melt and could catch fire. Foil will reflect heat, damaging the toaster.
- Never let the cord hang down where a child could grab it - clip excess cord into the cord storage clips in the base.
- This toaster is not intended for use by young children or infirm persons without supervision.
- Never touch hot surfaces especially the metal top area and the warming rack. If you're using the toast slots, unclip the warming rack so it can't burn you.
- Never use an unauthorised attachment.
- Never use a damaged toaster. Get it checked or repaired: see 'Service'.

- This toaster is for domestic use only.
- Young children should be supervised to ensure that they do not play with the appliance.

### before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your toaster.

### Important - UK only

- The wires in the cord are coloured as follows:  
Green and Yellow = Earth,  
Blue = Neutral,  
Brown = Live.
- This toaster complies with European Economic Community Directive 89/336/EEC.

### before using for the first time

- Remove all packaging and any labels.

## key

- ① removable warming rack
- ② lever (with 'Hi-Rise™' for extra lift)
- ③ 'cancel' button
- ④ 'defrost' button with neon light
- ⑤ 'reheat' button with neon light
- ⑥ browning control
- ⑦ crumb tray
- ⑧ cord storage

## to use your toaster

- 1 Set the browning control ⑥. (Use a low setting for thin or dry bread.)
- 2 Insert the bread, muffins, bagels etc.
- 3 Lower the lever ② until it locks. (The lever will not stay down unless the toaster is plugged in).
- To toast frozen bread, press the 'defrost' button ④. Its light will come on.
- To warm toast that's popped up but gone cold, press the 'reheat'

button ⑤. Its light will come on.

- To stop toasting at any stage, press the 'cancel' button ③.
- 4 Your toast will pop up automatically. To raise it higher, lift the lever.

## to use the warming rack

- 1 Fit the warming rack by hooking one end onto the toaster, then push down on the opposite end to clip into position ①.
- 2 Put your food on the rack (slice thick items in half to stop their outsides burning). Watch to make sure it doesn't burn, and turn it over half way through.
- 3 Set the browning control to 1, 2 or ☺ - **but no higher than** ☺.
- 4 Lower the lever.
- 5 The lever will automatically rise at the end of the warming cycle.
- 6 To remove the warming rack, allow the toaster to cool and unplug. Press down and inwards on one end to release the handle. Lift off to remove.

## care and cleaning

- 1 Before cleaning, unplug your toaster and let it cool down.
- 2 Slide out the crumb tray ⑦. Clean, then replace. Do this regularly: crumbs can smoke or even burn.
- 3 Wipe the outside of the toaster with a damp cloth, then dry.

## service

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

If you need help with:

- using your toaster or
  - servicing or repairs (in or out of guarantee)
  - ☛ call Customer Care at Kenwood on **023 9239 2333**. Have your model number ready - it's on the underside of your toaster.
- Eire**
- See our advertisement in Golden Pages.
- other countries**
- Contact the shop where you bought your toaster.


### guarantee

If your toaster goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- you supply your receipt to show when you bought it.

This guarantee does not affect your statutory rights.

# KENWOOD

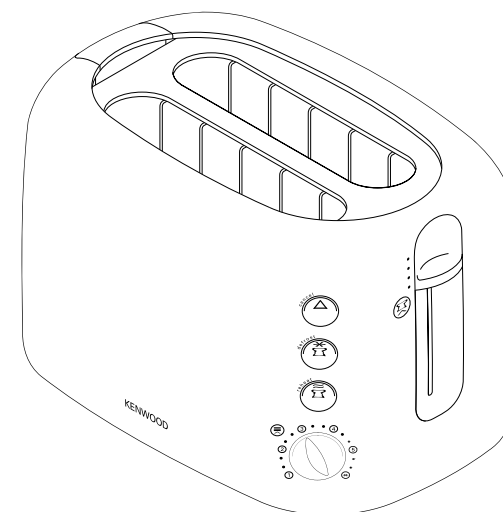

**TT285 series**  
**TT885 series**



Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK  
[www.kenwood.co.uk](http://www.kenwood.co.uk)

4263/2