

IMPORTANT INSTRUCTIONS

SAVE THESE INSTRUCTIONS

MODE D'EMPLOI IMPORTANT

CONSERVEZ LES PRESENTES INSTRUCTIONS

INSTRUCCIONES IMPORTANTES

REPASE Y GUARDE ESTAS INSTRUCCIONES


LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR SU APARATO

ISTRUZIONI IMPORTANTI

CONSERVARE LE ISTRUZIONI

**COFFEE MAKER TYPE EC330/
CAFETERIE MODÈLE EC330/
CAFETERA ELECTRICA MODELO
EC330/
MACCHINA DA CAFFÈ EC330**

**ELECTRONIC CHARACTERISTICS:
CARACTÉRISTIQUES ÉLECTRIQUES:
CARACTERISTICAS ELECTRICAS:
CARATTERISTICHE ELETTRICHE:
120V-60HZ - 1100W**

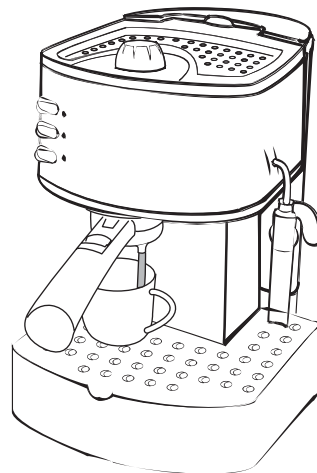

Register this product on-line and receive a free trial issue of Cook's Illustrated.
Visit www.delonghiregistration.com. Visit www.delonghi.com for a list of service centers near you. (U.S. and Canada)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated.
Visitez www.delonghiregistration.com.
Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. et Canada).

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated.
Visite www.delonghiregistration.com. Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Estados Unidos y Canada)

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista "Cook's Illustrated". Visita www.delonghiregistration.com. Visita www.delonghi.com per una lista dei centri di servizio a te più vicini. (Stati Uniti e Canada)

