

GB

FAN HEATER

INSTRUCTION MANUAL

F

RADIATEUR SOUFFLANT

MODE D'EMPLOI

D

HEIZLÜFTER

BEDIENUNGSANLEITUNG

I

TERMOVENTILATORE

ISTRUZIONI D'USO

NL

TERMOVENTILATOR

GEBRUIKSVOORSCHRIFTEN

E

TERMOVENTILADOR

INSTRUCCIONES DE USO

P

TERMOVENTILADOR

INSTRUÇÕES PARA O USO

GR

ΑΕΡΟΘΕΡΜΟ

ΟΛΗΓΙΕΣ ΧΡΗΣΗΣ

DK

VARMLUFTSBÆSER

BRUGSVEJLEDNING

S

VÄRMEFLÄKT

BRUKSANVISNING

N

VIFTE OVN

BRUKS ANVISNING

SF

TUULETINLÄMMITIN

KÄYTTÖOHJEET

PL

TERMOWENTYLATOR

INSTRUKCJA OBSŁUGI

H

HŐVENTILÁTOR

KEZELÉSI UTASÍTÁS

CZ

TEPELNÝ VENTILÁTOR

NÁVOD K POUŽITÍ

RUS

ТЕРМОВЕНТИЛЯТОР

ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

HR

VENTILACIJSKA GRIJALICA

UPUTE ZA UPORABU

SK

TEPELNÝ VENTILÁTOR

NÁVOD K POUŽITIU

BG

ТЕРМОВЕНТИЛАТОР

УКАЗАНИЯ ЗА УПОТРЕБА

ROM

 
 
 
TERMOVENTILATOR

INSTRUCȚIUNI DE FOLOSIRE


SLO

TERMOVENTILATOR

NAVODILA ZA UPORABO

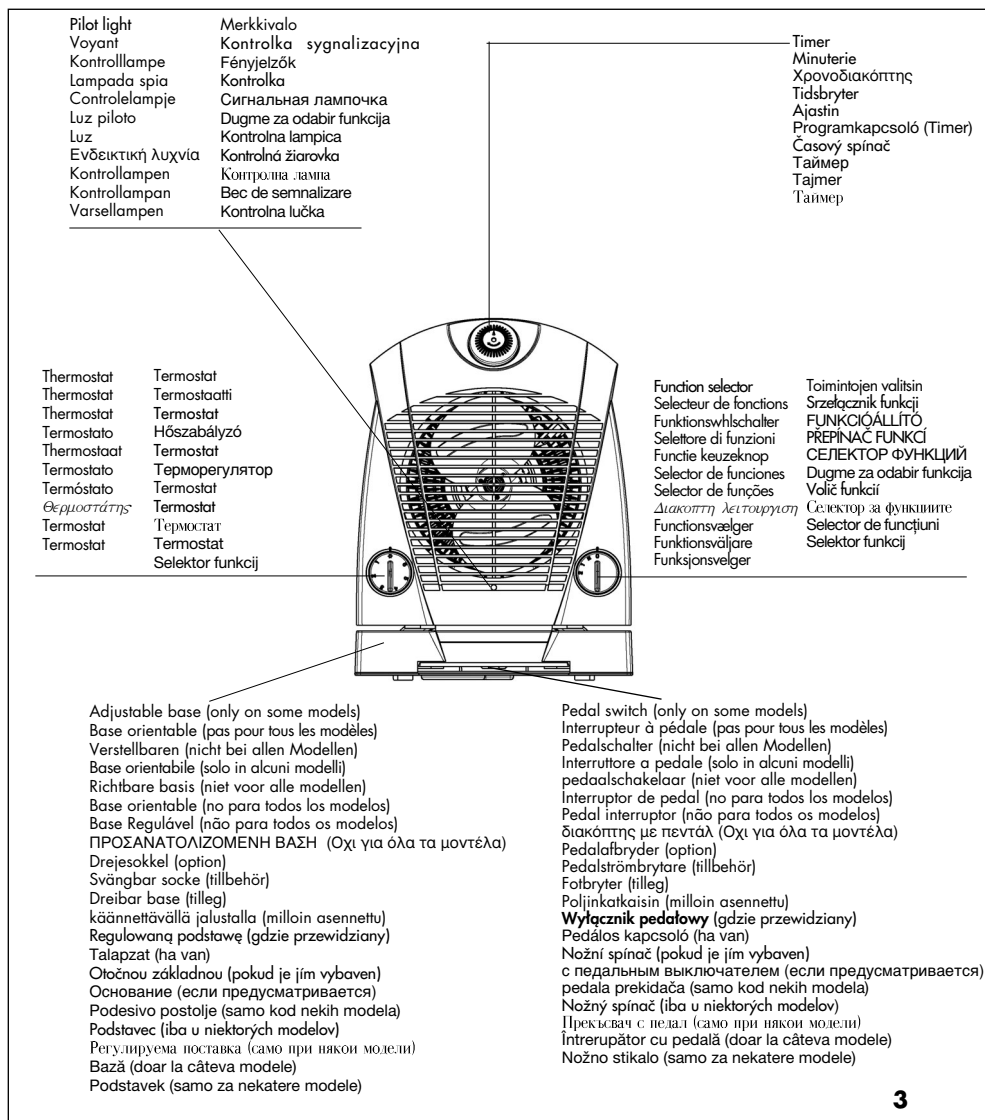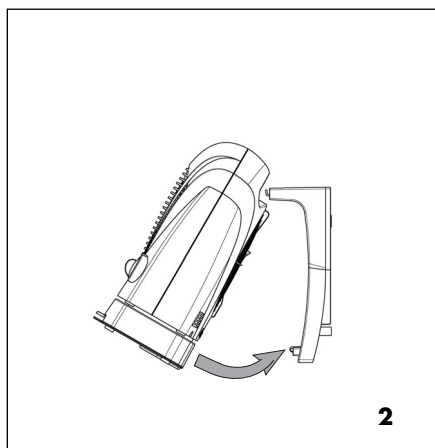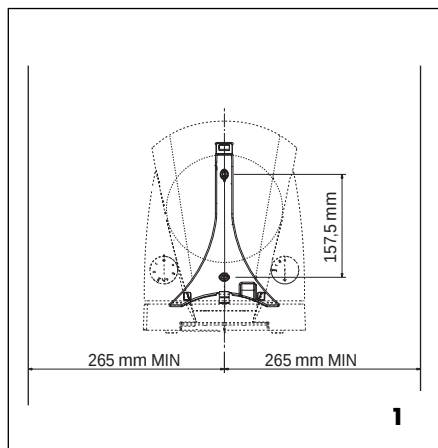

Voltage Wattage	See rating label	Spænding effekt	se typepladen
Tension puissance	voir plaque données	Spänning effekt	se märkplåt
Spannung Leistung	siehe Typenschild	Spënnung	se etikett
Tensione potenza	vedi targa caratteristiche	Jännite watt	kts. arvokilpi ominaisuudet
Spänning Effekt	zie plaatje	Napięcie mocy	Zob. tabliczkę znamionową
Tension Potencia	véase placa de características	Feszültség teljesítmény	lásd adatlemez
Voltagem Potencia	ver placa de especificações	Napětí Výkon	viz štítek charakteristik
Τάση Ισχύς	βλέπε πινακίδα με χαρακτηριστικά	Напряжени е питания	смотри табличку характеристик
Napon/ Snaga	Vidi pločicu s tehničkim podacima	Tensiune putere	Vezi plăcuța cu caracteristici
Napätie výkonu	Vid' štítok charakteristik	Napetost in moč	Glej napisno tablico
Мощност на напряжението	Вижте табелката с качествата		

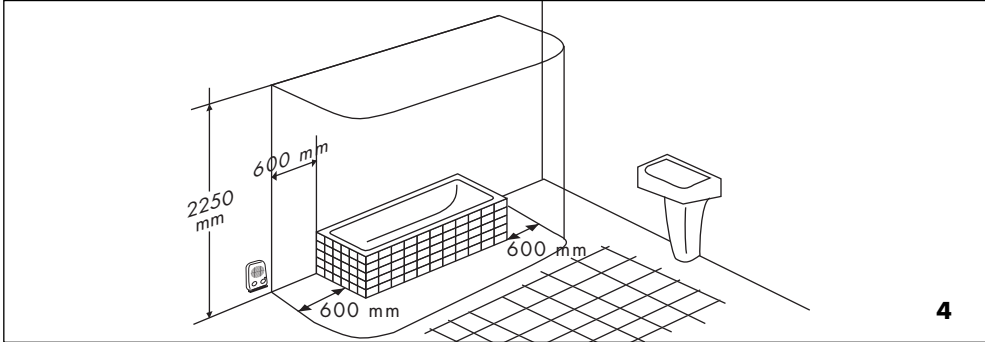 

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.
 WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.
 With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.
- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

- Blue:
- Brown:
- Nearl
Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
 The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
 The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.