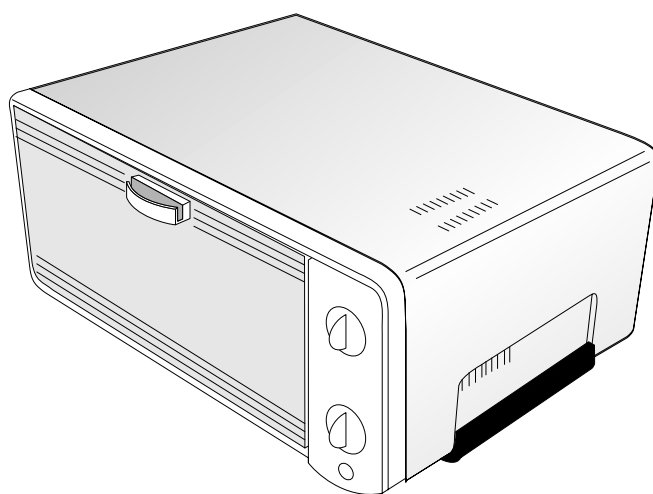
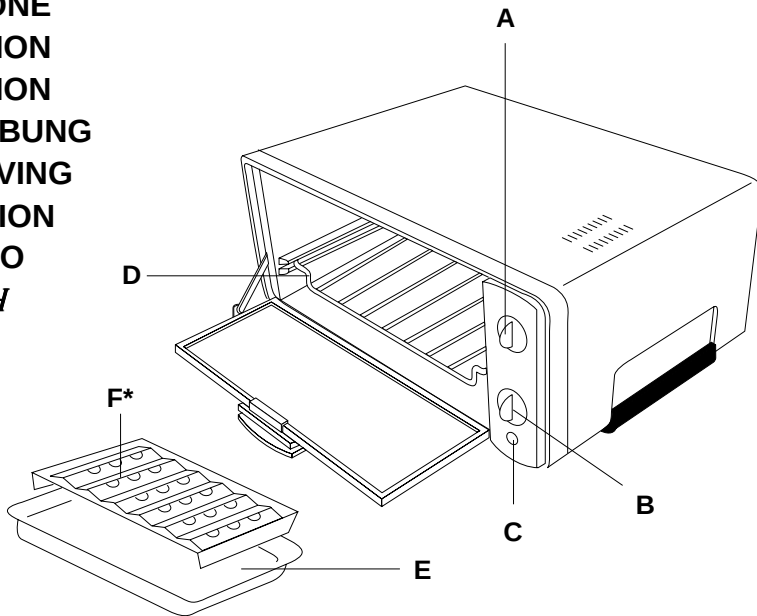

Miniforno - Toaster - Grill
Minioven - Toaster - Grill
Mini-four - Grille-Pain - Gril
Minibackofen - Toaster - Grill
Mini-Oven - Toaster - Grill
Minihorno - Tostador de pan - Grill
Miniforno - Torradeira - Grill
ΦΟΥΡΝΟΣ - GRILL



Istruzioni per l'uso
Instructions for use
Mode d'emploi
Bedienungsanleitung
Gebruiksaanwijzingen
Instrucciones para el uso
Instruções
Οδηγίες χρήσης

**DESCRIZIONE
DESCRIPTION
DESCRIPTION
BESCHREIBUNG
BESCHRIJVING
DESCRIPCION
DESCRIÇÃO
ΠΕΡΙΓΡΑΦΗ**



* OPTIONAL
OPTIONAL
OPTION
AUF WUNSCH
OPTIONAL
OPTIONAL
OPCIONAL
αν προβλέπεται

A MANOPOLA ON/OFF E TEMPI TOSTATURA
ON/OFF AND TOASTING TIME SELECTOR
BOUTON ON/OFF ET TEMPS DE GRILLAGE
DREHKNOPF ON-OFF/TOASTZEIT
ON/OFF KNOP EN TIMER
MANDO ON/OFF Y TIEMPOS PARA TOSTAR
MANÍPULO ON/OFF E TEMPOS TORRAGEM
Πάνω διακό τη (ON/OFF + χρόνοι τοστιariumatos)

C SPIA
PILOT LIGHT
LAMPE TEMOIN
KONTROLLAMPE
LAMPJE
INDICADOR LUMINOSO
LUZ PILOTO
Ενδεικτική λυχνία

E PIATTO FORNO
OVEN TRAY
PLATEAU DE CUISSON
UNIVERSALPFANNE
OVENSCHAAL
BANDEJA DEL HORNO
PRATO FORNO
ταψάκι φούρνου

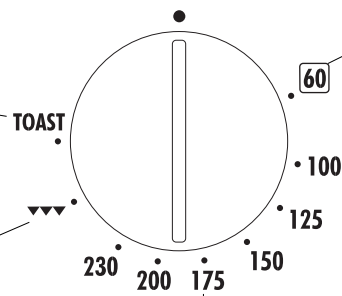
B MANOPOLA SELETTORE PROGRAMMI/THERMOSTATO
PROGRAMME SELECTOR/THERMOSTAT KNOB
BOUTON SELECTEUR PROGRAMMES/THERMOSTAT
DREHKNOPF BETRIEBSART/TEMPERATURWAHL
KEUSENKNOP EN THERMOSTAAT
MANDO SELECTOR PROGRAMAS/THERMOSTATO
MANÍPULO SELECTOR PROGRAMAS/TERMÓSTATO
Κάτω διακό τη (ε ιλογέας ρογραμ-μάτων/θερμοστάτης)

D GRIGLIA
WIRE RACK
GRILLE
ROST
ROOSTER
PARRILLA
GRELHA
σχάρ

F* GRIGLIA DIETETICA *
DIETETIC RACK *
GRILLE DIETETIQUE*
ALLESGRILL FÜR KALORIENARME SPEISEN*
DIEET ROOSTER*
PARRILLA DIETÉTICA*
GRELHA DIETÉTICA*
Διαιτητική σχάρ*

TOAST
(resistenza superiore + inferiore)
TOAST
(lower+upper heating elements)
TOAST
(résistance supérieure+inférieure)
TOAST
(Ober- und Unterhitze)
TOAST
(boven en bodem weerstand)
TOAST
(resistencia superior+inferior)
TOAST
(resistência superior + inferior)
TOAST
(άνω αντίσταση και κάτω αντίσταση)

GRILL
(solo resistenza superiore)
GRILL
(only upper heating element)
GRILL
(résistance supérieure+inférieure)
GRILL
(nur Oberhitze)
GRILL
(Alleen boven weerstand)
GRILL
(sólo resistencia superior)
GRILL
(somente resistência superior)
GRILL
(μόνο αντίσταση)



MANTENERE CALDI I CIBI
(resistenza superiore + inferiore)
TO KEEP FOOD WARM
(lower+upper heating elemts)
MANTENIR LES PLATS CHAUDS
(résistance supérieure+inférieure)
SPEISEN WARMHALTEN
(Ober- und Unterhitze)
ETENSWAREN WARM HOUDEN
(boven en bodem weerstand)
MANTIENE CALIENTES LAS COMIDAS
(resistencia superior + inferior)
MANTENER QUENTE OS ALIMENTOS
(resistência superior + inferior)
Διατήρηση ζεστών φαγητών
(άνω αντίσταση και κάτω αντίσταση)

COTTURA AL FORNO (resistenza superiore + inferiore)
OVEN COOKING (lower+upper heating elements)
CUISSON AU FOUR (résistance supérieure + inférieure)
BACKEN (Ober- und Unterhitze)
BEREIDING IN DE OVEN (boven en bodem weerstand)
COCCIÓN EN EL HORNO (resistencia superior + inferior)
COZEDURA NO FORNO (resistência superior + inferior)
Ψήσιμο στο φούρνο (άνω αντίσταση και κάτω αντίσταση)