


FRIGGITRICE ELETTRICA  
ELECTRIC DEEP FRYER  
FRITEUSE ÉLECTRIQUE  
ELEKTRISCHE FRITTEUSE  
ELEKTRISCHE FRITEUSE  
FREIDORA ELÉCTRICA  
FRITADEIRA ELÉCTRICA  
ΗΛΕΚΤΡΙΚΗ ΦΡΙΤΕΖΑ  
ЭЛЕКТРИЧЕСКАЯ ФРИТЮРНИЦА  
ELEKTROMOS OLAJSÜTŐ  
ELEKTRICKÝ FRITOVACÍ HRNEC  
FRYTKOWNICA ELEKTRYCZNA  
ELEKTRISK FRITUREGRYDE  
ELEKTRISK FRITYRGRYTE  
ELEKTRISK FRITÖS  
SÄHKÖRASVAKEITIN

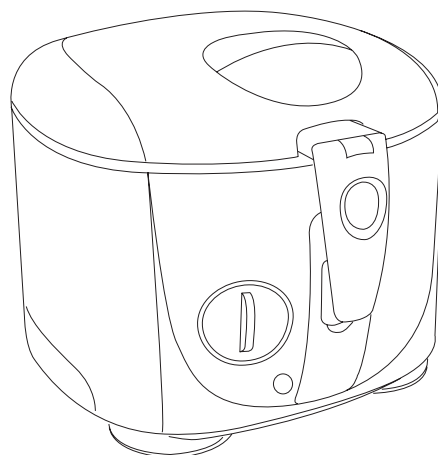

Istruzioni per l'uso  
Instructions for use  
Mode d'emploi  
Gebrauchsanweisung  
Gebruiksaanwijzingen  
Instrucciones para el uso  
Instruções  
Οδηγίες χρήσης  
Инструкции по эксплуатации  
Használati utasítás  
Návod k použití  
Instrukcja obsługi  
Brugsanvisninger  
Bruksanvisning  
Bruksanvisning  
Käyttöohjeet

**PG**  
ME 28

## ELECTRICAL REQUIREMENTS (ONLY FOR UK)

**Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.**

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity.

Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.

**Note:** Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

**N.B.** We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

**IMPORTANT:** the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  $\perp$  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.

Only 13amp replacement fuses which are ASTA approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

### WARNING - THIS APPLIANCE MUST BE EARTHED

