
Pressurized Extractor Cleaner

Συσκευή υγρού καθαρισμού με εξαγωγή
Döşemeler için Özütlemeli Yıkama-Kurutma Aygıtı
Hacaдка для Мытья
Univerzális takaritógep
Urządzeine ekstrakcyjne do mycia i suszenia podłóg
UniverzálnÍ vysavač

Ghf[jxbcnbntk pf ce[j b vjrhj gjxbcndfyt yf gjljdb gjrhbnbz xhtp bpcverdfyt

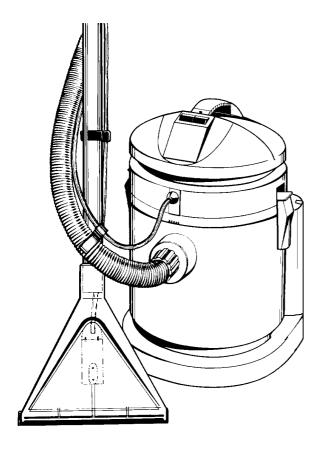

Operating instructions
Οδηγίες χρήσης
Kullanma Komutları
Руководство по эксплуатации
Kezelési útmutató
Instrukcja obsługi
Příru ka
Erfpfybz pf egjnht, f



Cover 14-10-2002 10:04 Pagina 2

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.
- The colour of the correct replacement fuse cover is that as marked on the base of the plug.
- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.