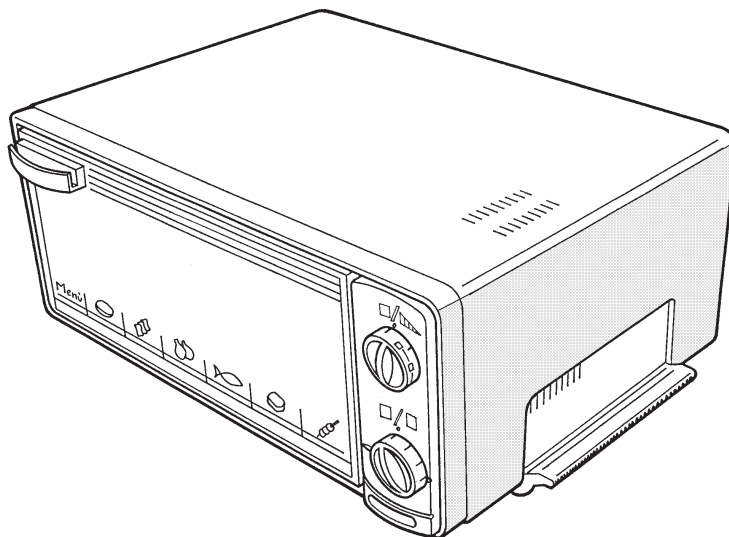
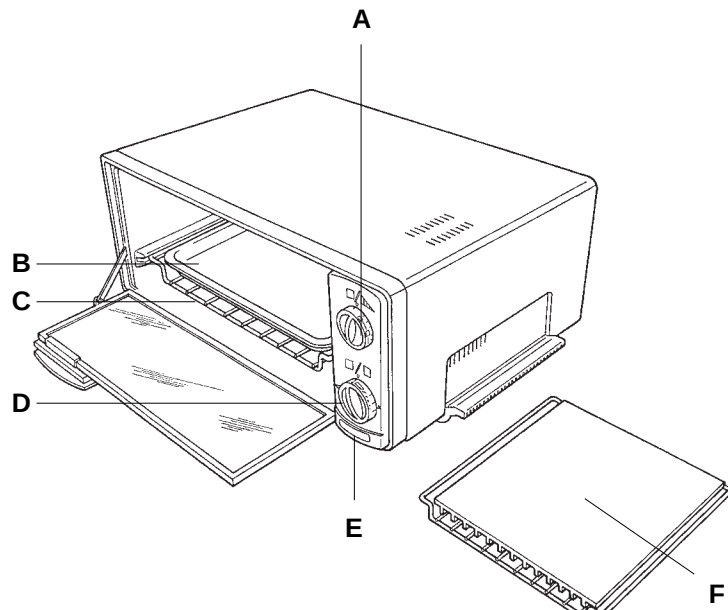

Miniforno - Toaster - Pizzeria - Grill
Minioven - Toaster - Pizza Oven - Grill
Mini-four - Grille-Pain - Pizzeria - Gril
Minibackofen - Toaster - Pizza Ofen - Grill
Mini-Oven - Toaster - Pizza-Oven - Grill
Minihorno - Tostador de pan - Pizzeria - Grill
Miniforno - Torradeira - Pizaria - Grill



Istruzioni per l'uso
Instructions for use
Mode d'emploi
Bedienungsanleitung
Gebruiksaanwijzingen
Instrucciones para el uso
Instruções

**DESCRIZIONE
DESCRIPTION
DESCRIPTION
BESCHREIBUNG
BESCHRIJVING
DESCRIPCION
DESCRIÇÃO**



* OPTIONAL
OPTIONAL
OPTION
AUF WUNSCH
OPTIONAL
OPTIONAL
OPCIONAL

A MANOPOLA ON/OFF E TEMPI TOSTATURA
ON/OFF AND TOASTING TIME SELECTOR
BOUTON ON/OFF ET TEMPS DE GRILLAGE
DREHKNOPF ON-OFF/TOASTZEIT
ON/OFF KNOP EN TIMER
MANDO ON/OFF Y TIEMPOS PARA TOSTAR
MANÍPULO ON/OFF E TEMPOS TORRAGEM

B PIATTO FORNO
OVEN TRAY
PLATEAU DE CUISSON
UNIVERSALPFANNE
OVENSCHAAL
BANDEJA DEL HORNO
PRATO FORNO

C GRIGLIA
WIRE RACK
GRILLE
ROST
ROOSTER
PARRILLA
GRELHA

D MANOPOLA SELETTORE PROGRAMMI/TERMOSTATO
PROGRAMME SELECTOR/THERMOSTAT KNOB
BOUTON SELECTEUR PROGRAMMES/THERMOSTAT
DREHKNOPF BETRIEBSART/TEMPERATURWAHL
KEUSENKNOP EN THERMOSTAAT
MANDO SELECTOR PROGRAMAS/TERMOSTATO
MANÍPULO SELECTOR PROGRAMAS/TERMÓSTATO

E SPIA
PILOT LIGHT
LAMPE TEMOIN
KONTROLLAMPE
LAMPJE
INDICADOR LUMINOSO
LUZ PILOTO

F PIASTRA PER PIZZA *
PIZZA STONE *
PIERRE A PIZZA *
PIZZA-BACKPLATTE *
PIZZA PLAAT *
PLACA EN PIEDRA PARA PIZZA *
PLACA PARA PIZA *

