 


KENWOOD

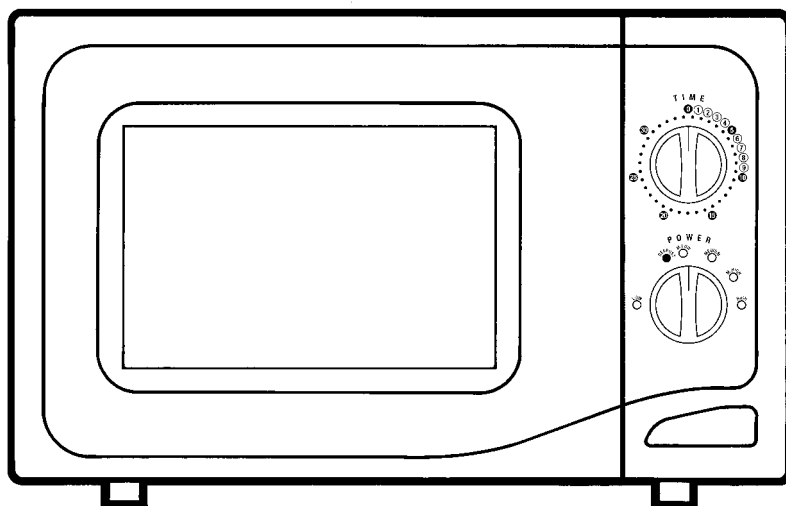

MW305

Please read through these instructions carefully before operating your microwave oven.

ABOUT YOUR KENWOOD MICROWAVE OVEN

Your new Kenwood Microwave Oven is a 700 watt model with a 17 litre capacity. It can be used for defrosting, reheating and cooking.

For your safety and that of those around you, please take special care to read the Important Safeguards listed here:

 
IMPORTANT SAFEGUARDS

- 1 Read all the instructions – it will enable you to make maximum use of your microwave oven.
- 2 **DO NOT** under any circumstances use this appliance for anything other than its intended domestic purpose.
- 3 **DO NOT** use this appliance if there is any visible sign of damage to the supply cord or door seal or if it has been accidentally dropped.
- 4 **DO NOT** immerse this appliance, the supply cord or the plug in water or any other liquid.
- 5 **DO NOT** let the electrical supply cord hang over the edge of a work surface or allow it to touch hot surfaces such as a gas or electric hob.
- 6 The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- 7 Some products such as whole eggs and sealed containers may explode and should not be heated in a microwave oven. Do not cook in containers with restricted openings, such as bottles and small jars, because of the risk of explosion in the oven.
- 8 To reduce the risk of fire in the oven space you should supervise the oven when in use especially when food is heated or cooked in disposable containers of plastic, paper or other combustible materials.
- 9 If smoke is observed, keep the oven door closed and switch off and disconnect the power supply. Leave well alone until the smoke has ceased.
- 10 **DO NOT** operate the oven when it is empty as this could seriously damage the oven.
- 11 **DO NOT** use the oven space for any type of storage.
- 12 **DO NOT** cook foods such as egg yolks, potatoes, chicken livers etc, without first piercing several times with a fork.
- 13 **DO NOT** cook foods directly on the glass tray. Place food in a suitable dish before placing in the oven.
- 14 **DO NOT** use metal pans or dishes with metal handles. **DO NOT** use anything with a metal trim, or covered metal twist ties in the oven.
Before use, check that the utensils are suitable for use in microwave ovens.

IMPORTANT SAFEGUARDS contd.

- 15** Always test the temperature of cooked food especially if you are heating or cooking foods or liquids for babies. Foods and liquids should be allowed to stand for a few minutes and stirred to distribute heat evenly. Remember to stir with a non-metal utensil to prevent the food or liquid suddenly bubbling over the container.
- 16** There are certain foods such as jam, mincemeat and Christmas pudding, which heat up very quickly, and care should be taken to check the temperature before consuming. When heating or cooking certain foods with a high fat or sugar content do not use plastic containers.
- 17** If using a thermometer ensure it is a model specifically for use in microwave ovens.
- 18** **DO NOT** attempt to deep fry food in the microwave.
- 19** Please remember when microwaving liquids that although the container is not hot the liquid inside is, and will release steam or spit as in conventional cooking.

YOUR KENWOOD MICROWAVE

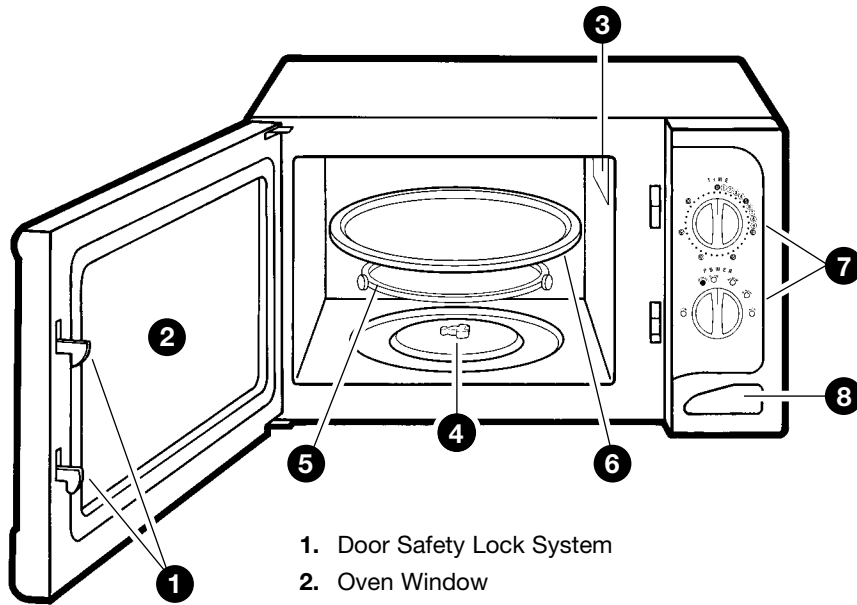

1. Door Safety Lock System
2. Oven Window
3. Oven Air Vent
4. Glass Tray Location Shaft
5. Roller Ring
6. Glass Tray
7. Control Dials
8. Door Release Button

WARNING: Avoiding exposure to excessive microwave energy

DO NOT attempt to operate the oven with the door open as this can result in harmful exposure to microwave energy.

 
 
DO NOT tamper with the safety interlocks that keep the door closed.

DO NOT operate the oven if it is damaged in any way. It is particularly important that the oven door is closed properly and that there is no damage to the:

- i. Door (bent)
- ii. Hinges and Latches (broken or loose)
- iii. Door seals.

The oven should not be adjusted or repaired by anyone other than properly qualified service personnel.

THE CONTROL DIALS

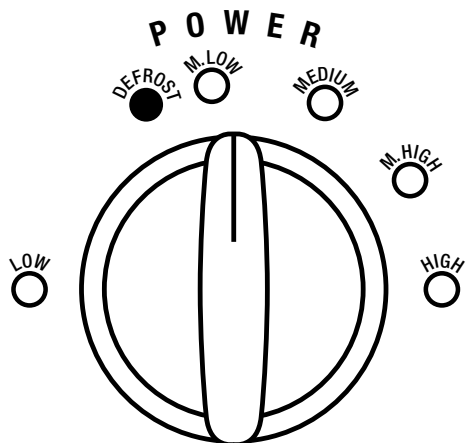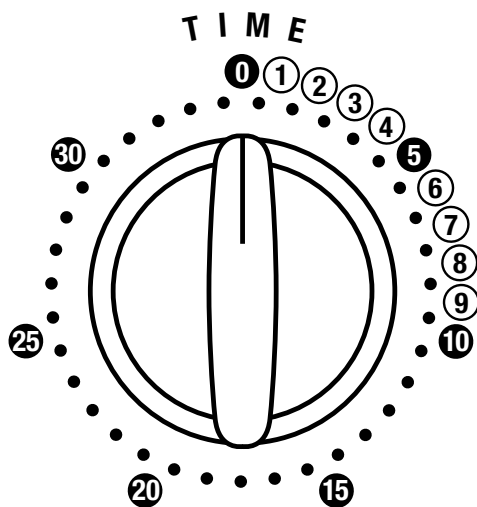

5

HOW TO USE YOUR MICROWAVE OVEN

- Place the food in the oven and close the door. Select your power level.
- Use the TIME control dial to select your cooking time. As soon as you select a time, the oven will automatically start cooking. This can be anything from 1 minute to 30 minutes.

NOTE: When selecting a time of less than 2 minutes, first turn to 2 minutes then turn the dial back towards your chosen time.

CAUTION: ALWAYS RETURN THE TIMER BACK TO THE ZERO POSITION if food is removed from the oven before the set cooking time has elapsed. You must do this by hand. To stop the oven during its cooking cycle, simply pull the door handle to open the door or turn the Timer back to '0'.

DEFROSTING

- Place the food in the oven and close the door.
- Turn the POWER control dial to DEFROST.
- Turn the TIME control dial to the defrost time you require.
- The oven will start defrosting the food immediately.

POWER LEVELS

The oven will always cook food at the maximum level (100%) unless a specific level is selected. You may want the food to cook slowly, in which case you can select a lower power level setting.

CARE & CLEANING

- 1 Turn the oven off and remove the plug from the socket before cleaning.
- 2 Keep the inside of the oven clean by wiping with a damp cloth. If the oven is heavily soiled a mild detergent solution may be used. Do not use harsh or aggressive detergents as this damages the oven. Do not use a knife or any other form of scraper to remove food residues from this oven.
- 3 The outside of the oven can be cleaned with a warm damp cloth.
- 4 Keep the control panel free from too much moisture. Clean it with a soft damp cloth only and do not use detergents or abrasives.

CARE & CLEANING contd.

- 5 If condensation accumulates inside or around the outside of the oven door, wipe it clean with a damp cloth. Condensation is quite normal and forms when moisture is present during cooking.
- 6 Ensure the door seals and adjacent parts are kept clean by wiping with a damp cloth. If the door seal is damaged in any way the oven must not be used until it has been repaired by a Kenwood Authorised Repairer.
- 7 It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water, then rinse and dry thoroughly.
- 8 The roller ring and bottom surface of the oven should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven using a mild detergent and dry thoroughly with a soft cloth. The roller ring may be washed in mild soapy water, rinsed and dried thoroughly. Be sure to replace the roller ring in the correct position.
- 9 Remove odours from your oven by combining a cup of water with the juice and rind of a lemon in a deep microwaveable bowl. Microwave for 5 minutes and then wipe the inside of the oven with a dry cloth.
- 10 Inspect the oven regularly for signs of corrosion – particularly around the door. If you find any signs of corrosion, arrange for the appliance to be serviced.

SERVICE

If the oven or supply cord are damaged in any way, or it is necessary to replace the oven light, or repair the oven, the work must, for safety reasons, be carried out by Kenwood or a Kenwood Authorised Repairer.

Before you call for assistance please check the following:

- 1 If the oven will not work at all and the display does not appear, or disappears - check that the oven is plugged in and switched on. If it is, switch it off and check that the fuse in the plug is OK. If necessary try the appliance in a different socket.
- 2 If the microwave will not function, check to see that the timer is set. Also check that the door is properly shut so that the safety interlocks are fully engaged. If they are not, the oven will not work.

If none of the above actions rectify the situation, contact:

In the UK:

Kenwood on **023 92392333** and ask for Customer Care. Have your model number ready. You will find it on the back of your microwave. Alternatively contact your authorised Kenwood repairer: look in Yellow Pages under 'Electrical Appliance repairs'.

In Eire:

See our advertisement in Golden Pages.

Other Countries:

Contact the shop where you bought the microwave – they will advise you.

UK only guarantee

If your microwave goes wrong within one year from the date of purchase, we will repair or where necessary replace it free of charge provided:

- You have not misused, neglected or damaged it
- It has not been modified (unless by Kenwood)
- It is not second-hand
- It has not been used commercially
- You have not fitted a plug incorrectly
- You supply your receipt to show when you bought it

SPECIFICATION

Power Consumption:230v – 50Hz, 1200W

Output:700W

Outside Dimensions:295mm (H) x 458mm (W) x 355mm (D)

Oven Cavity Dimensions: ...206mm (H) x 300mm (W) x 284mm (D)

Oven Capacity:17 Litres

Cooking Uniformity:Turntable System (ø270)

Net Weight:Approx.13.7kg

Kenwood Limited

New Lane, Havant, Hampshire PO9 2NH

Telephone: +44 (0)23 9247 6000 • Facsimile: +44 (0)23 9239 2423