

BRAUN

CareStyle 7



Type 12870010

Register your product
www.braunhousehold.com/register

CareStyle IS 7143/7144
CareStyle IS 7155/7156

压力式蒸汽电熨斗
(挂烫平熨二合一)



English 6


中文 12




De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

5712812041/IS 7156
UK/CN



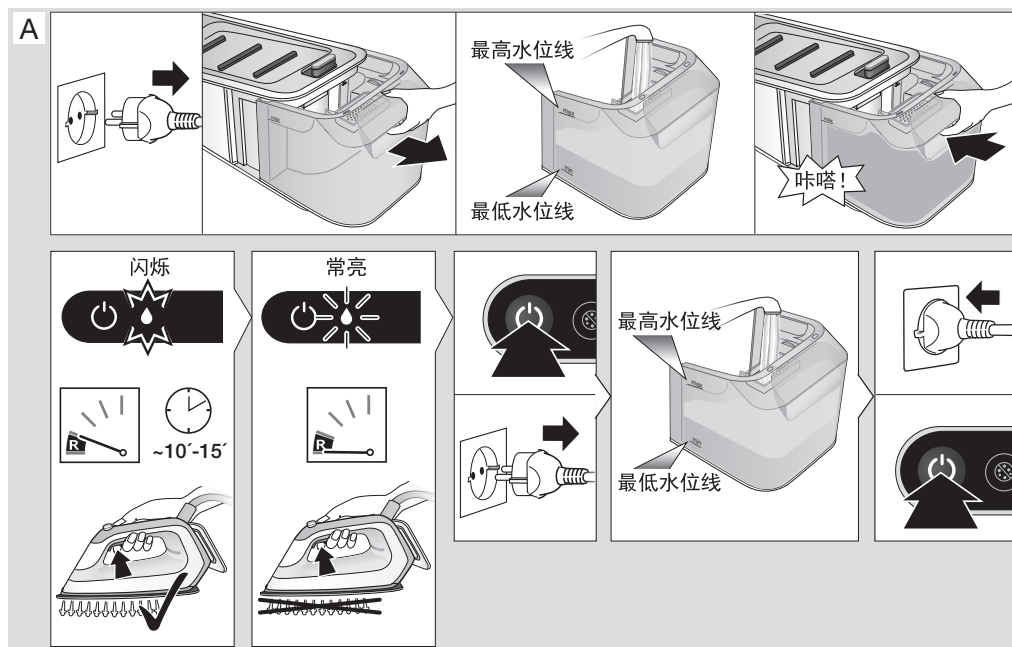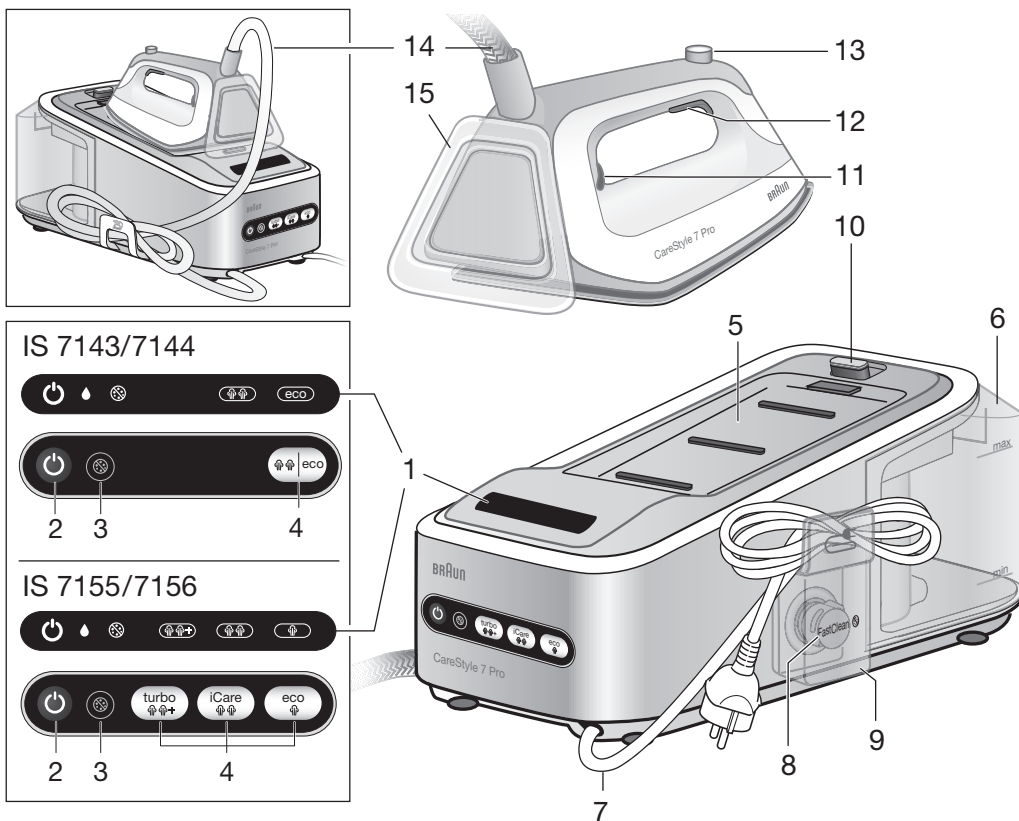

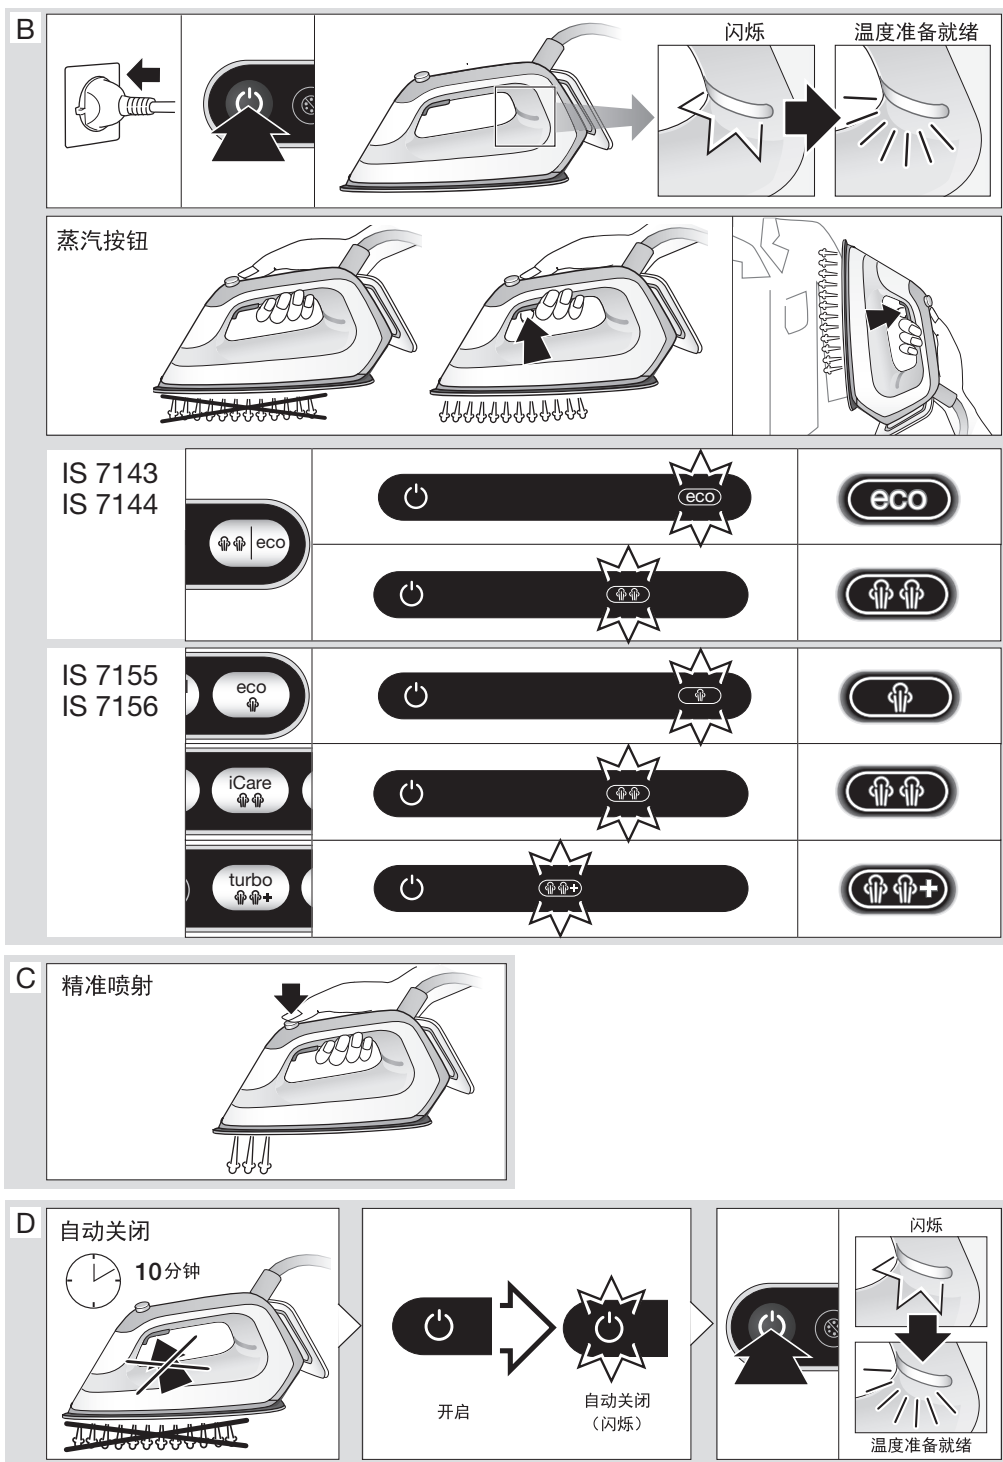

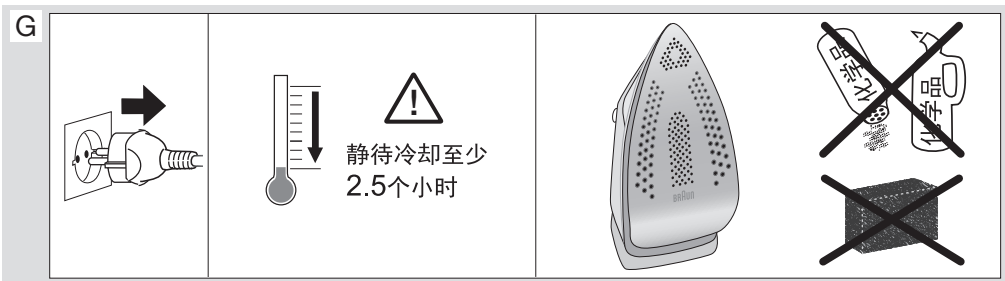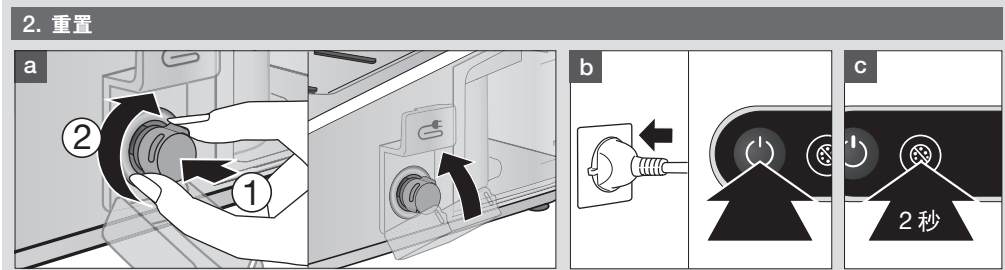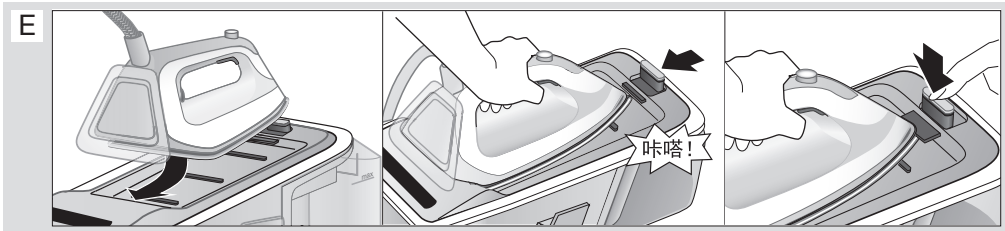


English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy the new Braun appliance.

Before use

Please read instructions carefully and completely before using the appliance.

Caution

-  Caution: Hot surfaces! Electric ironing stations combine high temperatures and hot steam that could lead to burns.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- During operation and cool-down the appliance and its mains cord shall be kept out of reach of children under 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always unplug the station/iron before filling with water.
- The appliance must be used and rested on a stable surface.
- During ironing pauses, place the iron upright on its heel rest or on the iron rest. Ensure that the heel rest is placed on a stable surface.
- The iron must not be left unattended while it is connected to the supply mains.
- Do not open the boiler during ironing.
- During use, the pressurised apertures must not be opened for filling, descaling, rinsing or inspection.
- The appliance must not be used if it has dropped, if there are visible signs of damage or if it is leaking. Regularly check the cords for damages.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- The cords should never come in contact with hot objects, the soleplate, water and sharp edges.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance and that you are using an earthed socket.
- When using an extension cord watch out that it is in good condition, has a plug with an earth connection and corresponds with the power rating of the appliance (16A).
- The soleplate and the iron rest can reach very high temperatures that could lead to burns. Do not touch them.
- Choking hazard. The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

- **Important:**
Keep all packaging (plastic bags, polystyrene foam) away from children.

Description

Steam Generator Iron

- 1 Display
- 2 On/Off button
- 3 Calc clean system button
- 4 Settings (eco, iCare, turbo)
- 5 Iron rest
- 6 Water tank
- 7 Power cord
- 8 Closure
- 9 Transparent cover
- 10 Lock system

Iron

- 11 Temperature control LED
- 12 Steam button
- 13 Precision shot button
- 14 Double cord
- 15 Heel rest

Intended use

The appliance must be used only for ironing garments which are suitable for ironing according to the care label. In addition the appliance can be used for refreshing. Never iron or dampen garments while wearing them.

Before first use

Take the unit out of the carton. Remove all pieces of the packing. Remove any possibly extant labels on the unit (do not remove the rating plate).

When steam is ready for the first time we recommend to iron for a few minutes over a rag to avoid manufacturing residues can dirty your garments.



(A) Filling the water tank

- Make sure that the appliance is switched off and the system is unplugged.
- Remove the water tank (6).
- Fill the water tank with tap water, taking care not to exceed the "max" level but at least up to the mark "min" otherwise the appliance will not be ready to start steam ironing. If you have extremely hard water, we recommend that you use a mixture of 50 % tap water and 50 % distilled water.


- Never use distilled water exclusively. Do not add any additives (e.g. starch). Do not use condensation water from a tumble dryer.
- Insert the water tank.
- Place the appliance on a stable, level surface.

Note: If you use filtering devices or in-house permanent descaler, make absolutely sure the water obtained is neutral ph.

Water reserve function

- When the water level is becoming low, the icon  starts flashing. At this stage it is possible to continue steam ironing for about 10-15 minutes.
- When the icon  turns permanently on, it becomes necessary to refill the tank. At the same time, the temperature control LED (11) is flashing and the icon related to the selected setting (4) turns off.
- To continue steam ironing, refill the water tank (A).

(B) Start into operation

Before start ironing follow the garment care label instructions carefully. Fabrics with this symbol  are not ironable.

- Place the iron on the iron rest (5) or on its heel rest (15), unwind completely the cord, plug in the appliance and press the On/ Off button (2).
- Select the setting (4) most suitable for the garments to be ironed.
- The requested setting can be chosen by pressing the corresponding button (eco, iCare or turbo). To switch from one setting to another press the dedicated button.
- The iron will start to heat up and the temperature control LED (11) on the iron will flash. Once the temperature is reached, the temperature control LED is permanently on.
- The related icon for the setting in the display (1) will start to flash. When steam is ready the icon turns permanently on.

Steam ironing

Press the steam button (12) or the precision shot button (13).

Double trigger

Press the steam button (12) or the precision shot button (13) twice in quick succession within 1 second. There will be a continuous steam emission for a few seconds.

Press the steam button or the precision shot button once again during steam emission to stop the function.

Dry ironing

Iron without pressing the steam button (12) or the precision shot button (13). Please note that after

10 minutes of dry ironing, the iron switches to the auto-off mode.

Vertical steam

The iron can also be used for steaming hanging clothes (B). Hold the iron in a vertical position, tilted slightly forwards. Press repeatedly the steam button (12) or the precision shot button (13) while moving the iron from top to the bottom.


Steam is very hot: never iron or dampen garment while wearing them.

3D soleplate

 
The unique round shape of the 3D soleplate ensures best gliding results on difficult parts (e. g. buttons, pockets etc.)

Settings

CareStyle 7143, 7144

The iCare setting  is automatically chosen when the appliance is switched on for the first time. From 2nd switch on, it will be set to the last setting chosen.

The iCare setting is suggested for garments like wool, polyester and cotton/linen.

The eco setting  is suggested for most delicate garments like synthetics, silk and blended fabrics for which you need less steam. This setting allows less power consumption.

CareStyle 7155, 7156

eco

It is suggested for most delicate garments like synthetics, silk and blended fabrics. This setting allows less power consumption.

iCare

It is suggested for garments like wool, polyester and cotton.

turbo

It is suggested for garments that need more powerful steam, like thick cotton/linen and jeans. This setting can also be used to refresh and hygienize garments that were in the closet before dressing.

Note: Do not use the hygienize function on people and pets.

When the appliance is switched on, it will always be set to the iCare setting, independently on the last setting chosen.

For best results

Before start ironing follow the garment care label instructions carefully.


- Always iron black and dark garments inside out to avoid getting a sheen on the fabrics from the iron.
- When ironing a shirt, start with the more difficult parts like collar, cuff links and sleeves. Then iron the bigger parts like front and back, so you can prevent wrinkling the bigger parts when you are ironing the other parts.
- When you iron a collar, start on its underside and work from the outside (the pointy end) inwards. Turn over and repeat. Fold down the collar and press the edge for a more crisp finish.
- When ironing garments with imprints, applications or even more sensitive fabric parts (i.e. embroidery), turn them inside out and, if necessary, lay a cotton cloth between the iron and the fabric. This way you avoid damage and get the volume of fabric designs that are not to be ironed flat.
- When ironing woolen garments, we recommend pressing sequentially the precision shot button (13) without placing the iron on the garment. This will avoid shiny effects on the fabric.
- In order to prevent new creases while ironing with steam make sure that the garment shows no residual moisture before going on ironing other parts of it.

(C) Precision shot

- Press the precision shot button (13) completely down.
- Steam will come out of the tip area of the soleplate only.
- To stop this function release the button.
- If you do not press it down completely, some steam may also come out from the rear steam holes in the soleplate.

(D) Iron auto-off

This function is activated if after 10 minutes there has been no steam emission.

- When the iron is in the auto-off mode, the icon  is flashing and the temperature control LED (11) is off. The iron will turn off to reduce power consumption.
- To turn the iron on again, the On/Off button (2) has to be pressed. Before start ironing again wait until the temperature control LED and the related icon for the setting in the display (1) are permanently on.

After ironing / storage

- Press the On/Off button (2) to turn off the appliance.
- Unplug and let the appliance cool down before storing.
- Empty the water tank.
- Lock the iron.

(E) Lock system

The appliance is equipped with a lock system for convenient transportation and easy storage. It is possible to lift and carry the appliance on the handle of the locked iron.

Note: Before transportation make sure the iron is properly locked and the water tank is empty.

- Place the soleplate into the recess on the iron mat.
- To lock the iron push the slider (10) (easy lock) toward the iron until you hear a "click".
- To unlock the iron push down the button on the slider (easy lock). The iron will be released.


(F) Descaling

Never open or touch the closure (8) when the appliance is hot and/or plugged in.

To maintain optimum performance, the system needs to be decalcified after every 15 litres of water consumption (about 8 complete refills). Do not use any chemicals, additives or descaler to rinse the boiler.

The icon  is flashing.

- a. Switch off (2) and unplug the appliance. Unlock the iron and remove it from the iron rest. Wait until the appliance has cooled down (minimum 2.5 hours).
- b. Empty the water tank.
- c. Place the appliance on the edge of the sink and open the transparent cover (9).
- d. Turn the closure (8) anticlockwise to open it.
- e. Let the water flow into the sink.
- f. Turn the appliance slightly in an inclined position to empty the boiler completely.
- g. When no more water comes out of the appliance screw the closure to close the boiler and close the transparent cover.
- h. After having finished the descaling procedure, plug in and switch on.
- i. Press the calc clean system button (3) for 2 seconds to reset.

If the appliance is switched off without descaling, the icon  will start to flash again when it is next switched on.

Note: Because of the different water composition by using an installed in-house permanent descaler, it is recommended to descale the system after every 4 complete refills or at least once per month. Please note that in this case the icon for descaling will not automatically start flashing.

(G) Care and Cleaning


- Before cleaning, always make sure that the appliance is switched off, unplugged and has cooled down completely.
- To clean the soleplate it is suggested to use a damp cloth.
- To clean the soft material on the handle and the high glossy surface use a damp cloth only.
- Never use chemicals, vinegar or scouring pads (eg. sponges with coarse nylon fabrics etc).

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Troubleshooting guide

PROBLEM	CAUSE	REMEDY
The appliance does not switch on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the On/Off button.
Steam comes out under the base unit.	The “max” pressure safety system has opened.	Turn the appliance off immediately and contact an authorised Braun Customer Service.
There are some water drops from the holes in the bottom of the soleplate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water tank.	Never pour products into the water tank. Clean the soleplate with a damp cloth and rinse the boiler.
The first time the appliance is turned on, you notice smoke or smell.	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times. If the smoke/smell is still present after turning off the appliance, contact an authorised Braun Customer Service.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the boiler.	This is normal and no action is needed.
The appliance emits a continuous noise associated with vibrations.	System error.	Unplug the appliance from the mains and contact an authorised Braun Customer Service.

The closure is difficult to unscrew.	Lime scale has made the closure difficult to open.	Turn the cap forcefully. To avoid the problem, rinse system frequently.
	The boiler is still under pressure.	Never open the closure if the boiler is still under pressure or hot. Wait at least 2.5 hours before opening the closure.
After refilling the water tank, the light  does not reset.	The water float does not work appropriately.	Empty the water tank, rinse out and refill.
	The water tank is not positioned correctly.	Position the water tank correctly.
All LEDs are flashing.	System error.	Unplug the appliance, plug it in again and press On/Off button. If this problem is still present, turn the appliance off immediately, unplug and contact an authorised Braun Customer Service.
Steam icon is permanently on, but there is no steam emission from the soleplate.	Water tank float is locked or the water tank is not correctly inserted.	Turn off and unplug the appliance. Remove and empty the water tank, rinse out and refill. Insert the water tank. Switch on the appliance and wait until the device is ready to use. Press the steam button and wait until steam comes out. Keep the steam button pressed for 10 seconds of steam emission then release the steam button.
Steam or water comes out from the closure.	The closure is not tightened properly.	Switch off the appliance, unplug and let it cool down (for at least 2,5 hours). Unscrew the closure and screw it back on the appliance properly. Note: Some water can escape when you unscrew the closure
The double cord gets hot during use.	This is normal. It is caused due to the steam passing through the cord during ironing.	Place the double cord on the opposite side so that you cannot touch the cord during ironing.

中文

我们的产品经过精心设计，功能完备，质量优异，满足高标准要求。

希望您喜欢这款全新的博朗产品。

用前须知

使用产品前，请仔细阅读使用说明书。

注意事项



注意：产品表面温度很高！压力式蒸汽熨斗会产生较高温度及大量蒸汽，请务必小心，谨防烫伤。

• 大于8岁的儿童或有生理、心理和感官障碍或缺乏本产品操作经验及知识的人士请在有人监管或指导的情况下安全使用本产品，并确保已了解相关操作风险。

• 请勿让儿童把玩本产品。

• 请勿让儿童在无人监管的情况下清洁、维护本产品。

• 在使用和冷却本机过程中，本产品及其主电源线应置于8岁以下儿童接触不到的地方。

• 电源线损坏时，为了避免危险，请务必由制造商、服务代理商或经授权的专业服务人员更换。

• 在给水箱注水前，必须将本产品的电源线插头从插座上拔掉。

• 本产品必须在稳定的表面上使用和搁置。

• 当把电熨斗放置在其底座上时，应确保底座已放在稳定的表面上。

• 在熨斗接通电源期间，使用者不得离开。

• 熨烫过程中，请勿打开加热器。

• 使用过程中，请勿打开任何盖子进行注水、除水垢、清洗或检查。

• 如果本产品不慎掉落、出现明显的损坏痕迹或出现漏水现象时，切勿继续使用。请定期检查电源线是否有损坏。

• 切勿将熨斗或熨斗底座浸泡在水或其他液体中。

• 本产品仅限于家用，适合熨烫普通家庭量的衣物。

• 初次使用前请清洗所有部件，或按需要清洗。具体清洗方法参照《维护和清洗》部分。

• 电源线不得与高温物体、熨斗底板、水或锐利边缘接触。

• 产品通电之前，请先确认当地供电电压与本产品底部标签所示的额定电压是否一致，并确认是否使用的是接地插座。

• 使用拖线板时，请确保延长电线无任何破损，并使用带接地线且最小额定电流为10A的插座。

• 熨斗底板和底座可能达到很高的温度，从而导致烫伤。请勿触碰。

• 窒息危险。本产品可能含有较小的零部件。清洗和维护期间可能需要拆卸其中的一些小零件。请小心装卸，把小零件置于儿童够不到的地方。

• 重要：

请将所有包装材料（塑料袋、泡沫塑料）置于儿童接触不到的位置。

产品描述

蒸汽发生器

- 1 显示屏
- 2 开/关按钮
- 3 除垢提示按钮

4 模式设置(eco节能、iCare恒温、turbo强力)

*turbo强力模式仅IS7155/IS7156型号适用。

5 隔热底座

6 水箱

7 电源线

8 清洁阀门

9 透明罩盖

10 安全锁扣

熨斗

11 温控灯

12 蒸汽按钮

13 精准喷射按钮

14 双芯软管线

15 熨斗搁架

产品用途

本产品只适用于熨烫衣物须知上标明适合熨烫的衣物。此外，本产品还可用于翻新衣物。切勿在衣服穿着在身的时候进行熨烫或加湿。

首次使用前

将本产品从纸箱内取出。去除所有多余的包装材料。

首次蒸汽准备就绪时，建议先在旧衣物上熨烫几分钟，以免因产品在生产中可能留下的残留物而弄脏您的衣物。

(A) 往水箱注水

- 注水前，请确保本产品已关闭且已拔掉电源线。
- 移出水箱（6）。
- 往水箱注入自来水时，请注意不要超过最高水位线“max”标记处，也不要低于最低水

位线“min”标记处，否则本产品将无法进行蒸汽熨烫。如果您所在的区域水质非常硬，我们建议您混合50%的自来水和50%的蒸馏水来使用。

 
•切勿单独使用蒸馏水。切勿使用任何添加剂（例如浆粉）。切勿使用从滚筒干衣机里回收的冷凝水。


•放回水箱。

•将本产品放置在稳定、平坦的表面上使用。

备注：如果您使用水过滤器或家装净水系统，请务必确保其净化的水pH值为中性。

缺水指示灯


•当水位线处于低水位时，图标  开始闪烁。此时，可以继续进行的蒸汽熨烫大约10–15分钟。

•当图标  保持常亮的状态时，必须重新注满水箱。

此时，温控灯（11）闪烁，选中模式的指示灯（4）熄灭。

•如需继续进行蒸汽熨烫，请重新注满水箱(图示A)

(B) 开始熨烫

开始熨烫之前，请仔细参照衣物护理标签上的说明操作。带有该符号  的织物表示不可熨烫。

•将熨斗置于隔热底座（5）或熨斗搁架(15)上，完全解开电源线，接通电源，按下开/关按钮（2）。

•选择最适合该衣物熨烫的模式（4）。

•按下相应模式按钮（eco节能、iCare恒温、turbo强力）即可选择所需设置。如需切换设置，请按下其他模式按钮。

•熨斗开始加热，在此期间，熨斗上的温控灯（11）开始闪烁。一旦达到所需温度，温控灯常亮。

•显示屏（1）中所选模式的图标开始闪烁。蒸汽量准备完毕时，图标常亮。

蒸汽熨烫功能

按下蒸汽按钮(12)或精准喷射按钮(13)。

双重触发

在1秒钟内快速连续按下蒸汽按钮（12）或精准喷射按钮（13）两次。按压后蒸汽会持续释放几秒钟。

再按一次蒸汽按钮或精准喷射按钮即可结束此功能。

干烫功能

无需按压蒸汽按钮(12)或精准喷射按钮(13)。请注意：干烫10分钟后，熨斗会转入自动关闭模式。

垂直蒸汽喷射

该产品还可用于挂烫衣物（图示B）。手握熨斗，使其保持垂直，稍微向前倾斜。反复按压蒸汽按钮(12)或精准喷射按钮（13），同时从上至下移动熨斗。


蒸汽温度非常高：切勿在衣服穿着在身的時候熨烫或加湿衣服。

3D熨斗底板


特别设计的圆形3D熨斗底板带来顺滑熨烫体验，即便是纽扣、口袋等地方也能一烫而过，轻松省力。

模式设置


CareStyle 7143、7144

首次启动本产品时， 将自动选择iCare恒温模式。从第二次启动开始，将自动选择上一次的模式设置。

对于羊毛、聚酯纤维和棉服/亚麻制品等衣物，建议选择iCare恒温模式。

对于仅需少量蒸汽熨烫的合成面料、丝质和混纺布等精致织物，建议选择  节能模式。该模式的能耗更低。

CareStyle 7155、7156

eco节能模式 

对于材质为合成面料、丝质和混纺布等精致织物，建议选择节能模式。该设置的能耗更低。

iCare 恒温模式 

对于羊毛、聚酯纤维和棉服等衣物，建议选择iCare模式。

turbo强力模式 

如果衣物（如厚棉衣/亚麻衣物和牛仔裤）需要更强劲有力的蒸汽进行熨烫，建议选择强力模式。该模式还可以用于翻新和消毒置于衣柜中的衣物。

备注：切勿在人和宠物身上使用消毒功能。启动本产品时，模式都将切换到iCare恒温模式，而非恢复至上一次所选择的模式。

为获得最佳效果

开始熨烫之前，请仔细阅读衣物护理标签上的说明指引。

•熨烫黑色和深色衣物时，务必将其里面翻到外面进行熨烫，以免熨斗将织物表面烫出一层光泽。

•熨烫衬衫时，请先熨烫衣领、袖扣和袖子等较难熨烫部位。然后再熨烫前面和后面等大面积部位，这样就可以防止在熨烫其他部位时弄皱大面积部位。

•熨烫衣领时，请先熨烫反面，并由外部（领尖）向内熨烫。翻过来，重复。随后折叠衣领，并按压边缘熨烫，使其更挺括。

•熨烫带有印花、立体剪裁设计（如刺绣）的衣物时，将其里面翻到外面进行熨烫，如有必要，在熨斗和织物之间铺一块棉布，这样可以避免织物损伤，并保证有设计感的面料不会被熨平。

•熨烫羊毛衣物时，建议按压精准喷射按钮（13），无需将熨斗置于衣物上，可避免磨损织物。

 
•为了防止在使用蒸汽熨烫衣物期间产生新的折痕，请确保熨好的部位没有多余水汽，随后再熨烫其他部位。

(C) 精准喷射

- 将精准喷射按钮（13）按到底。
- 蒸汽仅从底板的顶部尖端区域喷射出来。
- 释放该按钮即可结束该功能。
- 如果不将按钮按到底，部分蒸汽可能会从底板上的后部蒸汽孔中喷射出来。

(D) 自动关闭功能

如果10分钟未喷射蒸汽，该功能将会启用。

- 当本产品进入自动关闭模式时，图标  开始闪烁，且温控灯（11）熄灭。本产品将自

动关闭以节省能耗。

- 如果想重新启动本产品，必须按压开/关按钮（2）。请耐心等待温控灯和显示屏（1）中所选模式图标常亮后，再开始进行熨烫。

熨烫结束/收纳

- 按下开/关按钮（2）关闭本产品。
- 拔掉插头，待本产品冷却后再将其收纳起来。
- 每次用完后请排空水箱。
- 锁好本产品并放置在避光处。

(E) 锁扣系统

本产品配备了一个安全锁扣，以便于运输和收纳。锁好本产品后，可拎起熨斗手柄来搬运本产品。

注意：搬运本产品之前，确保本产品已锁定，水箱已排空。

- 将熨斗底板置于隔热底座的凹陷处。
- 如果想要锁定本产品，将安全扣锁（10）推向熨斗，直至听到“咔嗒”一声。
- 如果想要解锁本产品，按下安全扣锁上的按钮即可释放本产品。

(F) 除垢


当本产品发烫和/或仍处于接通电源状态时，切勿打开或触碰清洁阀门（8）。

为保持产品最佳性能，每用完15公升水（大约注满水箱8次）需除水垢一次。

切勿使用任何化学剂、添加剂或除垢剂冲洗加热器。

图标开始闪烁。

- a.按开关(2)关闭本产品，并拔掉插头。解锁熨斗，并将其从隔热底座上取下垂直放置在稳定的表面上。等待本产品完全冷却（至少2.5小时）
- b.排空水箱。
- c.将本产品置于水槽边，并打开透明罩盖(9)。
- d.逆时针旋转清洁阀门（8），将其打开。
- e.让水流入水槽。
- f.稍微倾斜本产品，以完全排空加热器中的水。
- g.当没有水从本产品中流出时，旋紧清洁阀门并盖上透明罩盖。
- h.完成除垢步骤后，插上插头，启动本产品。
- i.按下除钙提示按钮（3）2秒钟，以重置本产品。

如果未进行除垢操作就关闭本产品，下次启动时图标将再次闪烁。

注意：如您家中安装了净水装置导致水质变化，建议每注满水箱4次后对系统进行一次除垢操作，或至少每个月除垢一次。请注意，在这种情况下，除垢图标将不会自动开始闪烁。

(G) 维护和清洗

- 清洗前，始终确保本产品处于关机状态，插头已拔掉，而且本产品已完全冷却。
- 建议使用湿布清洁熨斗底板。
- 只能使用湿布清洁手柄上的软质材料和高光材质表面。
- 切勿使用化学品、醋或百洁布（例如，带有粗尼龙织物的海绵等）。

故障排除指南

问 题	原 因	修 复
本产品无法启动。	未插电。	确保本产品插电并按下开/关按钮。
蒸汽从底座冒出。	蒸汽压力安全阀被启动。	立即关闭本产品，并联系博朗官方售后服务中心。
熨斗底板底部的孔漏水。	由于首次使用蒸汽熨烫功能，或有段时间未使用蒸汽熨烫功能，蒸汽冷凝后残留在软管中。	远离底板，并按下蒸汽释放按钮数次，可将蒸汽管内冷凝水排出。
熨斗底板渗出棕色液体。	水箱或蒸汽发生器里被灌入水软化剂或添加剂。	切勿将软化剂和添加剂注入水箱中。使用湿布擦拭熨斗底板，并冲洗加热器。
首次使用本产品时，冒烟或有异味。	产品的某些部位使用了密封剂/润滑剂，这些密封剂/润滑剂在熨斗首次加热时会蒸发一些水分。	这属于正常现象，使用数次后，这种现象将停止。如果关掉本产品后仍然冒烟/有异味，请联系博朗官方售后服务中心。
本产品发出间歇性噪音和抖动。	加热器在抽水，准备产生蒸汽。	这属于正常现象，无需采取任何措施。

故障排除指南

问 题	原 因	修 复
本产品发出持续噪音和抖动。	系统错误。	拔掉电源，并联系博朗官方售后服务中心。
清洁阀门不易旋开。	水垢较厚。	用力旋开清洁阀门。为避免再次发生这种情况，请定期进行除垢。
	加热器内仍存在压力。	如果加热器内仍存在压力或发烫，切勿旋开清洁阀门。旋开清洁阀门之前，请耐心等待至少2.5个小时。
重新注满水箱后，指示灯未熄灭。	水位浮子未正常工作。	排空水箱，冲洗干净，再注满水。
	没有正确放置水箱。	正确放置水箱。
所有指示灯都在闪烁。	系统错误。	拔掉插头，再插上插头，按下开/关按钮。如果问题仍未解决，立即关闭本产品，拔掉插头，并联系博朗官方售后服务中心。
蒸汽图标常亮，但是熨斗底板未释放蒸汽。	水箱浮子被锁定，或未正确插入水箱。	关闭本产品，并拔掉插头。取出并排空水箱，冲洗干净，再注满水。插入水箱。 启动本产品，并耐心等待直至本产品准备就绪。按下蒸汽按钮，并耐心等待直至释放出蒸汽。 按住蒸汽按钮10秒，然后释放该按钮。
蒸汽或水从清洁阀门中漏出。	清洁阀门未旋紧。	关闭本产品，拔掉插头，让其冷却（至少2.5个小时）。 旋开清洁阀门，后将其对准并旋紧回本机。备注：当旋开清洁阀门时，会有水溢出。
使用本产品期间，双芯软管线会发烫。	这属于正常现象。这是因为在熨烫期间，蒸汽会流经双芯软管线。	将双芯软管线置于使用本机的反方向，这样在熨烫期间就不会触碰到它。

保修

我们为产品提供为期两年的保修，保修期从购买日开始计算。

在保修期内对于产品因生产过程引起的各种瑕疵，我们会视情况更换零件或整个产品。

申请保修必须将本产品和能够证明购买日期的证据（购货发票）一起交给授权的Braun维修站，本产品附有一张授权维修站名单。



请确认已将购货发票放置在安全的地方。

如果需要保修或维修，请与当地的维修站或就近的维修站联系。

客服热线：400 827 1668



上述保修不包括以下内容：

- 由于使用不当而造成的产品损坏，如使用错误的电流、电压，将产品插入不合格的插座，或者人为损坏等。
- 正常使用引起的产品老化、磨损，但对产品的使用功能及价值影响不大。
- 按行业惯例定义的易损、易耗件。
- 如果产品经过未经授权的人员修理，或产品使用了非本公司（Braun）的零件，保修期立即终止。
- 非家庭使用（如工业、商业用）引起的损坏。
- 在保修期内提供的服务并不影响保修期按时结束，保修期中替换的零件或整机的保修服务于本产品的保修期同时终止。
- 除非确有法律规定，本公司不对其他任何要求负责。同供货商的销售合同中规定的各项权利不受此保修的影响。

名称和产品中有害物质的含量

Name and content of hazardous substances in products

组件名称 Components Name	有害物质 Hazardous substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr (VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
印刷电路板 组装 Printed Circuit Board Assembly	×	○	○	○	○	○
电机、阀门 Motors, valves	×	○	○	○	○	○
金属零件 Metal parts	×	○	×	○	○	○

本表格依据SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

○: The content of such hazardous substance in all homogeneous material of such components is below the limit required by GB/T 26572.

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制，暂时无法实现替代或减量化，正常使用条件下不会对使用者造成任何健康影响。

×: The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable to achieve replacement or reduction. It will not cause any health issue under normal conditions of use.

