



INSTALLATION and SERVICE INSTRUCTIONS
USE and CARE INSTRUCTIONS

BUILT-IN GAS HOB

Model: **DEGH90W**



distributed by
DèLonghi
Pty Ltd

Dear Customer,

Thank you for having purchased and given your preference to our product.

The safety precautions and recommendations reported below are for your own safety and that of others. They will also provide a means by which to make full use of the features offered by your appliance.

Please keep this booklet in a safe place. It may be useful in future, either to yourself or to others in the event that doubts should arise relating to its operation.

This appliance must be used only for the task it has explicitly been designed for, that is for cooking foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.

The manufacturer declines all responsibility in the event of damage caused by improper, incorrect or illogical use of the appliance or by faulty installation.

PRODUCT LABEL



IMPORTANT PRECAUTIONS AND RECOMMENDATIONS FOR USE OF ELECTRICAL APPLIANCES

Use of any electrical appliance implies the necessity to follow a series of fundamental rules. In particular:

- Never touch the appliance with wet hands or feet;
- do not operate the appliance barefooted;
- do not allow children or other incapable people to use the appliance without supervision.

The manufacturer cannot be held responsible for any damages caused by improper, incorrect or illogical use of the appliance.

IMPORTANT PRECAUTIONS AND RECOMMENDATIONS

After having unpacked the appliance, check to ensure that it is not damaged. In case of doubt, do not use it and consult your supplier or a professionally qualified technician.

Packing elements (i.e. plastic bags, polystyrene foam, nails, packing straps, etc.) should not be left around within easy reach of children, as these may cause serious injuries.


- Do not attempt to modify the technical characteristics of the appliance as this may become dangerous to use.
- Do not carry out cleaning or maintenance operations on the appliance without having previously disconnected it from the electric power supply.
- After use, ensure that the knobs are in off position.
- Do not allow children or other incapable people to use the appliance without supervision.
- During and after use of the hob, certain parts will become very hot. Do not touch hot parts.
- Keep children away from the appliance when it is in use.
- Some appliances are supplied with a protective film on steel and aluminium parts. This film must be removed before using the appliance.
- The manufacturer declines all liability for injury to persons or damage to property caused by incorrect or improper use of the appliance.

INSTALLATION

CAUTION:

- This appliance must be installed in accordance with these installation instructions, local gas fitting regulations, municipal building codes, water supply regulations, electrical wiring regulations, AS5601 / NZS5261 - Gas Installations and any other relevant statutory regulations.
- This appliance shall only be serviced by authorized personnel.
- This appliance is to be installed only by an authorised person.
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury or damage.
- Always disconnect the appliance from mains power supply before carrying out any maintenance operations or repairs.
- In the room where the cooker is installed, there must be enough air to allow the gas to burn correctly, according to the current local regulations.

Figure 1

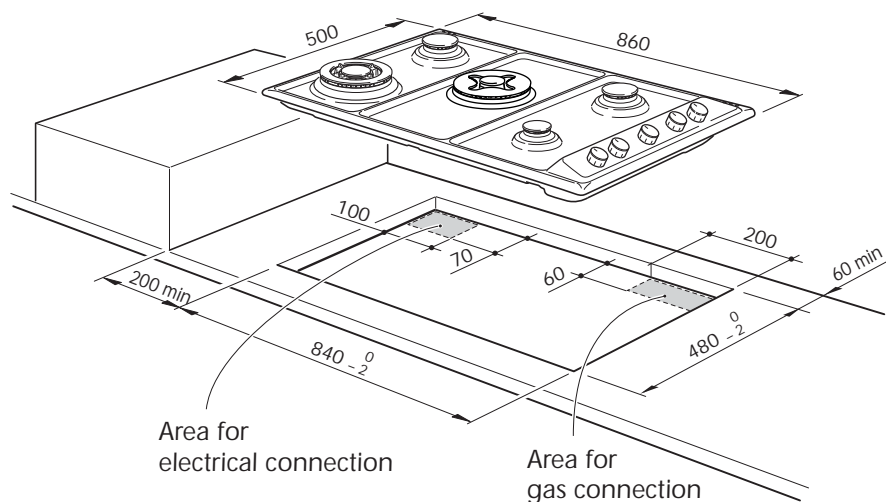

DIMENSIONS: (Note: Also refer to Figure 1 above)

General Dimensions	
Width	860 mm
Depth	500 mm
Depth Below Mounting Surface	30 mm
Cut-out Dimensions	
Width	840 mm $-0/2$
Depth	480 mm $-0/2$

This cooktop has been designed and constructed in accordance with the following codes and specifications:

AGA101 (AS 4551) Approval Requirements for Domestic Gas cooking appliances

AS/NZS 60335-1 General Requirements for Domestic electrical appliances

AS/NZS 60335-2-6 Particular Requirements for Domestic electrical cooking appliances

AS/NSZ 1044 Electromagnetic Compatibility Requirements.


Important note:

This appliance shall **not** be used as a space heater, especially if installed in marine craft or caravans.

CLEARANCES:

Installation clearances and protection of combustible surfaces shall comply with the current local regulations e.g. **AS5601 / NZS5261** - Gas Installations code.


Figure 2

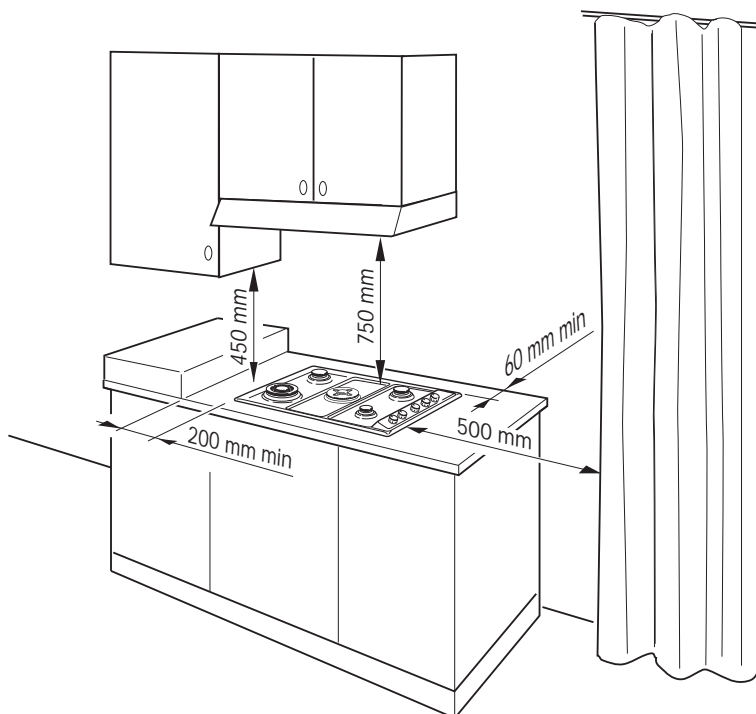

The installation shall comply with the dimensions in Figures 1 and 2, bearing in mind that:

- A **minimum clearance of 20 mm** has to be kept between the bottom of the cooking hob and the top of an appliance or a shelf. To ensure this clearance mount the spacers, supplied with the appliance, as shown in the figure below.
- A **partition** between the base of the hob and the cupboard below **should be fitted 100 mm below the workbench** surface if the cupboard is to be used for storage.
- **Overhead clearances** - In no case shall the clearance between the highest part of the hob and a range hood be less than 600 mm, or for an overhead exhaust fan, 750 mm. Any other downward facing combustible surface less than 600 mm above the highest part of the hob shall be protected for the full width and depth of the cooking surface area in accordance with local regulations in force. However, in no case shall this clearance to any surface be less than 450 mm.
- **Side clearances** - Where the dimension from the periphery of the nearest burner to any vertical combustible surface is less than 200 mm, the surface shall be protected in accordance with local regulations in force to a height of not less than 150 mm above the hob for the full dimension (width or depth) of the cooking surface area.
Where the dimensions from the periphery of the nearest burner to any vertical combustible surface is less than 200 mm, the horizontal surface shall be greater than 10mm below the surface of the hob, or the horizontal surface requirement above.
- **Protection of combustible surfaces** - Local regulations in force specify that where required protection shall ensure that the surface temperature of the combustible surface does not exceed 65 °C above ambient. The fixing of 5 mm thick ceramic tiles to the surface or attaching fire resistant material to the surface and covering with sheet metal with minimum thickness of 0.4 mm should be satisfactory.


Figure 3

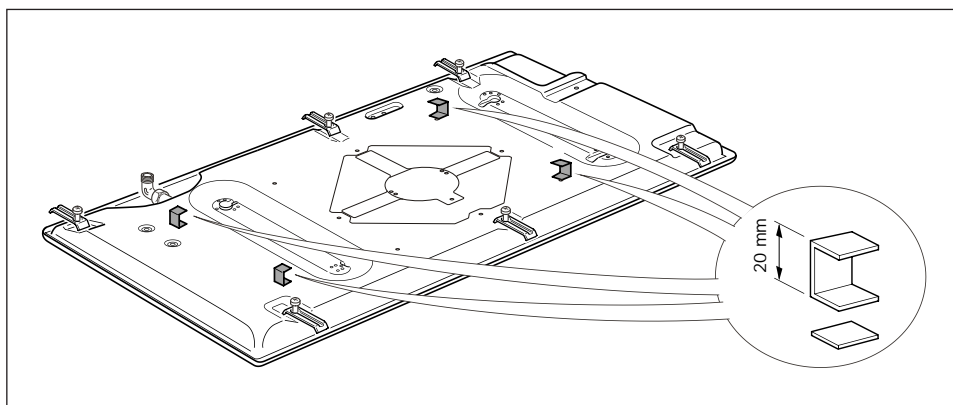

INSTALLATION (Refer to Figure 4):

1. Spread out the gasket "C" over the workbench at the edge of the cut out taking care to overlap the gasket at the corners.
2. Slot in the cooking hob into the cut out of the workbench and locate it correctly.
3. Adjust the clamps "A" and tighten the screws "B" until the hob is firmly secured.
4. Using a sharp tool, trim any excess gasket which protrudes from the edge of the hob. Take care not to damage the countertop.

Figure 4

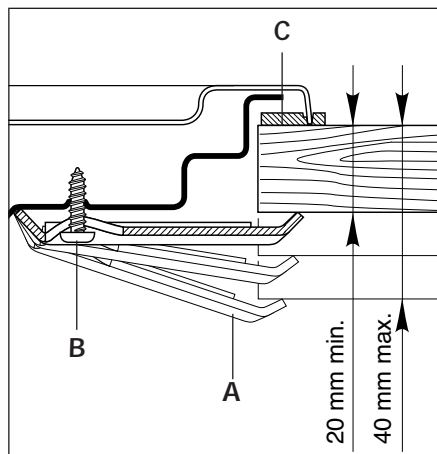

GAS SUPPLY:

- The connection must be executed by an authorised person according to the relevant standards.
- Before connecting the appliance to the gas main, mount the brass conical adaptor onto the gas inlet pipe, upon which the gasket has been placed (figures 5a-5b). Conical adaptor and gasket are supplied with the appliance (packed with conversion kit for use with Natural gas or Universal LPG).
- This appliance is suitable for use with Natural Gas or Universal LPG. (Check the "gas type" sticker attached to the appliance).
- For Natural Gas models the gas supply is connected to the pressure regulator which is supplied with the appliance (fig. 5a). Adjust the regulator to obtain a test point pressure of 1 kPa with the dual (DB) burner operating at the maximum (inside and outside flames in simultaneously at the maximum).
- For Universal LPG models the gas supply is connected to the test point adaptor which is supplied with the appliance (fig. 5b) and ensure that the supply pressure is regulated to 2.75 kPa.
- Do NOT force the "elbow" rotation prior to loosening nut.
- Do NOT over tighten the nut at the "elbow".

Figure 5a


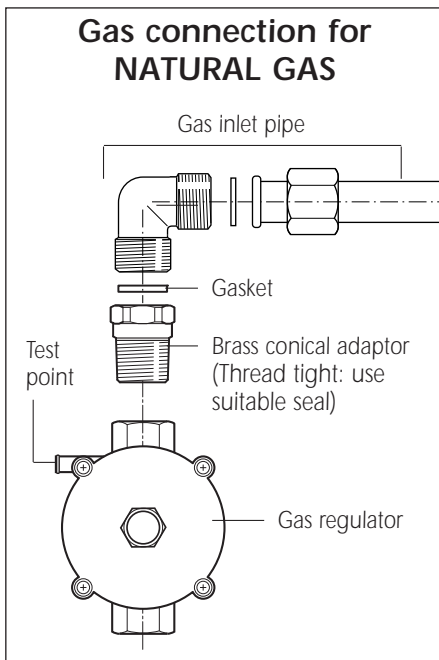


Figure 5b

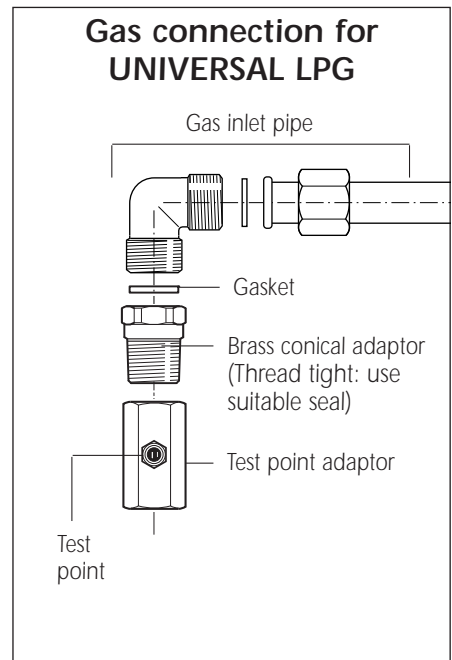

1. After connecting the gas supply, check the piping and connections for leaks using a soap and water solution. The presence of bubbles indicates a leak, tighten or replace connections as appropriate.

Warning: Do not use any naked flame to check for leaks.

2. The operation of the appliance **MUST** be tested before leaving.
3. Adjust the test point pressure or supply pressure to the value which is appropriate for the gas type.
4. Turn on the appliance gas controls and light each burner. Check for a well defined blue flame without any yellow tipping. If any abnormality is evident then check that the burner cap is located properly and the injector nipple is aligned correctly.
5. Check the minimum burner setting by quickly rotating the gas control knob from the maximum to the minimum position, the flame must not go out. If adjustment is required carry out the "minimum burner setting adjustment" procedure described below.
6. If satisfactory performance cannot be obtained, the installer shall check the installation and notify the local gas supply authority for a gas supply problem, or if it is an appliance problem, our Customer Service Centre should be called to obtain the nearest authorized Delonghi Service Agent.
7. Where the appliance data plate cannot be easily read with the appliance in the installed position the duplicate data plate must be attached to adjacent surface and the duplicate Natural gas / ULPG conversion label should also be included where a Natural gas / ULPG conversion has been completed.

INSTALLATION WITH A FLEXIBLE HOSE ASSEMBLY

- If this appliance has to be installed with a hose assembly, the installer shall refer to the network operator or gas supplier for confirmation of the gas type, if in doubt.
- When used with a flexible hose, the connector on the wall should be between 800 mm to 850 mm above the floor and in the region outside the width of the appliance to a distance of 250 mm.
The supply connection point shall be accessible with the appliance installed.
- Flexible hose assemblies should be AS/NZS 1869 Class B or Class D certified. The thread connection shall be Rp 1/2" (ISO 7-1) male.
- **IMPORTANT WARNING:** After connection the installer must check that the hose is not kinked, subjected to abrasion or permanently deformed.
The installer must check also that the hose is not near (or in contact) with any hot surfaces e.g. base of metal hotplate, underbench oven etc.
- The hose assembly shall be as short as practicable and comply with relevant AS5601 / NZS5261 requirements.
- **IMPORTANT WARNING:** The installer shall ensure the hose assembly is restrained from accidental contact with the flue outlet of an underbench oven.

TABLE FOR THE CHOICE OF THE INJECTORS

		Natural gas		Universal LPG	
Test Point Pressure [kPa]		1.0		2.75	
BURNER		Injector Orifice Dia.	Gas Consumption	Injector Orifice Dia.	Gas Consumption
		[mm]	[MJ/h]	[mm]	[MJ/h]
Auxiliary (A)		0.85	3.60	0.53	3.60
Semi-rapid (SR)		1.12	6.30	0.70	6.30
Triple-ring (TR)		1.60	12.70	0.95	11.90
Dual (DB)	Inner crown	0.90 (no.1 central)	3.90 (*)	0.50 (no.1 central)	3.10 (*)
	Outer crowns	1.20 (no.2 outer)	15.90 (#)	0.66 (no.2 outer)	14.10 (#)

(*) Power calculated with only inner crown operating.

(#) Power calculated with inner and outer crowns operating.

CONVERSION PROCEDURE (to convert to Natural gas or to ULPG) REPLACING THE INJECTORS

The conversion procedure must be carried out only by an authorised person.

This appliance is suitable for use with Natural gas or Universal LPG (check the “gas type” sticker attached to the appliance). **The nominal gas consumption and injector size details are provided in the table above.**

To replace the injectors proceed as follows:

- Remove pan supports and burners from the cooktop.
- Using a spanner, remove the injector J (figs. 6a, 6b, 7) and replace it with one according to the gas type (see table above).
- Affix to the appliance the warning label stating that the cooktop has been converted for use with Natural gas / ULPG (supplied with the Natural gas / ULPG conversion kit.).
A second Natural gas / ULPG conversion label should also be affixed to an adjacent surface along with the duplicate data plate.

IMPORTANT

- If the cooktop is suitable for use with Natural gas and must be converted for use with Universal LPG, before connecting to gas main remove the appliance gas regulator and replace with test point adaptor (see fig. 5a, 5b)
- If the cooktop is suitable for use with Universal LPG and must be converted for use with Natural gas, before connecting to the gas main remove the appliance test point adaptor and replace with gas regulator (see figs. 5a, 5b).

NOTE:

Gas regulator and test point adaptor are supplied with the appliance (packed with conversion kit)

The burners are designed so that regulation of primary air is not required.

Figure 6a

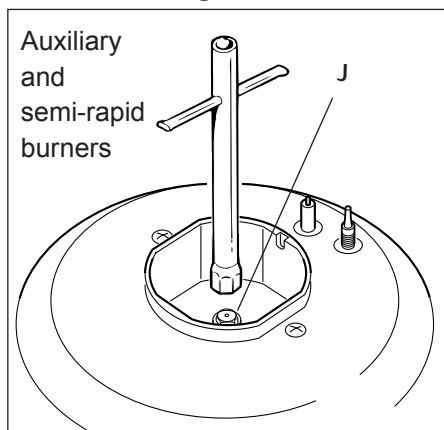


Figure 6b


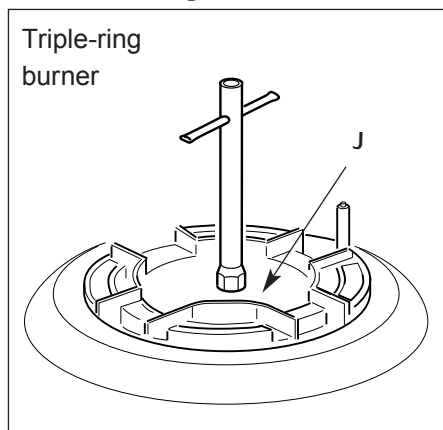


Figure 7

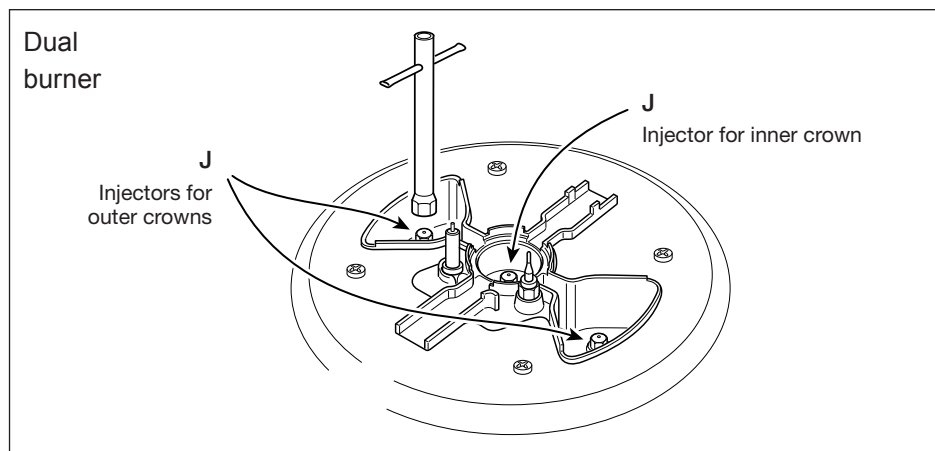


MINIMUM BURNER SETTING ADJUSTMENT

Check whether the flame spreads to all burner ports when the burner is lit with the gas tap set to the minimum position. If some ports do not light, increase the minimum gas rate setting.


Check whether the burner remains lit even when the gas tap is turned quickly from the maximum to the minimum position. If the burner does not remain lit, increase the minimum gas rate setting.

The procedure for adjusting the minimum gas rate setting is described below.


Auxiliary, semi-rapid and triple ring burners

- Light the burner.
- Set the gas valve to  position.
- Remove the knob.
- With a thin screwdriver turn the screw **F** until adjustment is correct (fig. 8).

Inside crown of Dual burner

- Light the DUAL burner.
- Set the gas valve to  position.
- Remove the knob.
- Using a screwdriver turn the screw **H** until the correct setting is obtained (fig. 9).

Outside crowns of Dual burner

- Light the DUAL burner.
- Set the gas valve to  position.
- Remove the knob.
- Using a screwdriver turn the screw **G** until the correct setting is obtained (fig. 9).

For Universal LPG gas, tighten the adjustment screws completely.

Figure 8


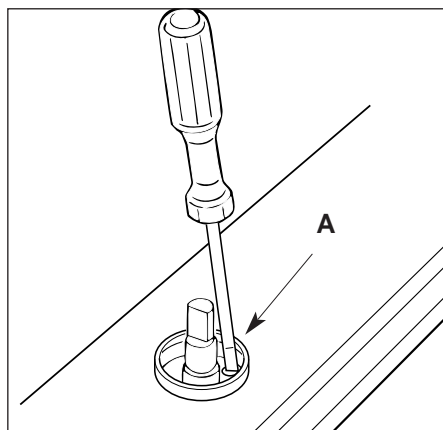


Figure 9

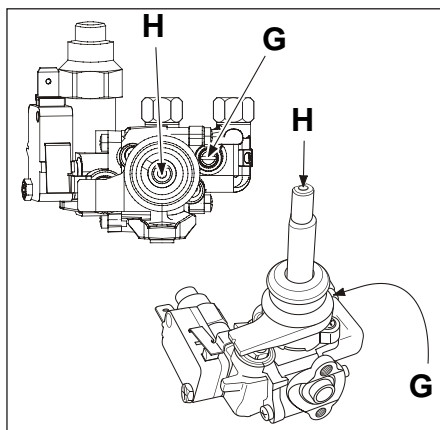

INSTALLATION

ELECTRICAL REQUIREMENTS

- The appliance must be connected to the mains checking that the voltage corresponds to the value given in the rating plate and that the electrical cable sections can withstand the load specified on the plate.
- The plug must be connected to an earthed socket in compliance with safety standards.
- If the appliance is supplied without plug, fit a standard plug which is suitable for the power consumed by the appliance.
- The wires in the power cable are coloured in accordance with the following code: Green/Yellow = Earth, Blue = Neutral, Brown = Active.
If the colours of the wires in the power cable to the appliance do not correspond with the coloured markings identifying the terminals in the junction terminal, proceed as follows:
 1. The wire which is coloured green and yellow must be connected to the terminal marked E (Earth) or coloured Green.
 2. The wire which is coloured blue must be connected to the terminal marked N (Neutral) or coloured Black.
 3. The wire which is coloured brown must be connected to the terminal marked L (Live) or A (Active) or coloured Red.
- The appliance must be connected directly to the mains placing a two pole switch with minimum opening between the contacts of 3 mm between the appliance and the mains.
- The power supply cable must not touch the hot parts and must be positioned so that it does not exceed 50°C above ambient.
- Once the appliance has been installed, the switch or socket must always be accessible.
- If the supply cord is damaged it must be replaced by the manufacturer or its Service Agent or a similarly qualified person in order to avoid a hazard.


N.B. The connection of the appliance to earth is mandatory.

If the installation requires alterations to the domestic electrical system call a qualified electrician.

He should also check that the socket cable section is suitable for the power drawn by the appliance.

Replacing the power cord must be done by a qualified electrician in accordance with the instructions supplied by the manufacturer and in compliance with established electrical regulations.

Figure 10

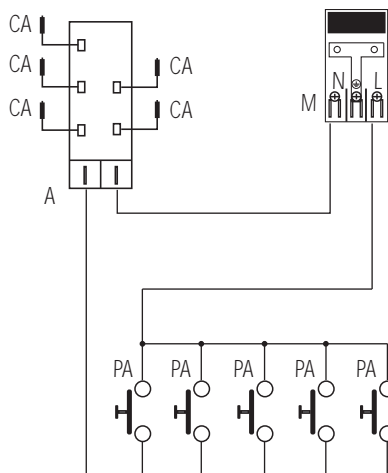

ELECTRIC DIAGRAMS KEY

- PA Ignition switch
- A Ignition coil
- M Terminal block
- CA Spark electrode


USE and CARE

CAUTION:

- This appliance must be used only for the task it has explicitly been designed for, that is for domestic cooking of foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous. Do not use this appliance as a space heater.
- Do NOT place combustible materials or products on this appliance at any time.
- Do NOT use or store flammable materials near this appliance.
- Do NOT spray aerosols in the vicinity of this appliance while it is in use.
- Before using for the first time, clean the cooktop with warm soapy water.
- Use the coffee pot support to ensure that small cooking utensils are stable.
- Do NOT modify this appliance.
- **IMPORTANT NOTE:** This appliance shall not be used as a space heater, especially if installed in marine craft or caravans.

GAS HOB

Figure 11

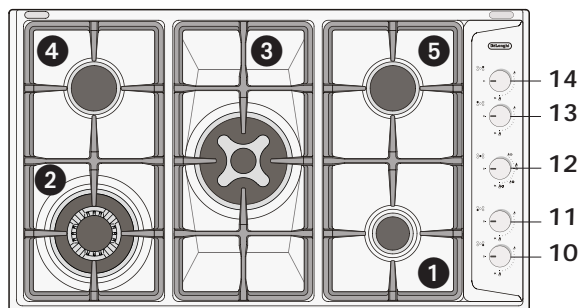

- This appliance is class 3 rated
- The electric ignition is incorporated into the knobs
- The appliance has a safety valve system fitted (beside every burner there is the "T" probe as in fig. 16 - not confuse with the "S" electrode of the electronic ignition) the flow of the gas will stopped if and when the flame should accidentally go out.

GAS BURNERS

	Natural Gas MJ/h	Universal LPG MJ/h
1. Auxiliary burner (A)	3.6	3.6
2. Triple ring burner (TR)	12.7	11.9
3. Dual burner (DB)	3.9 (*) 15.9 (#)	3.1 (*) 14.1 (#)
4. Left semi-rapid burner (SR)	6.3	6.3
5. Right semi-rapid burner (SR)	6.3	6.3

(*) : Power calculated with only inner crown operating.


(#) : Power calculated with inner and outer crowns operating.

CONTROL PANEL

- 10. Auxiliary burner control knob (1)
- 11. Triple-ring burner control knob (2)
- 12. Dual burner control knob (3)
- 13. Left semi-rapid burner control knob (4)
- 14. Right semi-rapid burner control knob (5)

USING GAS BURNERS

Auxiliary, Semi-rapid and Triple-ring burners

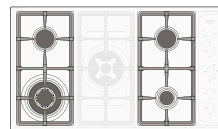



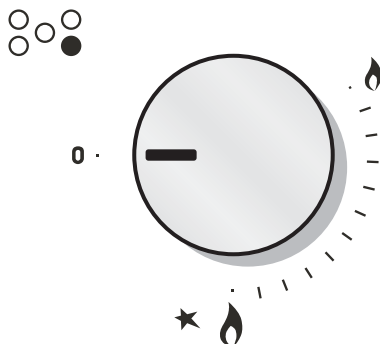

- Check that the electricity is switched on to allow spark ignition.
- Make sure that all controls are turned to zero.
- The gas flow to the burner is controlled by the knobs on the safety taps.
- You control the flow by turning the knob indicator to line up with the following symbols:
 - Symbol **0** : tap closed (burner off)
 - Symbol  : High (maximum)
 - Symbol  : Low (minimum)
- You can control the temperature by the knob to “High” from “Minimum”.
- To switch off, turn the knob clockwise until you hear the safety click.
- Note that, if you are using a burner at the minimum setting, you turn the knob clockwise past the maximum setting before reaching the off position.
- Whenever lighting any of the burners produces an abnormal flame, switch that burner off and relight using the minimum setting.
- If after relighting the burner, the flame is still abnormal, turn the burner off and contact our Customer Service Centre to obtain the nearest authorized Delonghi Service Agent.
- In the case of a mains failure light the burner with a match or lighted taper.
- **Note:** When the cooker top is not being used, set the gas knobs to their closed positions and also close the cock valve on the gas bottle or the main gas supply line.

Figure 12a











LIGHTING GAS BURNERS FITTED WITH FLAME FAILURE SAFETY DEVICE (Auxiliary, Semi-rapid and Triple-ring burners)

In order to light the burner, you must:

- 1 – Turn the knob fig. 12a in anti-clockwise direction up to the maximum aperture (symbol ) , push in and hold the knob; this will light the gas.
- 2 – Wait for about ten seconds after the gas burner has been lit before letting go of the knob (valve activation delay).
- 3 – Adjust the gas valve to the desired position.

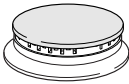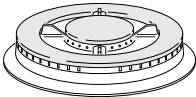
Important

- If the burner flame should go out, the safety valve will automatically stop the gas flow.
- To re-light the burner, return the knob to the closed **0** position, **wait for at least 1 minute** and then repeat the lighting procedure.
- **N.B.** If your local gas supply makes it difficult to light the burner with the knob set to maximum, set the knob to minimum and repeat the operation.

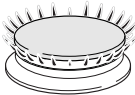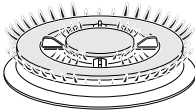Knob position	Function	Auxiliary and Semi-rapid burners	Triple-ring burner
0	closed valve		
	maximum rate		
	minimum rate		

USING GAS BURNERS

Dual burner

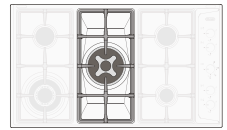

The Dual Burner is a very flexible burner which allows different regulations and optimal cooking.

It is composed by one inner and two outer crowns; the flame of the inner crown can be regulated separately from the flames of the outer crowns.

The Dual Burner can be used:

- as a small burner (flame produced only by the inner crown) which can be adjusted from the maximum (★ 🔥) to the minimum (🔥) position. Intermediate operating adjustments can be achieved by positioning the indicator between the maximum and minimum opening positions, and never between the maximum opening and 0 position.
- as a high-power burner (all flames produced simultaneously by inner and outer crowns) which can be adjusted from the maximum (🔥) to the minimum (🔥) position.

Gas flow to the burner is adjusted by turning the knob (illustrated in fig. 12b) which control the valve.

Turning the knob so that the knob indicator lines up with the symbols printed on the control panel achieves the following functions:

Knob position	Function	Dual burner
0	closed valve	
★ 🔥	maximum rate of inner crown (only inner flame at the maximum)	
🔥	minimum rate of inner crown (only inner flame at the minimum)	
🔥	maximum rate of inner + outer crowns (inside and outside flames in simultaneously at the maximum)	
🔥	minimum rate of inner + outer crowns (inside and outside flames in simultaneously at the minimum)	

LIGHTING GAS BURNERS FITTED WITH FLAME FAILURE SAFETY DEVICE (Dual burner)

In order to light the burner, you must:

- 1 – Push and turn the knob in an anti-clockwise direction up to the ★ 🔥🌀 position (maximum rate of inner crown); push in and hold the knob until the flame has been lit.

The sparks produced by the lighter situated inside the relative burner will light the flame.

In the event that the local gas supply conditions makes it difficult to light the burner in ★ 🔥🌀 position, try again with the knob in 🔥🌀 position.

If there is no mains electrical supply connection, bring a lighted match close to the burner.

- 2 – Wait for about ten seconds after the gas burner has been lit before letting go the knob (safety device activation delay).
- 2 – Adjust the gas valve to the desired position.


If the burner flame should go out for some reason, the safety valve will automatically stop the gas flow.

To re-light the burner, return the knob to the closed position (0), **wait for at least 1 minute** and then repeat the lighting procedure.

Note: To change from using the inner crown only to using both the inner and outer crowns together, press the control knob down before turning it.

You have to do the same when going from using both crowns to using just the inner crown.


Figure 12b

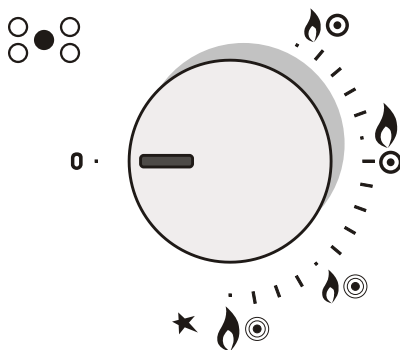

COOKING HINTS FOR GAS HOBS

- The burner must be chosen according to the diameter of the pans and energy required.
- For optimum efficiency use a wok or pan no smaller than 230mm diameter.

Figure 13

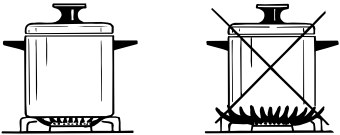

do not use pans with concave or convex bases

Burners		Pan diameter
* Auxiliary		12 - 14 cm
Semi-rapid		16 - 24 cm
Triple ring		26 - 28 cm
Dual (only inner crown)		12 - 14 cm
Dual (inner + outer crown)		26 - 28 cm
Wok		max 36 cm
* with the coffee pot support		minimum 6 cm

- Saucepans with handles which are excessively heavy, in relationship to the weight of the pan, are safer as they are less likely to tip.
- Pans which are positioned centrally on burners are more stable than those which are offset.
- It is far safer to position the pan handles in such a way that they cannot be accidentally knocked.
- When deep fat frying fill the pan only one third full of oil.
- **DO NOT** cover the pan with a lid and **DO NOT** leave the pan unattended.
- In the unfortunate event of a fire, leave the pan where it is and turn off all controls.
- Place a damp cloth or correct fitting lid over the pan to smother the flames.
- **DO NOT** use water on the fire.
- Leave the pan to cool for at least 30 minutes.

GRILL FOR SMALL COOKWARE (fig. 14)

- Put it on the auxiliary burner (the smallest) grid when small cookware is being used to prevent the cookware from tipping over.

Figure 14





CORRECT USE OF TRIPLE-RING AND DUAL BURNER

- The flat-bottomed pans are to be placed directly onto the pan-support.
- To use the WOK, you must place the wok stand in the **CORRECT** position as shown in fig. 15.

IMPORTANT:

The special grille for wok pans (fig. 15) **MUST BE PLACED ONLY** over the pan-rest for the triple-ring or dual burner.

Figure 15

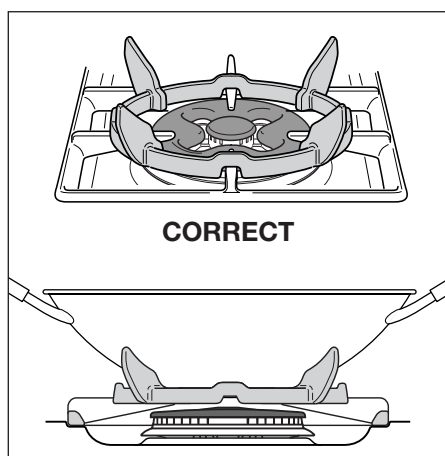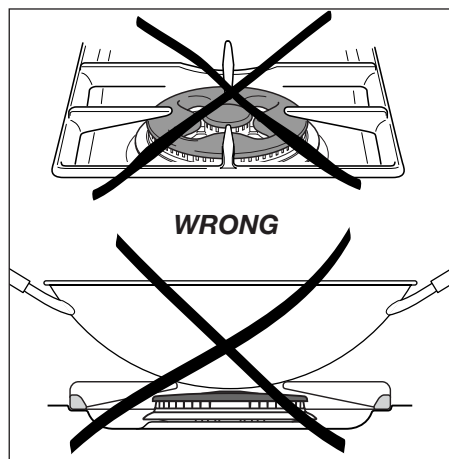

Cleaning and Maintenance

GENERAL TIPS

- Before cleaning the hob switch it off and wait for it to cool down.
- Clean with a cloth, hot water and soap or liquid detergent.
- Do not use products which are abrasive, corrosive or chlorine based.
- Do not use steel pads.
- Do not leave acid or alkaline substances (vinegar, salt, lemon juice, etc.) on the hob.

ENAMELLED PARTS

- All the enamelled parts must be washed only with a sponge with soapy water or other non-abrasive products.
- Dry preferably with a microfibre or soft cloth.

STAINLESS STEEL HOB

- Clean with special products which are available on the market.
- Dry preferably with a microfibre or soft cloth.
- **Note:** regular use will cause discolouring around the burners, because of the high flame temperature.

BURNERS AND GRIDS

- These pieces can be removed and washed with suitable products.
- After cleaning burners and spreaders dry them well and replace them correctly.

CONTROL KNOB

- The control knobs may be removed for cleaning but care should be taken not to damage the seal.

Do not use steam jet cleaners because the humidity could infiltrate into the appliance making it dangerous.

GAS TAPS

- Regular lubrication of the gas taps must only be performed by Authorized person.
- If the gas taps are not working properly, call our Customer Service Centre to obtain the nearest Authorized Delonghi Service Agent.

CORRECT POSITIONING OF THE BURNERS

- It is very important to check that spreader "F" and cap "C" of the burner (see Figures 16 and 17) are perfectly in place because if they move out of place serious problems could arise.
- Make sure that electrode "S" (Fig. 16) is kept clean so that the sparks always strike.
- Make sure that probe "T" (fig. 16) next to each burner is kept clean to ensure correct operation of the safety valves.
- Both the probe and ignition plug must be very carefully cleaned.
- **Note: To avoid damage to the electric ignition do not use it when the burners are not in place.**

Figure 16


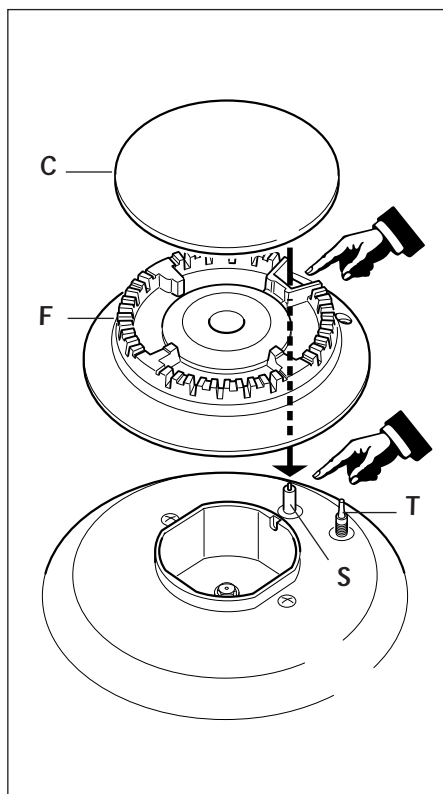


Figure 17

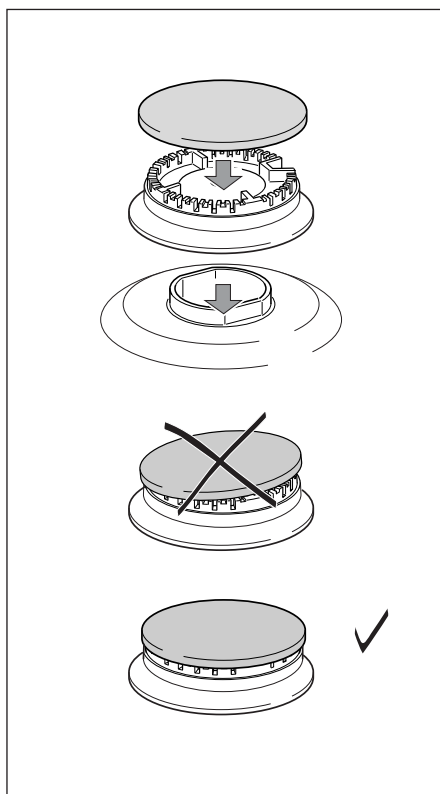

CORRECT POSITIONING OF THE TRIPLE-RING BURNER

- The triple ring burner must be correctly positioned (see fig. 20); the burner rib must be located in position as shown by the arrow (see fig. 18).
- The burner correctly positioned must not rotate (fig. 19).
- Then position the cap "A" and the ring "B" (fig. 19).

Figure 18

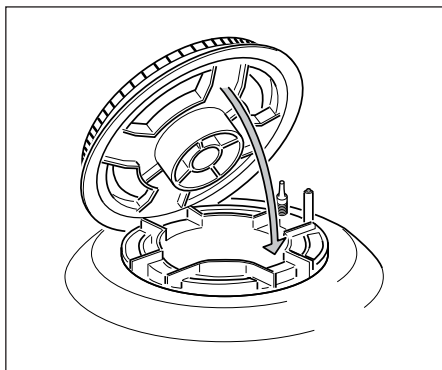


Figure 19


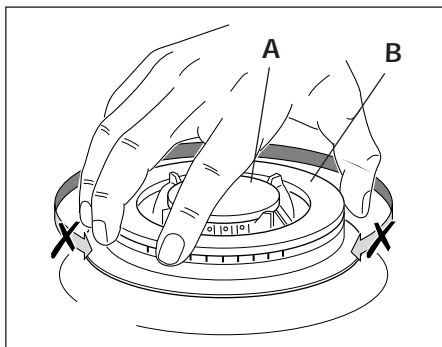


Figure 20

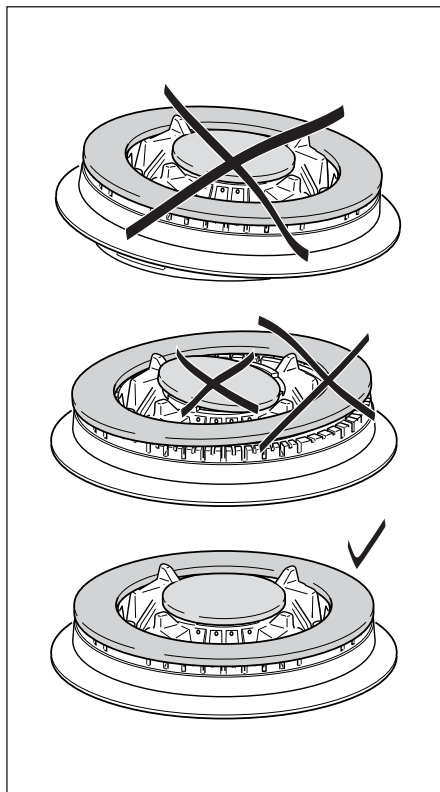

CORRECT POSITION OF DUAL BURNERS

- The DUAL burner must be correctly positioned (see fig. 21a); the burner rib must be fitted as shown by the arrows.
- Position the central small cap in its housing as shown by the arrows (fig. 21b).
- Position the big cap in its housing as shown by the arrows (fig. 21c).
- IMPORTANT: NEVER unscrew the burner screws (fig. 21d).

Figure 21a

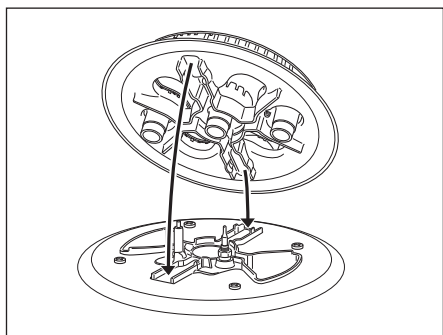


Figure 21b

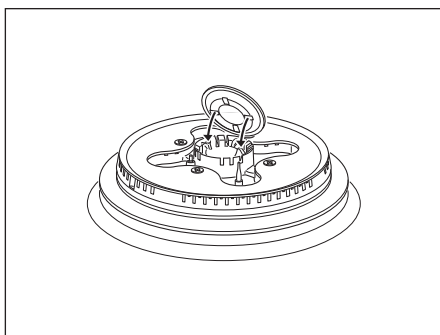


Figure 21c


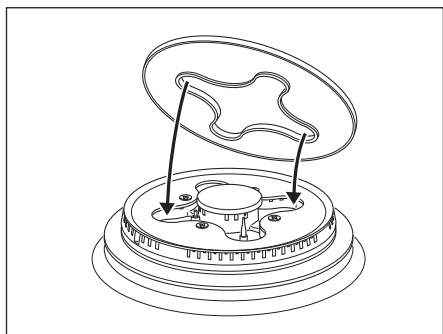


Figure 21d

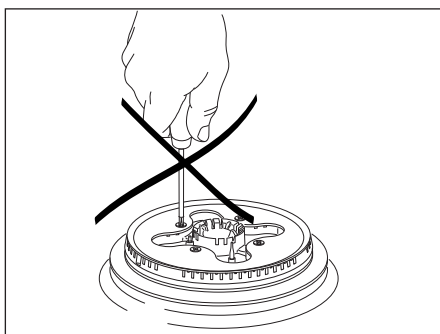

SERVICE AND MAINTENANCE

If the ignition spark fails to ignite or does not light the gas, check the following items before calling our Customer Service Centre to obtain the nearest Authorised Delonghi Service Agent:

- Burner is reassembled and located correctly.
- Spark electrode and white ceramic are clean and dry.
- 240 VAC power supply is connected.

Contact the local gas utility or our Customer Service Centre to obtain the nearest Authorized Delonghi Service Agent.

- You can smell gas when all burners are turned on.
- The burners do not remain alight at the minimum marked setting.
- The burner flame is yellow or emits an unusual odour.

Note that a bi-annual inspection of the appliance by an authorized service agent or your local gas utility will ensure many years of trouble free operation of your appliance.

Servicing the appliance:

Service may be obtained by contacting our Customer Service Centre to locate the nearest Authorised Delonghi Service Agent:


Servicing shall be carried out only by authorized personnel.

The appliance shall not be modified.

LUBRICATION OF THE GAS TAPS

If the gas tap becomes stiff, it is necessary to dismantle it carefully and clean it with petroleum spirit. Specialist high temperature resistant grease should be used to lubricate the tap before replacing.

These operations must be carried out by an authorized person/service agent.

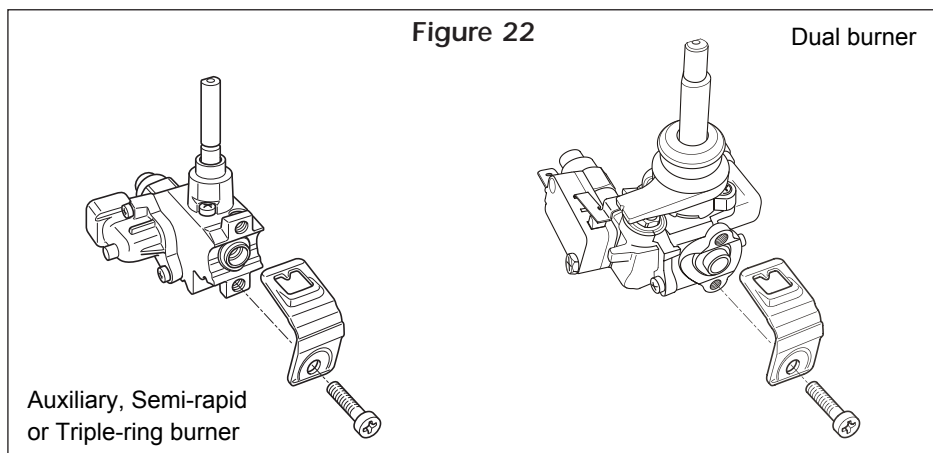

Descriptions and illustrations in this booklet are given as simply indicative. The manufacturer reserves the right, considering the characteristics of the models described here, at any time and without notice, to make eventual necessary modifications for their construction or for commercial needs.



Living innovation

Cod. 1103225 - 134