



*INSTALLATION and SERVICE INSTRUCTIONS  
USE and CARE INSTRUCTIONS*

# **DOUBLE OVEN**

**DMFPS62B**



*distributed by*  
**DèLonghi**  
*Pty Ltd*

***Dear Customer,***

*Thank you for having purchased and given your preference to our product.*

*The safety precautions and recommendations reported below are for your own safety and that of others. They will also provide a means by which to make full use of the features offered by your appliance.*

*Please keep this booklet in a safe place. It may be useful in future, either to yourself or to others in the event that doubts should arise relating to its operation.*

***This appliance must be used only for the task it has explicitly been designed for, that is for cooking foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.***

***The manufacturer declines all responsibility in the event of damage caused by improper, incorrect or illogical use of the appliance or by faulty installation.***

## **IMPORTANT PRECAUTIONS AND RECOMMENDATIONS FOR USE OF ELECTRICAL APPLIANCES**

*Use of any electrical appliance implies the necessity to follow a series of fundamental rules. In particular:*

- *Never touch the appliance with wet hands or feet;*
- *Do not operate the appliance barefooted;*
- *The appliance is not intended for use by young children or infirm persons without supervision;*
- *Young children should be supervised to ensure that they do not play with the appliance.*

*The manufacturer cannot be held responsible for any damages caused by improper, incorrect or illogical use of the appliance.*



## IMPORTANT PRECAUTIONS AND RECOMMENDATIONS

*After having unpacked the appliance, check to ensure that it is not damaged. In case of doubt, do not use it and consult your supplier or a professionally qualified technician.*

*Packing elements (i.e. plastic bags, polystyrene foam, nails, packing straps, etc.) should not be left around within easy reach of children, as these may cause serious injuries.*

- *Do not attempt to modify the technical characteristics of the appliance as this may become dangerous to use.*
- *Do not carry out cleaning or maintenance operations on the appliance without having previously disconnected it from the electric power supply.*
- *After use, ensure that the knobs are in the off position.*
- *Do not allow children or other incapable people to use the appliance without supervision.*
- *During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.*
- *Keep children away from the appliance when it is in use.*
- *Some appliances are supplied with a protective film on steel and aluminium parts. This film must be removed before using the appliance.*
- *Fire risk! Do not store flammable material in the oven.*
- *Make sure that electrical cables connecting other appliances in the proximity of the oven become entrapped in the oven door.*
- **Do not line the oven walls with aluminium foil. Do not place baking trays or other cooking utensils on the base of the oven chamber.**
- *The manufacturer declines all liability for injury to persons or damage to property caused by incorrect or improper use of the appliance.*
  
- **WARNING: Taking care NOT to lift the oven by the door handle.**
- **IMPORTANT NOTE: This appliance shall not be used as a space heater, especially if installed in marine craft or caravans.**

---

*This oven has been designed and constructed in accordance with the following codes and specifications:*

|                 |                                                                           |
|-----------------|---------------------------------------------------------------------------|
| AS/NZS 3350-1   | <i>General Requirements for Domestic electrical appliances</i>            |
| AS/NSZ 3350-2-6 | <i>Particular Requirements for Domestic electrical cooking appliances</i> |
| AS/NSZ 1044     | <i>Electromagnetic Compatibility Requirements.</i>                        |

---

# INSTALLATION

## CAUTION:

- This appliance must be installed in accordance with these installation instructions.
- This appliance shall only be serviced by authorized personnel.
- This appliance is to be installed only by an authorised person and in compliance with local safety standards.
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury or damage.
- Always disconnect the oven from mains power supply before carrying out any maintenance operations or repairs.

## ELECTRICAL REQUIREMENTS


- *Connection to the mains must be carried out by qualified personnel in accordance with current regulations.*
- *The appliance must be connected to the mains checking that the voltage corresponds to the value given in the rating plate and that the electrical cable sections can withstand the load specified on the plate.*
- *The appliance must be connected directly to the mains placing a two pole switch with minimum opening between the contacts of 3 mm between the appliance and the mains.*
- *The power supply cable must not touch the hot parts and must be positioned so that it does not exceed 75°C at any point.*
- *Once the appliance has been installed, the switch must always be accessible.*
- **If the supply cord is damaged it must be replaced by the manufacturer or its Service Agent or a similarly qualified person in order to avoid a hazard.**

**WARNING: This appliance must be earthed. This oven must be connected to supply using V105 insulated cable.**

- N.B.**
- **The connection of the appliance to earth is mandatory.**
  - **For connection to the mains, do not use adapters, reducers or branching devices as they can cause overheating and burning.**

*If the installation requires alterations to the domestic electrical system call a qualified electrician. He should also check that the socket cable section is suitable for the power drawn by the appliance.*

**WARNING** This appliance must be earthed.

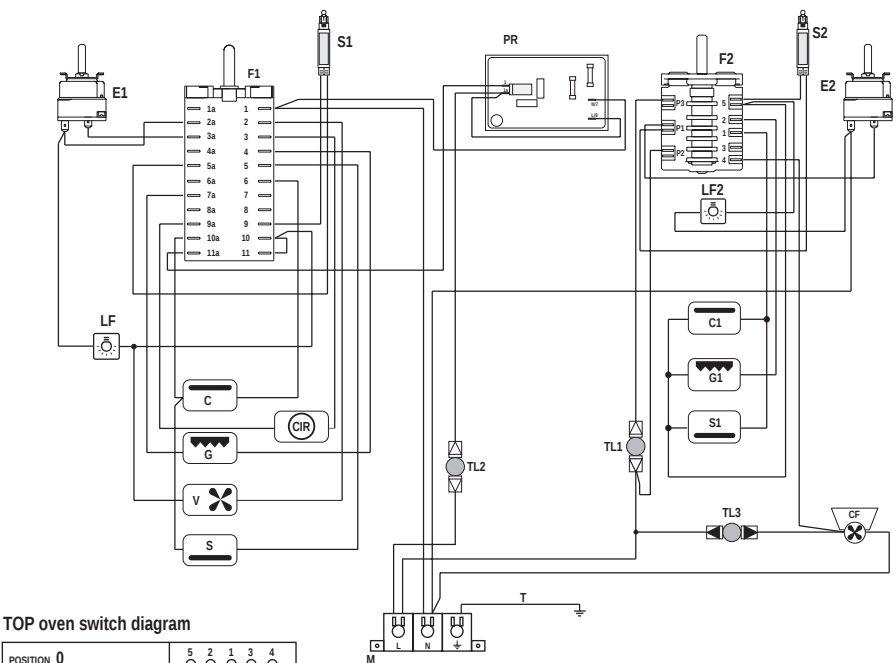

**TOP oven switch diagram**

|                                |           |
|--------------------------------|-----------|
| POSITION 0                     | 5 2 1 3 4 |
|                                | P3 P1 P2  |
| FUNCTION 1 90°↺                |           |
| Oven light                     |           |
| FUNCTION 2 180°↺               |           |
| Traditional convection cooking |           |
| FUNCTION 3 270°↺               |           |
| Grilling                       |           |

**BOTTOM oven switch diagram**

|                                                               |                                    |
|---------------------------------------------------------------|------------------------------------|
| POSITION 0                                                    | 1 2 3 4 5 6 7 8 9 10 11            |
|                                                               | 1a 2a 3a 4a 5a 6a 7a 8a 9a 10a 11a |
| FUNCTION 1 40°↺                                               |                                    |
| Oven light                                                    |                                    |
| FUNCTION 2 80°↺                                               |                                    |
| Traditional convection cooking                                |                                    |
| FUNCTION 3 120°↺                                              |                                    |
| Grilling                                                      |                                    |
| FUNCTION 4 160°↺                                              |                                    |
| Defrost                                                       |                                    |
| FUNCTION 5 200°↺                                              |                                    |
| Fan forced                                                    |                                    |
| FUNCTION 6 240°↺                                              |                                    |
| Fan grill                                                     |                                    |
| FUNCTION 7 280°↺                                              |                                    |
| Maintaining temperature after cooking or slowly heating foods |                                    |
| FUNCTION 8 320°↺                                              |                                    |
| Convection cooking with ventilation                           |                                    |

**ELECTRIC DIAGRAM KEY**

- TOP OVEN**
- F2 Oven switch
  - E2 Oven thermostat
  - S2 Thermostat pilot lamp
  - LF2 Oven lamp
  - C1 Top element
  - G1 Grill element
  - S1 Bottom element
  - TL1 Thermal overload
- BOTTOM OVEN**
- F1 Oven switch
  - E1 Oven thermostat
  - S1 Thermostat pilot lamp
  - PR Oven programmer
  - LF Oven lamp
  - C Top element
  - G Grill element
  - V Fan
  - S Bottom element
  - CIR Circular element
  - TL2 Thermal overload
- 
- CF Cooling fan
  - TL3 Thermal overload
  - M Terminal block
  - T Earth connection

## CONNECTING THE FEEDER CABLE

- Unscrew the screw A securing the cover plate B behind the oven (fig. 1).
- Remove the cover plate B.
- Remove the screws C from the cable clamp (fig. 2).
- Insert the mains cable (type V105 - 3x2,5 mm<sup>2</sup> section) into the cable protector P.
- Connect the phase and earth cables to the mains terminal connection block D.
- The wires of this appliance must be coloured in accordance with the following code:

GREEN AND YELLOW - EARTH  $\perp$

BLUE - NEUTRAL "N"

BROWN - LIVE "L"

- The wire which is coloured GREEN AND YELLOW must be connected to terminal which is marked with the letter "E" or by the Earth  $\perp$  symbol or coloured GREEN or GREEN AND YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.
- Refit the cable clamp so that it clamps the outer sleeving of the cable, and screw the screws C.
- Refit the cover plate B and fix it with the screw A.

## REPLACING THE POWER SUPPLY CABLE

If the supply cable is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Figure 1


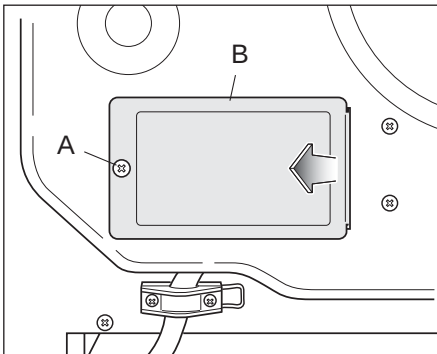


Figure 2

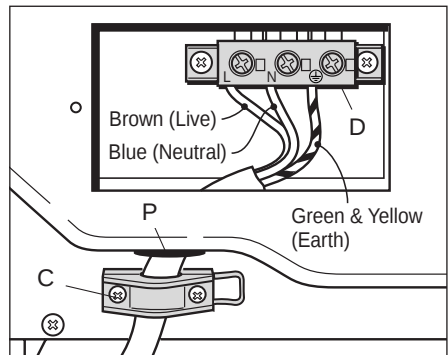

**WARNING** This appliance must be earthed

## FITTING REQUIREMENTS

**WARNING:** Taking care NOT to lift the oven by the door handle.

**IMPORTANT:**

The appliance should be installed by a **QUALIFIED INSTALLATION TECHNICIAN**.

The appliance must be installed in compliance with regulations in force.

You need the following housing area to fit your oven correctly.

The double oven is designed to fit into a cabinet of 600 mm width.

The double oven can be built in the kitchen units, but you must ensure that it is properly ventilated.

In the diagram the appliance is ventilated by means of the space in the top of the kitchen cabinet.


Lift the appliance into position onto the shelf, taking care NOT to lift it by the door handles.

If you open the oven doors, you will see some screw holes.


The oven should then be secured to the housing by fitting screws into these holes. Remember the housing should not be free standing but be secured to the wall and/or adjacent fittings.

| Dimensions (mm) | Oven | Housing  |
|-----------------|------|----------|
| Height          | 888  | 877      |
| Width           | 595  | 560      |
| Depth           | 564  | 555 min. |

- The appliance must be housed in heat resistant units.
- The walls of the units must be capable of resisting temperatures of 75 °C above room temperature.

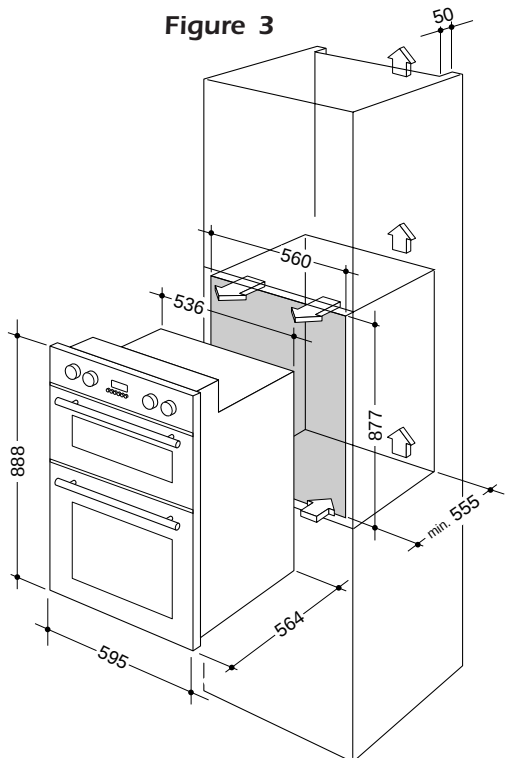

**Figure 4**

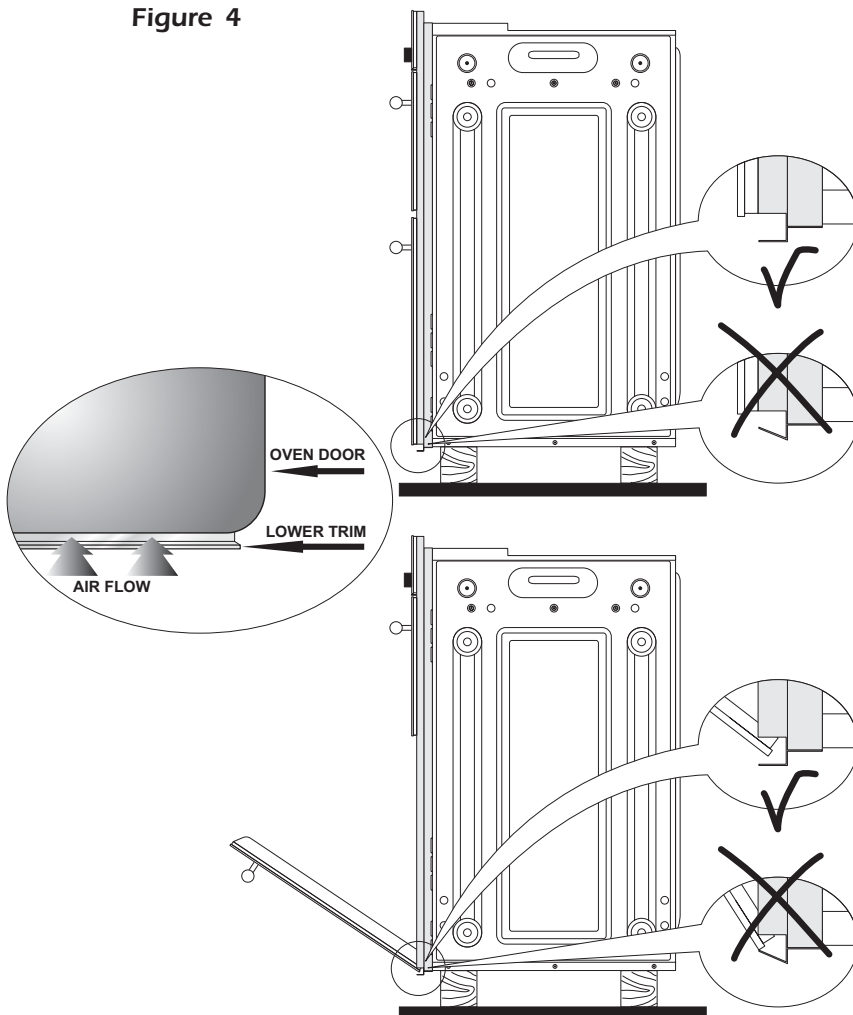

**IMPORTANT:**

**To avoid damage to the lower trim please note the following instructions.**

*The lower trim is designed to allow for good air circulation and the correct opening of the oven door.*

*To ensure the trim is not damaged due to the appliance being placed on the floor, the appliance should be suitably supported as in above illustrations.*

*After installation the appliance door should be slowly opened to ensure no damage has occurred.*

**No responsibility for lower trim damage will be accepted if these instructions have not been followed.**

# USE and CARE


## CAUTION:

- *This appliance must be used only for the task it has explicitly been designed for, that is for domestic cooking of foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.*
- *Do NOT place combustible materials or products on this appliance at any time.*
- **ATTENTION - Most important:** *During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.*
- **WARNING:** *Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.*

## GREASE FILTER (BOTTOM MAIN OVEN ONLY)

- *A special screen is provided at the back of the multifunction main oven to catch grease particles, mainly when meat is being roasted (fig. 5).*
- *When baking pastry etc. this filter should be removed.*
- *Always clean the filter after cooking as any solid residues on it might adversely affect the oven performance.*

Figure 5

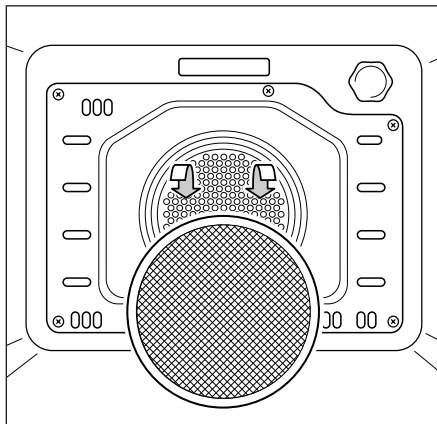

## USING THE BOTTOM MAIN OVEN FOR THE FIRST TIME

You are advised to carry out the following operations:

- Clean the inside of the oven with a cloth soaked in water and neutral detergent and dry thoroughly.
- Assemble the wire racks to the oven walls using the 2 screws (Fig. 6).  
Interpose the catalytic panels "A" with the arrow up (fig. 6).
- Slide into the guides, the shelf and the tray (fig. 7).  
The shelf must be fitted so that the safety catch, which stops it sliding out, faces the inside of the oven.

To dismantle, as follows:

- Unscrewing the fixing screws and slide off the wire racks to the oven wall as in fig. 6.

**The grill is secured to the rear wall of the oven on a hinge system that allows it to be lowered to allow proper access when cleaning the oven ceiling (fig. 8).**

- To eliminate traces of grease from the heating elements, switch on the oven on, to the maximum temperature in this ways:

For 60 minutes in the  position,  
for 30 minutes in the  position,  
and for another 15 minutes in the  position.

Figure 6

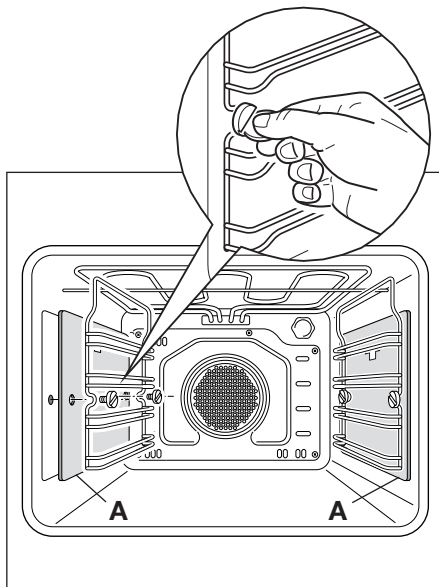


Figure 7


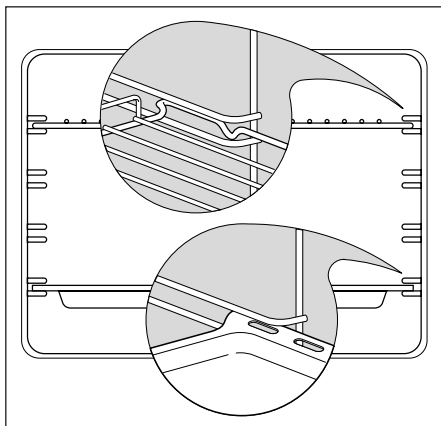


Figure 8

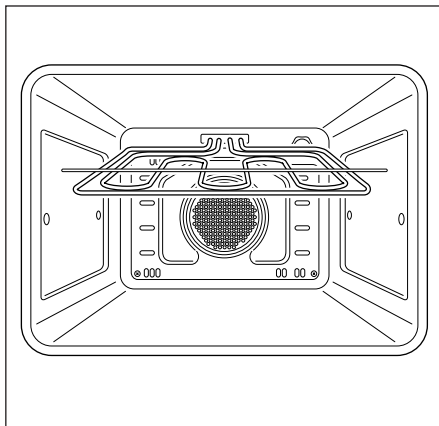


## USING THE TOP OVEN FOR THE FIRST TIME


*You are advised to carry out the following operations:*

- *Clean the inside of the oven with a cloth soaked in water and neutral detergent and dry thoroughly.*
- *Assemble the wire racks to the oven walls using the 2 screws (Fig. 9).*
- *Slide into the guides, the shelf and the tray (fig. 10).*  
*The shelf must be fitted so that the safety catch, which stops it sliding out, faces the inside of the oven.*
- *To dismantle, operate in reverse order.*
- *To eliminate traces of grease from the heating elements, switch on the oven on, to the maximum temperature in this ways:*  
*For 60 minutes in the  position and for another 15 minutes in the  position.*

**Figure 9**

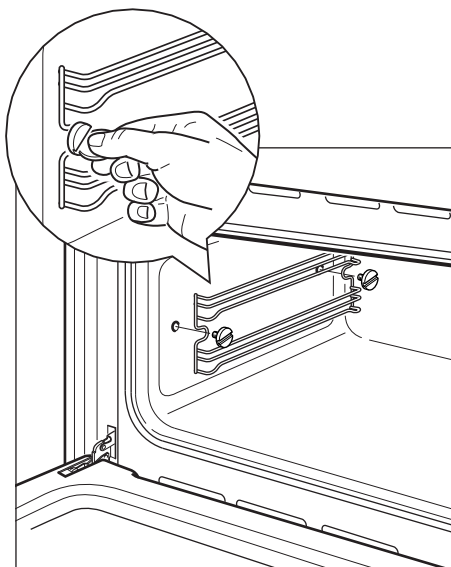

**Figure 10**

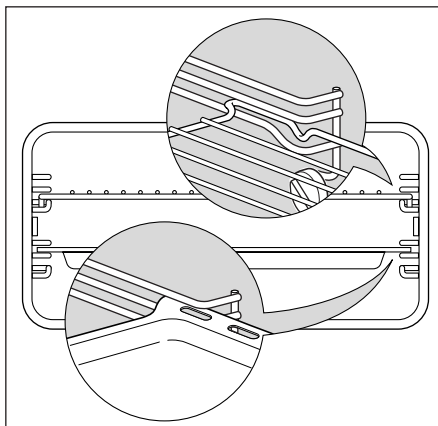

## TILTING GRILL OF THE TOP OVEN (fig. 13)

- The grill is secured to the rear wall of the oven on a hinge system that allows it to be lowered to allow proper access when cleaning the oven ceiling (fig. 13).
- In the front the grill is secured to the ceiling by a hook A.

### Unlocking the tilting grill (fig. 11)

1. Open the hook A.
2. Gently pull down the grill as shown in the figure 13.

### Locking the tilting grill (fig. 12)

1. Gently lift up the grill.
2. Close the hook A on the grill bar.

Figure 11

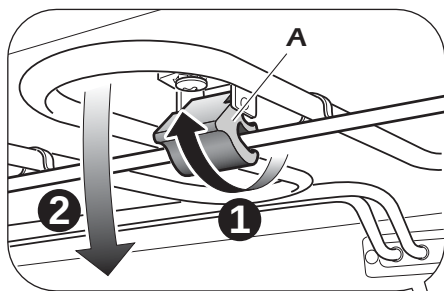


Figure 12


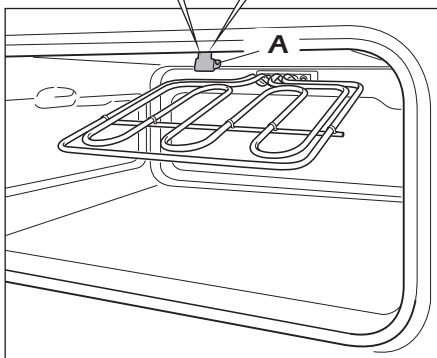


Figure 13

# CONTROL PANEL

Figure 14

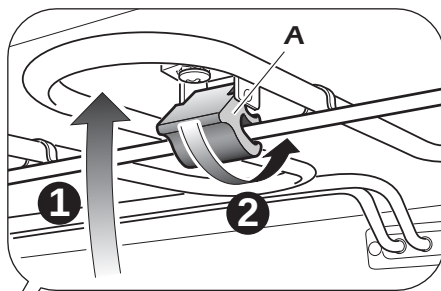

## CONTROL PANEL

1. Oven temperature knob (Top oven)
2. Function selector knob (Top oven)
3. Digital electronic programmer (Main oven only)
4. Function selector knob (Main oven)
5. Oven temperature knob (Main oven)
6. Main oven temperature indicator light
7. Top oven temperature indicator light

NB: Your appliance has been fitted with a cooling fan to achieve optimum efficiency of the controls and to ensure lower surface temperatures are maintained.



# Top oven

## TOP OVEN GENERAL FEATURES

*This is a CONVENTIONAL oven with 2 cooking options, thermostatically controlled.*

## TOP OVEN OPERATING PRINCIPLES

*Heating and cooking in the CONVENTIONAL oven are obtained in two following ways:*


**a. by normal convection**

*The heat is produced by the upper and lower heating elements.*

**b. by radiation**

*The heat is irradiated by the infra red grill element.*

Figure 15

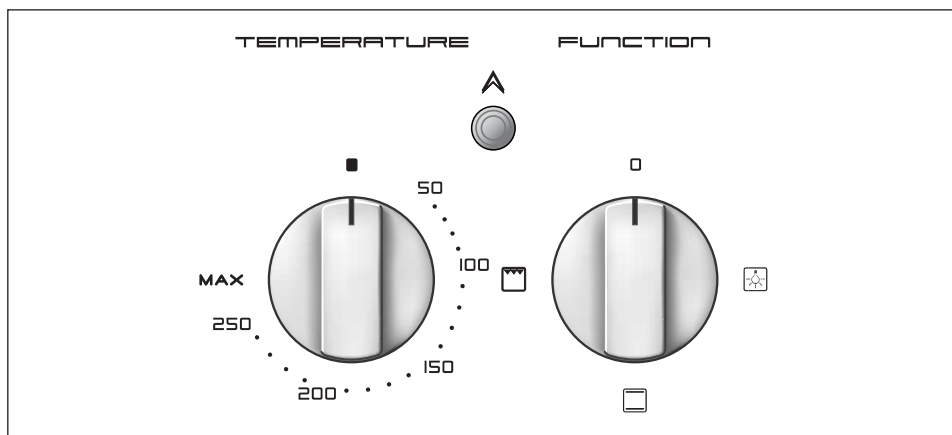

### THERMOSTAT KNOB

*This only sets the cooking temperature and does not switch the oven on. Rotate clockwise until the required temperature is reached (from 50 to MAX°C).*

### FUNCTION SELECTOR KNOB

*Rotate the knob clockwise to set the oven for one of the following functions.*



## OVEN LIGHT

*By setting the knob to this position, only the oven light comes on (15 W). It remains on in all the cooking modes.*



## TRADITIONAL CONVECTION COOKING

*The upper and lower heating elements come on. The heat is dispersed by natural convection and the temperature must be set to between 50° and MAX via the thermostat knob.*

*The oven must be preheated before cooking.*

**Ideal for:**

*Food that requires the same degree of cooking both inside and out, for example roasts, spare pork ribs, meringues etc.*



## GRILLING

*The infra-red heating element is switched on. The heat is diffused by radiation. Use with the oven door closed and the temperature knob set between 50°C and 225°C. For correct use see chapter "USE OF THE GRILL".*

**Ideal for:**

*Intense grilling, browning, cooking au gratin and toasting etc.*

**Always grill with the oven door closed.**

**It is recommended that you do not grill for longer than 30 minutes at any one time.**

**Caution:** The oven door becomes very hot during operation. Keep children well out of reach.

## COOKING ADVICE

*Remember to keep children away from the appliance when you use the grill or oven, since these parts become very hot.*

### COOKING IN A CONVENTIONAL TOP OVEN

*The oven has two heating elements, one on the base and one on the roof of the cooker. Hot air rises, so the top of the oven is always the hottest. The temperature in the middle of the oven is maintained at the temperature set by the control knob, and is slightly hotter above and cooler below.*

*In a conventional oven, dishes requiring different temperatures can be cooked in the oven at the same time - e.g. roast beef and Yorkshire pudding.*

*Always pre-heat a conventional oven before use. The oven indicator light will go out when the required temperature is reached. Do not open the oven door during cooking unless absolutely necessary.*

**IMPORTANT:** *Drip trays, baking trays etc. must not be left on the base of the oven as this could damage the appliance.*

### USE OF THE GRILL

*Switch the grill on by setting the selector knob to position  and the thermostat knob to position 225°C.*

*Leave to warm up for approximately 5 minutes with the door closed.*

*Place the food inside positioning the rack as near as possible to the grill.*

*Insert the drip pan under the rack to collect the cooking juices.*

**Always grill with the oven door closed.**

**It is recommended that you do not grill for longer than 30 minutes at any one time.**

**Remember to keep children away from the appliance when you use the grill or oven, since these parts become very hot.**

## Bottom main oven

### GENERAL FEATURES

*This is a MULTI-FUNCTION oven. As its name indicates, this is an oven that presents particular features from an operational point of view. In fact, it is possible to insert 7 different programs to satisfy every cooking need. The 7 positions, thermostatically controlled, are obtained by 4 heating elements (top, bottom, grill and circular).*

### BOTTOM OVEN OPERATING PRINCIPLES

*Heating and cooking in the MULTI-FUNCTION oven are obtained in the following ways:*

**a. by normal convection**

*The heat is produced by the upper and lower heating elements.*

**b. by forced convection**

*A fan sucks in the air contained in the oven muffle, which sends it through the circular heating element and then sends it back through the muffle. Before the hot air is sucked back again by the fan to repeat the described cycle, it envelops the food in the oven, provoking a complete and rapid cooking.*

*It is possible to cook several dishes simultaneously.*

**c. by semi-forced convection**

*The heat produced by the upper and lower heating elements is distributed throughout the oven by the fan.*

**d. by radiation**

*The heat is irradiated by the infra red grill element.*


**e. by radiation and ventilation**

*The irradiated heat from the infra red grill element is distributed throughout the oven by the fan.*

**f. by ventilation**

*The food is defrosted by using the fan only function without heat.*

**Figure 16**

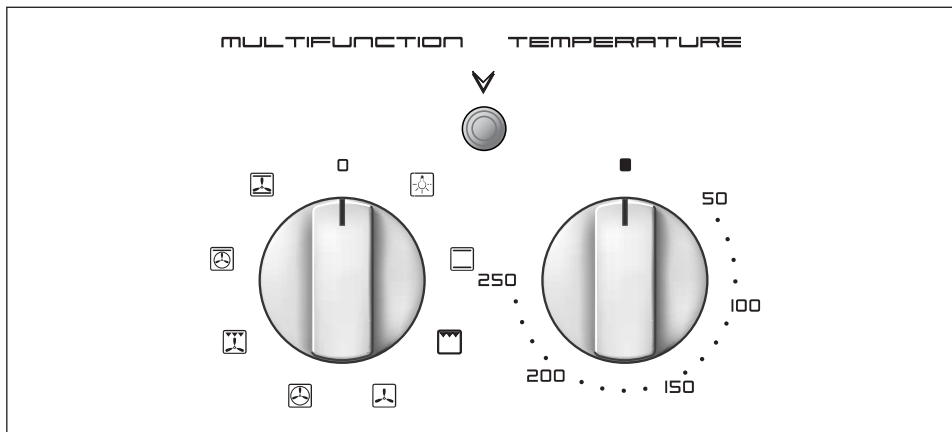

### **FUNCTION SELECTOR KNOB**

*Rotate the knob clockwise to set the oven for one of the following functions.*

### **THERMOSTAT KNOB**

*This only sets the cooking temperature and does not switch the oven on. Rotate clockwise until the required temperature is reached (from 50°C to 250°C).*



### **OVEN LIGHT**

*By setting the knob to this position, only the oven light comes on. It remains on in all the cooking modes.*



### **TRADITIONAL CONVECTION COOKING**

*The upper and lower heating elements come on. The heat being dispersed by natural convection. The temperature range must be set between 50°C and 250°C using the thermostat.*

*The oven must be preheated before cooking.*

*Ideal for:*

*Food that requires the same degree of cooking both inside and out, for example roasts, spare pork ribs, meringues etc.*



## GRILLING

*The infrared grill element at the top of the oven comes on. The heat is dispersed by radiation.*

*Use with the oven door **closed** and the temperature knob set between 50°C and 225°C.*

*For cooking hints, see the chapter "USE OF THE GRILL".*

*Ideal for:*

*Intense grilling, browning, cooking au gratin and toasting etc.*

**Always grill with the oven door closed.**

**It is recommended that you do not grill for longer than 30 minutes at any one time.**

**Attention: The oven door becomes very hot during operation.**

**Keep children away.**



## DEFROST

*Only the oven fan comes on. Use with the thermostat knob set to "●" - other temperature have no effect. The food is thawed by ventilation without heating.*

*Ideal for:*

*Quick thawing of frozen foods; one kg requires approximately 1 hour.*

*Thawing times vary according to the quantity and type of food to be thawed.*



## FAN FORCED

*The circular element and the fan are on.*

*The heat is diffused by forced convection and the temperature must be regulated between 50°C and 250°C position with the temperature knob.*

*It is not necessary to preheat the oven.*

*Ideal for:*

*Food which has to be well-cooked outside and soft or rosy inside, for example lasagne, lamb, roast beef, whole fish etc.*



## FAN GRILL

*The infra-red grill and the fan are on. The heat is mainly diffused by radiation and the fan then distributes it throughout the oven.*

*The temperature must be regulated between 50°C and 200°C with the temperature knob.*

*It is necessary to preheat the oven for about 5 minutes.*

*For correct use see chapter "GRILLING AND AU GRATIN."*

**Always grill with the oven door closed.**

Ideal for:

*Quick sealing in of food juices for example such as hamburger, chicken pieces, chops.*



## MAINTAINING TEMPERATURE AFTER COOKING OR SLOWLY HEATING FOODS

*The upper element, the circular element and the fan come on.*

*The heat is circulated by forced convection with greater intensity in the upper part.*

*The temperature can be set to between 50° and 140°C via the thermostat knob.*

Ideal for:

*Keeping food warm after any type of cooking. Slow heating of cooked food.*



## CONVECTION COOKING WITH VENTILATION

*The upper and lower heating elements and the fan turn on.*

*The heat coming from the top and bottom is diffused by forced convection.*

*The temperature must be set between 50°C and 250°C position with the temperature knob.*

Ideal for:

*Large bulky quantities of food that require even cooking throughout for example large roasts, turkey, roast turkey, cakes etc.*

## COOKING ADVICE

*Remember to keep children away from the appliance when you use the grill or oven, since these parts become very hot.*

### STERILIZATION

*Sterilization of foods to be preserved, in full and hermetically sealed jars, is done in the following way:*

- a. Set the switch to position .*
- b. Set the thermostat knob to position 185 °C and preheat the oven.*
- c. Fill the dripping pan with hot water.*
- d. Set the jars onto the dripping pan making sure they do not touch each other and the door and set the thermostat knob to position 135 °C.*

*When sterilization has begun, that is, when the contents of the jars start to bubble, turn off the oven and let cool.*

*Check your recycle book for full instructions.*

### WARMING BREAD

*Set the switch to position  and the thermostat knob to position 150° C.*

*Bread becomes fragrant again if wet with a few drops of water and put into the oven for about 10 minutes at the highest temperature.*

### SIMULTANEOUS COOKING OF DIFFERENT FOODS

*The oven set on position  can cook several different foods together. Foods as diverse as fish and cakes can be cooked together without the cross transference of flavours. This is because the fats and cooking smell that would normally be deposited on the different foods are oxidised and are not absorbed by the foods. The cooking temperature of the foods, however must be within 20°-25°C of each other. The food with the longest cooking time will be put into the oven first and the other foods are added as necessary according to their cooking times.*

### ROASTING

*To obtain classical roasting, it is necessary to remember:*

- *that it is advisable to maintain a temperature between 180° and 200 °C.*
- *that the cooking time depends on the quantity and the type of foods.*

## GRILLING AND “AU GRATIN”

*As the hot air completely covers the food to be cooked, grilling may be done with the food on the rack in the oven. The knob should be switched to position .*

*The thermostat should be set to 50-200°C and the oven pre-heated.*

*The food should be placed on a rack in the oven for the required cooking time.*

*Adding a few dabs of butter before the end of the cooking time gives the golden “au gratin” effect.*

**Always grill with the oven door closed.**

## USE OF THE GRILL

*Preheat the oven for about 5 minutes with the door closed.*

*Introduce the food to be cooked, positioning the rack as close to the grill as possible.*

*The dripping pan should be placed under the rack to catch the cooking juices and fats.*

**Always grill with the oven door closed.**

**WARNING: Accessible parts may become hot when the grill is used. Children should be kept away.**

## Electronic programmer (Bottom main oven only)

The electronic programmer is a device which groups together the following functions:

- 24 hours clock with illuminated display
- Timer (up to 23 hours and 59 minutes)
- Program for automatic oven cooking
- Program for semi-automatic oven cooking

### Description of the buttons:

-  Timer
-  Cooking time
-  End of cooking time
-  Manual position; and cancels the set program
-  Plus function to increase the number shown on the display
-  Minus function to decrease the number shown on the display or to change the buzzer frequency

### Description of the illuminated symbols:

**AUTO** -flashing - Programmer in automatic position but not programmed

**AUTO** - always illuminated - Programmer in automatic position with program inserted.

 Automatic cooking taking place

 Timer in operation

 and **AUTO** - flashing - Program error.  
(The time of day lies between the calculated cooking start and end time).

### Note:

Select a function by the respective button and, in 5 seconds, set the required time with the  $+$  /  $-$  buttons ("one-hand" operation).

A power cut will reset the clock to zero and cancels the set programs.

Figure 17



## ELECTRONIC CLOCK (fig. 18)

The illuminated figures on the clock represent hours and minutes on 24 hour clock. When first connected, or after a power failure, three zeros will flash on the display. To set the time press the  button and then the + or - . Please note that changing the hour button deletes any cooking program.

Figure 18



## NORMAL COOKING WITHOUT THE USE OF THE PROGRAMMER

To manually use the oven without the aid of the programmer, it is necessary to cancel the flashing AUTO by pushing the button  (AUTO will be switched off and the symbol  will come on - Fig. 19).

**Attention:** If the **AUTO** symbol is on, a cooking program has already been programmed. By pressing the  you can cancel the set program & switch to manual mode. If the oven is switched on, you must manually switch it off.

Figure 19



## ELECTRONIC TIMER

The timer program consists only of a buzzer which may be set for a maximum period of 23 hours and 59 minutes. If **AUTO** is flashing on the panel, push the  button. To set the time, push the  button and the  or  until you obtain the desired time on the panel (fig. 20).

Having finished the setting, the clock hour will appear on the panel and the  will be illuminated.

The countdown will start immediately and the time remaining is shown by pressing the .

At the end of the elapsed time, the  will go out and an intermittent buzzer will go off; this can be stopped by pressing any of the buttons.

.

## SETTING THE FREQUENCY OF THE AUDIBLE SIGNAL

The selection from 3 possibilities of sound can be made by pressing the  button.

Figure 20



## AUTOMATIC OVEN COOKING

To cook food automatically in the oven, it is necessary to:

1. Set the length of the cooking time
2. Set the end of the cooking time
3. Set the temperature and the oven cooking program.

These operations are performed as follows:

1. Set the length of the cooking time by pushing the  button and the  button to advance, or  to go back if you have passed the desired time (fig. 21). The **AUTO** and the  symbol will be on.
2. Set the end of the cooking time by pressing the  button (the cooking time already added to the clock time will appear), and the  button (fig. 22); if you pass the desired time you may get back by pushing the  button. After this setting, the  symbol will go off. If after this setting, the **AUTO** flashes on the panel and a buzzer sounds, it means there was an error in the programming. If this is the case, modify the end of cooking time or the cooking time itself by repeating the procedure above.
3. Set the temperature and the cooking program by using the switch and thermostat knobs of the oven (see specific chapters).

The oven is now set to turn on and off at the programmed times.

During cooking, the  symbol remains on. By pushing the  button you can see the time that remains until the end of cooking.

The cooking program may be cancelled in any time by pushing .

At the end of the cooking time the oven will turn off automatically, the  symbol will turn off, **AUTO** will flash and a buzzer will sound, which can be turned off by pushing any of the buttons.

Turn the temperature and thermostat knobs to zero and set the programmer to "manual" by pressing the .

**Attention:** A power failure resets the clock back to zero and cancels the set programs. After a power failure, three zeros will flash on the panel.

Figure 21



## SEMI - AUTOMATIC COOKING

This function is only used to set the **END** of the cooking time of the oven. There are two ways of setting this function.

1. Set the length of the cooking time by pushing the  button and the  button to advance, or  to go backwards (Fig. 21). This sets the desired “stop” time.

or

2. Set the end of the cooking time by pushing the  button and the  button to advance, or  to go backwards if you have passed the desired time (Fig. 22).

**AUTO** and the  symbol will be on.

Then set the temperature and the cooking program using the oven switch and thermostat knob (see relevant sections for details).

The oven is now set to turn on and off at the programmed times.


During cooking, the  symbol remains on and by pressing the button  you can see the time that remains till the end of the cooking.

The cooking time can be cancelled at any time by pushing the  button.

At the end of the cooking, the  symbol will turn off, the **AUTO** will flash and a buzzer will sound. The buzzer can be cancelled by pressing any of the buttons.

Turn the temperature and thermostat knobs to zero and set the programmer to “manual” by pressing the  button.

Figure 22

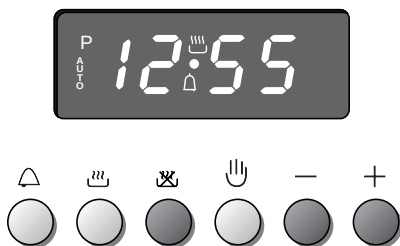

# CLEANING and MAINTENANCE

## GENERAL ADVICE

- **Before you begin cleaning, you must ensure that the appliance is switched off.**
- *It is advisable to clean when the appliance is cold and especially when cleaning the enamelled parts.*
- *Avoid leaving alkaline or acidic substances (lemon juice, vinegar, etc.) on the surfaces.*
- *Avoid using cleaning products with a chlorine or acidic base.*
- **Do not use a steam cleaner because the moisture can get into the appliance thus make it unsafe.**
- *Stainless steel surfaces: clean with a suitable product. Always dry thoroughly.*

## ENAMELLED PARTS

- *All of the enamelled parts must be washed only with a sponge and soapy water or with non-abrasive products.*
- *Dry, preferably, with deer skin.*

## STAINLESS STEEL SURFACE

- *The stainless steel front panels on this double oven (facia, oven doors) are protected by a finger-print proof lacquer. To avoid damaging this lacquer, do not clean the stainless steel with abrasive cleaners or abrasive cloths or scouring pads.*

**ONLY SOAP/WARM WATER MUST BE USED TO CLEAN THE STAINLESS STEEL SURFACES.**

## OVENS

- *The ovens with smooth enamel must be cleaned after every use, using suitable products.*
- *Please note that after using the ovens for 30 minutes on the highest temperature eliminates most grime reducing it to ashes.*
- *Do not use abrasive substances to clean the ovens.*
- **Do not store flammable material in the ovens.**

## TILTING GRILL (TOP OVEN AND BOTTOM MAIN OVEN)

- *The grill heating element is self-cleaning and does not require maintenance. The grill is secured to the rear wall of the oven on a hinge system that allows it to be lowered to allow proper access when cleaning the oven ceiling.*  
*To lower the grill of the bottom main oven see page 10.*  
*To lower the grill of the top oven see page 12.*

**Before any cleaning or maintenance operation, disconnect the cooker from mains power supply.**

## ADVICE FOR USE AND MAINTENANCE OF CATALYTIC PANELS (BOTTOM MAIN OVEN ONLY)

The catalytic panels are covered with special microporous enamel which absorbs and does away with oil and fat splashes during normal baking over 200°C.

If, after cooking very fatty foods, the panels remain dirty, operate the oven "idling" on max temperature for about 30 minutes.

These panels do not require to be cleaned, however it is advised to periodically remove them from the oven (at least the side panels) and to wash them with tepid soapy water and then wipe off with a soft cloth.

**DO NOT CLEAN OR WASH THEM WITH ABRASIVE PRODUCTS OR WITH PRODUCTS CONTAINING ACIDS OR ALKALIS.**

The side panels are reversible and when the catalytic microporous enamel degrades, they can be turned to the other side.

## GREASE FILTER (BOTTOM MAIN OVEN ONLY)

- Clean the filter after any cooking! The grease filter can be removed for cleaning and should be washed regularly in hot soapy water (fig. 23).
- Always dry the filter properly before fitting it back into the oven.

## REPLACING THE OVENS LIGHT

Before any maintenance is started involving electrical parts of the appliance, it must be disconnected from the power supply.

**WARNING:** Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

- Let the oven cavity and the heating elements cool down;
- Switch off the electrical supply;
- Unscrew the protective cover (fig. 24);
- Unscrew and replace the bulb with a new one suitable for high temperatures (300°C) having the following specifications: 230-240V 50 Hz, 15W, E14
- Refit the protective cover

**Note:** Oven bulb replacement is not covered by your guarantee.

Figure 23


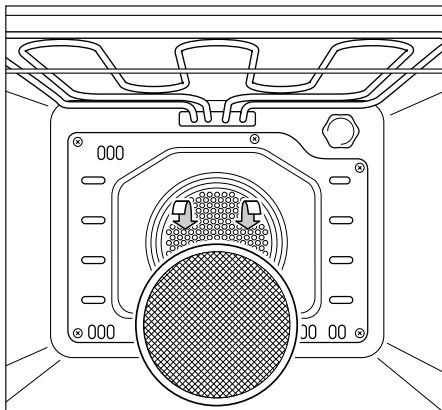


Figure 24

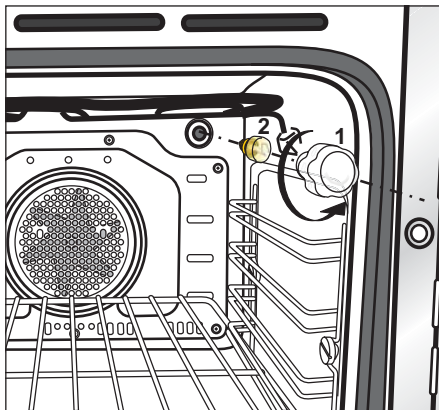

## REMOVING THE OVEN DOOR

The oven door can easily be removed as follows:

- Open the door to the full extent (fig. 25a).
- Open the lever "A" completely on the left and right hinges (fig. 25b).
- Hold the door as shown in fig. 25.
- Gently close the door (fig. 25) until left and right hinge levers "A" are hooked to part "B" of the door (fig. 25b).
- Withdraw the hinge hooks from their location following arrow "C" (fig. 25d).
- Rest the door on a soft surface.
- To replace the door, repeat the above steps in reverse order.

Figure 25a

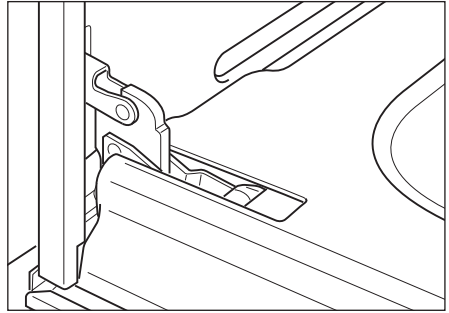


Figure 25b

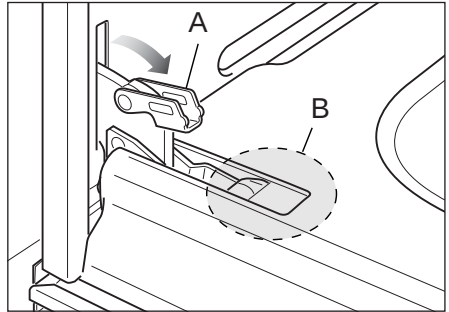


Figure 25c

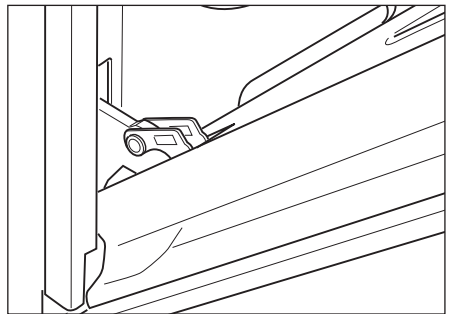


Figure 25d


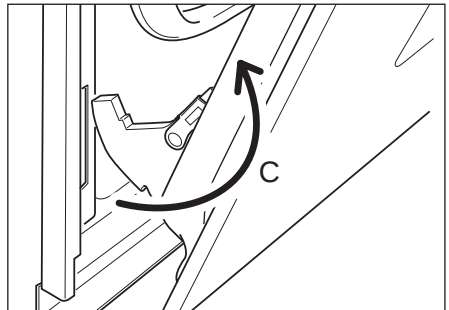


Figure 25

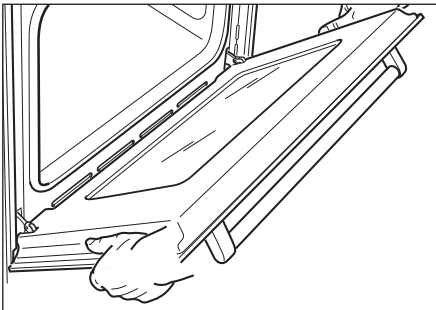

## **TROUBLESHOOTING:**

*If you experience a problem with your oven, check the following points before calling our Customer Service Centre for assistance.*

- 1. The power is switched on.*
- 2. The controls are switched on.*
- 3. The electronic timer is set to manual.*
- 4. Both the fuse and the mains fuse are intact.*

*Should you still require assistance please contact our Customer Service Centre for your nearest Authorised DeLonghi Service Agent.*



*Living innovation*

*Cod. 1102630 B9*