



De'Longhi Appliances
via Seitz, 47
31100 Treviso Italia

Instructions for use
Инструкция по эксплуатации
Інструкція з експлуатації

CONVECTION OVEN
АЭРОГРИЛЬ
АЕРОГРИЛЬ



electrical connection (uk only)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

WARNING - THIS APPLIANCE MUST BE EARTHED


IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following: Read all instructions, safeguards, and warnings before using the appliance.

Symbols used in these instructions

Important warnings are identified by these symbols.

It is vital to respect these warnings.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Danger of burns!

Failure to observe the warning could result in scalds or burns.



Please note:

This symbol identifies important advice or information for the user.

Warnings



Please note:

- Read all instructions.
- Place oven securely in center of counter or work space.
- Use two hands when moving the oven.
- The oven can not be placed near the wall (while using). Always leave at least 5 cm between the oven and the wall.



Important!

- Always turn off the power switch before plugging or unplugging oven.
- Secure the lid on the oven before turning on power.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- This appliance is for household use only; it is designed to process normal household quantities. It is not suitable for continuous or commercial operation.

- This is a household appliance only.

It is not intended for use: in staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

- Do not disassemble the product. There are no user serviceable parts.
- Do not leave the appliance unattended while in use.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use appliance for other than intended use.
- A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.



Danger!

- Do not place appliance where it can fall or be pulled into water or other liquid.
- Do not allow the electrical parts of the lid to get wet when cleaning the appliance.
- Do not reach for an appliance that has fallen into water. Unplug immediately!
- Never operate this appliance if it is not working properly, if it has been dropped or damaged, or dropped into water or if it has a damaged cord or plug. Return the appliance to an authorized customer service center for inspection, repair, or adjustment.
- Use this appliance for its intended use as described in this brochure. Do not use any other accessories or attachments not recommended by the manufacturer. They may result in fire, electrical shock, or personal injury.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner or in a heated oven.
- Turn the unit "off" before removing the lid to check or turn food.
- To protect against electrical shock do not immerse cord, plugs, or lid in water or other liquid.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn power switch to "off", then remove plug from wall outlet.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.



Danger of burns!

- Do not touch the lid and or any surfaces on the heater assembly during operation. The air inside the cooking dome reaches a temperature of approximately 250°C which makes the surface very hot and may cause burns.
- Do not move the appliance while it contains hot food. Use extreme caution when removing hot lid, inner pot and cooking racks.
- Use the handle when lifting the inner pot from the base
- Do not touch the hot surfaces. Use the handles provided.
- Use extreme caution when disposing of hot grease.



The appliance complies with the following EC directives:

- Low Voltage Directive 2006/95/EC and subsequent amendments;
- EMC Directive 2004/108/EC and subsequent amendments
- Materials and accessories coming into contact with food conform to European regulation (EC) no. 1935/2004.

Disposing of the appliance

In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.



 
Technical data

Model number	EOA1165.W
Power supply	220-240V~50/60Hz
Rated power input	1150-1350W


The next generation in cooking

With you can prepare delicious, healthful meals in less than half the time of traditional methods. What makes these superior results possible is our revolutionary approach to certain time-honored cooking methods. Professional cooks have long known that they could improve upon traditional oven cooking by using a fan to accelerate the circulation of the oven's hot air. This traditional convection oven consists of a fan mounted on one side of a metal box. The oven improves upon traditional convection ovens in the following ways:

- The lid is made of glass, not metal, so that you can clearly see what you are cooking from all sides.
- The oven combines a circular bowl with a fan mounted in the lid so that hot air currents move down over the food, around the bowl's sides, and then back up to the fan. This creates a tornado-like flow of constantly moving, super-heated air that cooks and browns food quickly and thoroughly.
- The oven uses cooking racks that allow you to cook two levels of food at once. In addition, when meat, poultry, or fish is cooked on the lower rack, fats and oils are blown away through the grating. You will cook lighter, more nutritious meals.

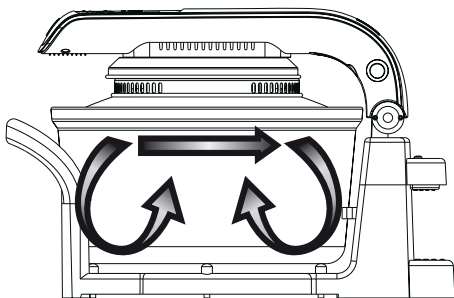

Product and accessory diagram

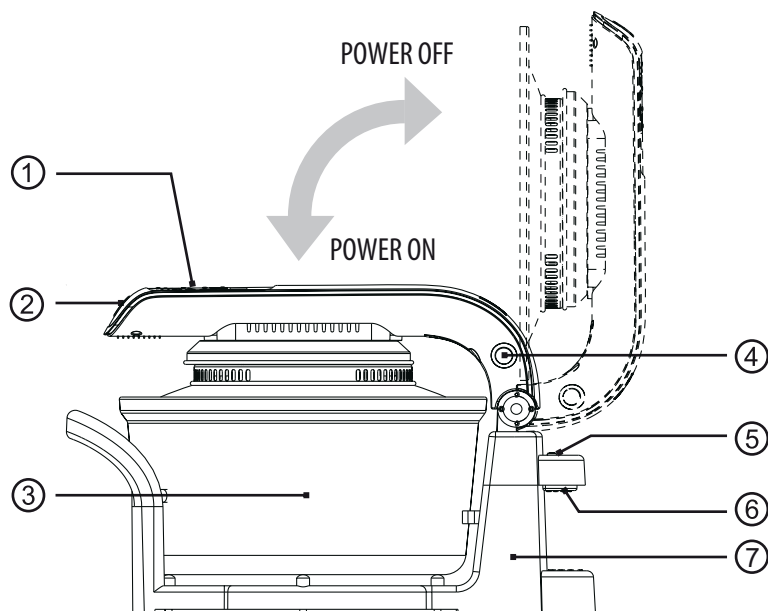 

1. Control panel
2. Power indicator light
3. Glass bowl
4. Power Switch
5. Expansion safety lock
6. Expansion release button
7. Bowl stand and handle

 
Standard accessories



Tongs




Low rack



Dual rack



 Extended ring (*optional*)

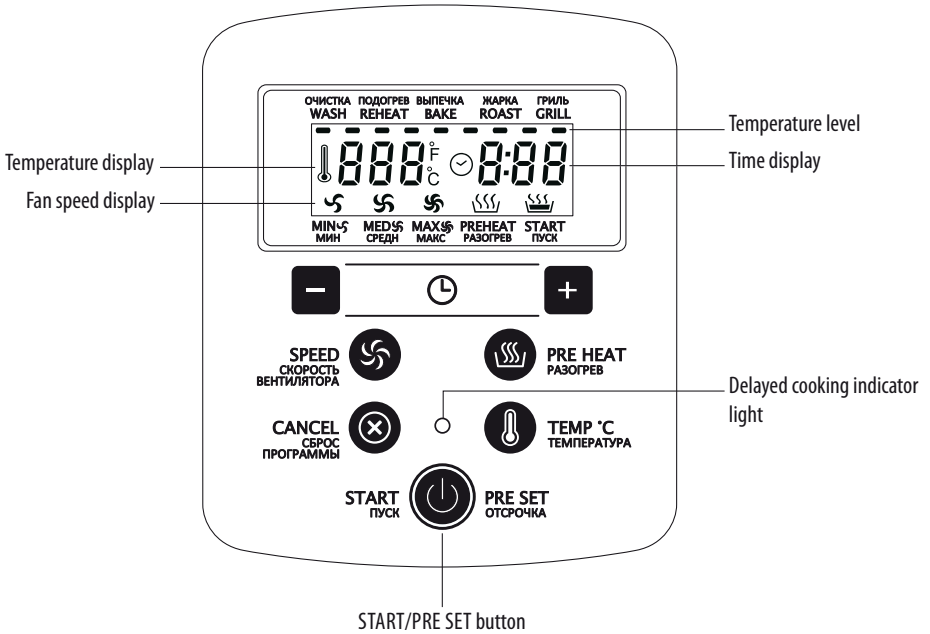

Delayed cooking setting

1. After setting the "SPEED", "TEMP °C", "⌚ (time)", press and hold the "START/ PRE SET" button 2 seconds to enter the "Delayed cooking mode". When enter the "Delayed cooking mode", the delayed cooking indicator light will flash and the timer will turn to "0:00" and flash also. Set delay time by pressing the up or down key. The timer will stop flashing and start to countdown automatically, if the up or down key are not pressed or released for 10 seconds. When delay cooking countdown reaches to 0:00, the cooking will start cooking automatically according to the previous settings.
2. During the delay cooking countdown, press and hold "START/ PRE SET" button 2 seconds to exit the "Delayed cooking mode".



Please note: Be sure the food can keep fresh during the delay cooking countdown.

how to use expansion device **en**

1. Open the lid and press expansion safety lock and hold at its release position (1), as illustrated in Fig.1 and 2.

i Please note: Do not lift the lid when the lid is closed. The lid will lean downward if it is lifted at closed position.

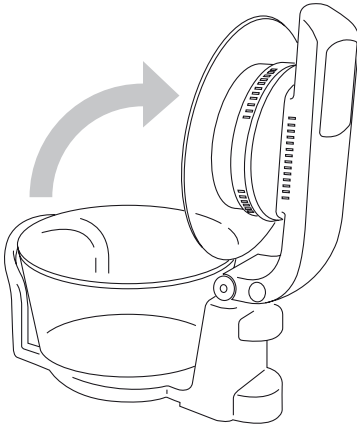 


Fig.1

3. Place the extender ring on the glass bowl and close the lid, as illustrated in Fig. 4.



Fig.3

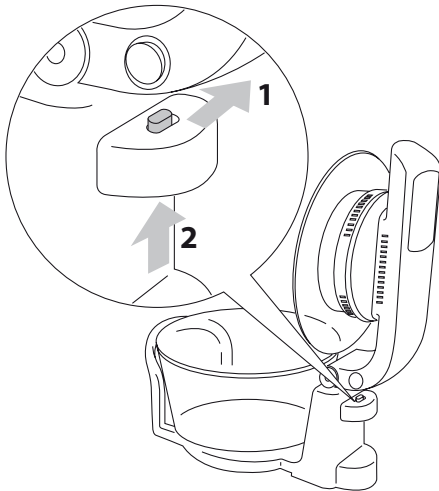 


Fig.2

2. Press the expansion release button upward (2) and lift the lid up. After the lid is lifted slightly, release the extension button and keep lifting until a "click" sound is heard as illustrated in Fig. 2 and 3.

! Important! Do not release the expansion safety lock during moving or holding the appliance.

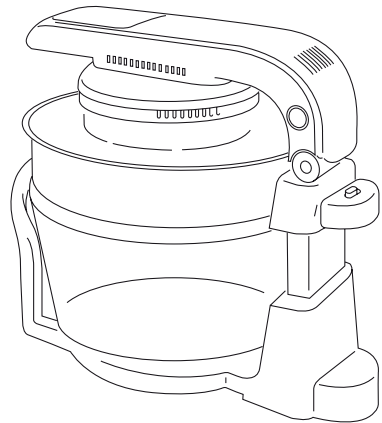 


Fig.4


Preparing your convection oven

 **Please note:** for the first time only...

The Convection Oven should be heated once before cooking with it. While preparing the oven according to the following instructions, the oven will give off a slight burning odor. The oven is actually burning off excess lubricants and will not harm you or the oven.


Follow these easy steps.....


- Wipe the inside of the glass bowl and lid with a damp sponge.
- Attach plug to appliance first, then plug cord into the wall outlet.
- Secure lid on oven and turn power on.


 **Please note:** When the power is turned on, all indicating lights on the control panel will light up 2 seconds and then turned off entering into sleep mode. Press any key to wake up the unit from sleep mode.

- Set timer for 5 minutes.
- Set thermostat to 250°C and press the start button. • After timer has shut oven off, allow to cool for 5 minutes.
- Wipe inside of the glass bowl and lid with a damp sponge a second time.

NOW YOUR CONVECTION OVEN IS READY TO COOK YOUR FIRST MEAL!

 **Important!** Only accessories and glass bowl can be washed in water. Do not wash or immerse the unit in water or in dishwasher. The outer surface can be cleaned by wiping carefully with a damp dish-cloth or sponge.

 **Important!** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

 **Important!** All glass surfaces of the oven and inside accessories get very hot. Touching these surfaces and objects before oven cools will cause a burn. Do not touch any glass part of the oven and accessories until it has cooled down.

how to operate the convection oven **en**

1. Place either the low or the dual rack inside the glass bowl of the oven as illustrated in Fig.5.

i Please note: For cooking multiple items you may use both racks and extender ring at the same time.

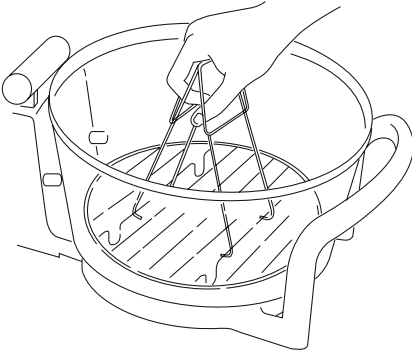 


Fig.5

2. Secure the lid on glass bowl.

i Please note: The lid works as a safety mechanism, lid must be pushed to the horizontal position to turn oven on. When lid is in vertical position, oven is off.

3. Plug the power cord into an electrical outlet. Turn on the power switch at the back of unit as illustrated in Fig.6.

i Please note: When the power is turned on, all indicating lights on the control panel will light up 2 seconds and then turned off entering into sleep mode. Press any key to wake up the unit from sleep mode.

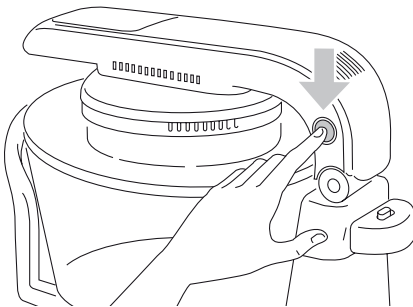 


Fig.6

4. If preheat is required in the recipe, follow this procedure: Press the "PRE HEAT" button. This will cause the oven to operate at its highest temperature and fan speed for 6 minutes. Preheating is complete when the timer reaches

"0:00" and the fan light flashes. Press the "+" button to increase the preheating time, if needed.

i Please note: Always preheat the oven before cooking because preheat can make cooking faster and more evenly.

5. Place food directly on rack, allow sufficient space between the food and the heating element so that the food can't burn or catch fire. Close the lid.
6. **Time Selection:** press the up or down arrow lightly to raise or lower the time selected in increments of 1 minute up to 9 hours and 59 minutes. Holding an arrow button down will cause the increment more quickly.
7. **Temperature Selection:** Press the "TEMP °C" button gently to move the temperature selector through the temperatures one at a time from left to right. A light will indicate the selected temperature. Once 260°C is reached the cycle will start all over again at 65°C (Wash).
8. **Fan Speed Selection:** Press the "SPEED" button to change the fan speed. The indicator light will move from "MAX" to "MIN" setting. "MAX" fan speed (recommended) helps the food cook faster, and improves browning. For slower cooking you may use "MIN" fan speed.

i Please note: Function indicator light will blink as soon as a function is selected. However the oven does not start its operation until the "START/PRE SET" button is pressed.

9. **Clear Selection:** Press the "CANCEL" button to reset all functions. The timer will be reset to "0:00", temperature indicator switched to 65°C (Wash) and fan speed indicator light switched to "MAX".
10. To begin cooking, press the "START/PRE SET" button. The oven starts cooking.

i Please note: The unit will not operate unless time and temperature are set and the lid is down.

i Please note: When the oven temperature reaches the selected temperature during cooking cycle the heating element (halogen bulb) will shut off. However, when the oven temperature drops below the selected temperature, the heating element will automatically go ON again. This is a normal phenomenon.

11. When the cooking cycle is finished and the oven will beep 6 times.

i Please note: After the procedure is over, If the oven temperature is over default temperature, the fan will continue to operate to allow the heating element to cool until the oven temperature drops down to default temperature, the fan will stop operating.

Pause cooking: Before setting time is up, user can pause operation by simply opening the lid and resume cooking by

closing it.

Shut down: To end cooking cycle before time is up, press “CANCEL” button. Time and temperature settings will be erased.

- Now you can remove your food from the oven. Remember, the food and rack are hot inside the glass bowl, pay extra attention. Use the Tongs provided to remove the food and the rack from the oven.

 **Danger!** Always unplug the oven before cleaning.

 **Important!** To avoid breakage allow the glass bowl to cool before cleaning.


Light cleaning

- Turn the power switch off. Unplug oven and let cool.
- Use a sponge or dishcloth with a mild dish washing detergent and warm water to wipe glass bowl clean.
- Rinse well to remove all detergent.

 **Please note:** Never immerse the lid in any liquid.

Normal cleaning

- Turn the power switch off. Unplug oven and let cool.
- Wipe lid and fan housing using a dishcloth or damp sponge with a mild dish washing detergent.
- Do not clean with steel wool pads or abrasive materials.
- Wash wire racks in mild dish washing detergent and water.
- Clean meat parts using a sponge or dishcloth with a mild dish washing detergent, then wipe clean. If scrubbing is necessary, use a nylon or polyester mesh pad.

 **Please note:** Do not use the oven until it's completely dry.

Self cleaning of glass bowl

 
- Add tap water, approximately 3.8 cm, until the water reaches the mark level on the bowl holder.
- Add one squeeze of mild dish washing detergent.
- Close lid and plug in the power cord and then switch on the power.
- Press the “CANCEL” button and then press “START/PRE SET” button. (The hot air circulation creates the turbo action that helps release stubborn residue from bowl.)
- After cleaning rinse in warm water to remove all soap residue.

Drying the oven

- The oven must always be kept dry after cleaning to avoid

moisture in the lid.

- Make sure the oven is unplugged, leave lid open and allow the oven to dry thoroughly as illustrated in fig. 7.

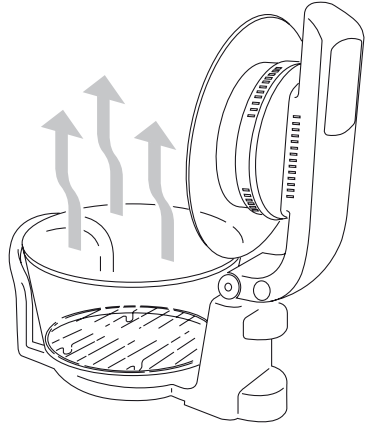

If you encounter the following common troubles, please solve according to the following instructions. If the problem cannot be solved or a cause cannot be found, please contact customer services center.

Symptoms and procedures

Oven will not turn on	<ul style="list-style-type: none"> • Check to see that the power cord is plugged into AC outlet. • Check to see that the AC outlet is operational. • Check that the timer is set to desired time. • Check that the temperature setting is set to desired temperature. • Close the lid all the way down. <p>i Please note: The lid acts as a safety switch and will not allow the oven to work when in the up-right position.</p> <ul style="list-style-type: none"> • Check if the power switch is in ON position.
Oven will not heat up	<ul style="list-style-type: none"> • Check the temperature whether it is set. • If it still does not work, turn off power and please contact your point of purchase.
Lid or glass bowl is cracked	<ul style="list-style-type: none"> • Order replacement part from the service department.
The appliance has a unusually noise or severe vibration	<ul style="list-style-type: none"> • Do not open the lid of oven. Unplug power immediately, and please contact your point of purchase.