

FUNDAMENTAL SAFETY WARNINGS

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Never clean by immersing the appliance in water.
- Do not use the appliance if the lid protecting the rotating part is damaged or ruined.
- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the plug or cord is damaged, it must be replaced by Customer Services only to avoid all risk.

FOR EUROPEAN MARKETS ONLY:

- Always unplug the appliance when left unattended and before assembly, taking apart or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.

SAFETY WARNINGS



Danger! Failure to observe the warning may result in life threatening injury by electric shock.

This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- Before cleaning the appliance, turn it off and unplug from the main socket.



Important: Failure to observe the warning could result in injury or damage to the appliance.

- Keep all packaging (plastic bags, polystyrene foam) away from children.
- Do not locate the appliance above or near electric or gas hobs or a hot oven.
- Make sure there are no foreign objects in the coffee mill.
- The blades are sharp. Take care when handling.
- Never remove the lid until the blades are completely stationary. After releasing the button, the blades take about 2-3 seconds to stop moving.
- Avoid contact with moving parts.

Designated use

This appliance must be used exclusively for the purpose for which it was expressly conceived. All other use is considered improper.

This appliance is not suitable for commercial use.

The manufacturer is not liable for damage deriving from improper use of the appliance.

Never try to chop ice or use the appliance other than as indicated in the Instruction for Use.

Instruction for Use

Read this Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in injury or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.



Please note:

Keep this Instruction for Use. If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

DESCRIPTION

(page 3 - A)

- A1. Cleaning brush
- A2. Coffee container lid
- A3. Removable coffee container
- A4. Cable tidy
- A5. Cup number selection ring (KG49 only)
- A6. Grinding level indicator lights (KG49 only)

CHECKING THE APPLIANCE

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact De'Longhi Customer Services.

CONNECTING THE APPLIANCE



Danger!

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

USE

- Rest the appliance on a flat surface.
- Unscrew the lid of the container anticlockwise and lift (fig. 1).
- Place the required quantity of coffee beans in the container (fig. 2)
- Screw the lid back on, turning it clockwise as far as it will go (fig. 3). If the lid is not screwed on correctly, a safety device prevents the coffee mill from starting.
- Extract the required length of cord and plug into the mains socket (fig. 4).
- In models with selection ring (A5), turn the ring to the quantity of coffee corresponding to the number of cups for which you want to grind beans (fig. 5).

This is intended as an indication only as the quantity varies according to taste, the type and roasting of the coffee beans and the grinding level selected. Never fill above the MAX level marked on the coffee container.

- Press the lid to start the coffee mill (fig. 6) and hold it down until the required grinding level has been reached.
- In models with grinding indicator lights (A6) (coarse, medium, fine), press the lid and release when the light corresponding to the required grinding level comes on. Bear in mind that releasing the lid, even if only for a moment, resets the appliance and the grinding begins again as if the beans were still whole.

TIPS

- Always keep the lid of the beans container hermetically closed to preserve the full taste and aroma of the coffee beans.
- Grind only the quantity of coffee needed for immediate use.
- Never overfill the beans container. As a rough guide, use a tablespoon of beans per cup (e.g. 4 tablespoons of beans for 4 cups of coffee). As you use the mill, you will of course discover the optimum quantities for your own personal taste.
- For models with grinding level lights, "COARSE" is ideal for percolators, "MEDIUM" for drip and moka coffee and "FINE" for espresso coffee makers.
- Always wait at least one minute before using the coffee mill again to avoid the appliance overheating.
- To guarantee the freshness of the coffee, always clean the appliance after every use, particularly when grinding coffee after having ground other food such as sugar. Using the appliance to grind oily (e.g. peanuts) or hard (e.g. rice) seeds is not recommended.

CLEANING



Danger!

Before performing any cleaning operations, the machine must be turned off and disconnected from the mains power supply. Never immerse the appliance in water.

- Wash the lid with water or neutral washing up liquid. Rinse thoroughly and dry.
- To make it easier to clean the beans container, extract the container by turning it clockwise to release it then lifting it upwards (fig. 7).
- Remove ground coffee residues with the brush provided with the appliance (fig. 8). Never immerse the beans container in water to avoid damage.
- To replace the container in the appliance, insert it then turn it anticlockwise until it locks in place.
- Clean the outside of the appliance with a soft cloth.

- To put the appliance away, wind the power cable on the cable tidy (A4).

TECHNICAL DATA

Voltage: 220-240V ~50/60 Hz max. 10A

Absorbed power: 170 W

Weight: 1 Kg



The appliance complies with the following EC directives:

- Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.

DISPOSAL



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

ELECTRICAL REQUIREMENTS (UK ONLY)

Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity.

Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.


Note: Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

N.B. We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

IMPORTANT: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW
BLUE
BROWN

EARTH
NEUTRAL
LIVE

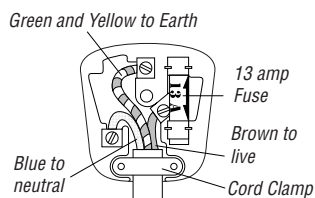

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green and yellow.
- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.

Only 13amp replacement fuses which are approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

Warning - this appliance must be earthed