

## FUNDAMENTAL SAFETY WARNINGS

---

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Never clean by immersing the appliance in water.
- Do not use the appliance if the cover to protect the rotating part is damaged or ruined.
- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the plug or power cable is damaged, it must be replaced by customer services only to avoid all risk.

### FOR EUROPEAN MARKETS ONLY:

- Always unplug the appliance when left unattended and before assembly, taking apart or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children must not play with the appliance.

---

### IMPORTANT SAFEGUARDS



**Danger!** Failure to observe the warning may result in life threatening injury by electric shock.

This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- Before cleaning the appliance, turn it off, unplug from the mains socket.



**Important:** Failure to observe the warning could result in injury or damage to the appliance.

- Keep all packaging (plastic bags, polystyrene foam) away from children.
- Do not place the appliance on or near a gas or electric stove, or in a heated oven.
- Check that there are no foreign objects inside the coffee grinder.
- Avoid contact with moving parts.

### Designated use

This appliance must be used exclusively for the purpose for which it was conceived. All other use is considered improper. This appliance is not suitable for commercial use.

The manufacturer is not liable for damage deriving from improper use of the appliance.

Never try to crush ice or use the appliance in a manner different from that stated in the instructions.

## Instruction for Use

Read this Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.



### **Please note:**

Keep this Instruction for Use. If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

## DESCRIPTION

(page 2 - A )

- A1. Coffee container lid
- A2. Removable grinder
- A3. Coffee container
- A4. ON/OFF button
- A5. Pre-ground coffee container lid
- A6. Pre-ground coffee container
- A7. Compartment for pre-ground coffee container
- A8. Appliance body
- A9. Grinding selection dial
- A10. Selection dial for number of cups

## CHECKING THE APPLIANCE

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact De'Longhi Customer Services.

## CONNECTING THE APPLIANCE



### **Danger!**

Check that the mains power supply voltage corresponds to the value indicated on the rating plate on the bottom of the appliance.

Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

## BEFORE USE

Before using the coffee grinder, clean the outer housing and the container for loading coffee beans with a clean damp cloth.

Wash the lid of the container, the pre-ground coffee container and its lid in hot soapy water, then rinse and dry; these can be washed in the top rack of the dishwasher.



### **Important:**

The grinder should not be washed and must always be kept dry. Clean the grinder with a stiff bristle brush.

## USING THE APPLIANCE

- Place the appliance on a flat surface.
- Place the pre-ground coffee container (A6) with its lid (A5) in the compartment (A7).
- Remove the lid of the container for loading coffee beans (Fig. 1)
- Pour the desired amount of coffee beans into the container (Fig. 2): the coffee grinder grinds about 1 tablespoon of coffee per cup selected. Do not fill above the MAX level marked on the container.
- Replace the lid and make sure it is positioned correctly, pushing it firmly into place (Fig. 3).  
If the lid is not correctly positioned, the coffee grinder does not work.
- Plug the appliance into the mains socket (fig. 4).
- Set the dial (A10) to the quantity of coffee corresponding to the number of cups for which you want to grind the beans (Fig. 5). Use this ratio as a rough guide only, since the amount will vary according to the taste, type and roasting of coffee beans as well as the fineness of grinding selected.
- Select the grind of coffee by adjusting the dial to the type of coffee desired (Fig. 6).
- Press the ON/OFF button (A4) to operate the coffee grinder. Once the previously selected amount of coffee is reached, the appliance will stop automatically.
- If you want to stop the appliance before grinding is finished, press the ON/OFF button.
- Remove the pre-ground coffee container, gently tap the container, remove the lid and pour the pre-ground coffee into the filter of the coffee machine.

## TIPS

- Always keep the lid of the coffee beans container tightly closed to retain all their flavour and aroma.
- Grind only the amount of coffee needed at the time.
- Never overfill the coffee beans container. As a rough guide, use a tablespoon of beans per cup (e.g. 4 tablespoons of beans for 4 cups of coffee). As you use the grinder, you will of course discover the optimum quantities for your own personal taste.
- Use the dial to select the grinding fineness (Fig 6) to adjust the grinding according to the type of coffee used. "COARSE" grinding is ideal for percolators; "MEDIUM" grinding is ideal for drip and moka; "FINE" grinding is ideal for espresso ma-

chines. Do not change the grind setting when the appliance is in operation.

- After grinding coffee, always wait at least one minute before using the coffee mill again to avoid the appliance overheating.
- To ensure good quality in terms of coffee freshness, always clean the appliance after each use, especially when grinding coffee after grinding other foods (e.g. sugar). It is not advisable to grind oil seeds (e.g. peanuts) or seeds which are too hard (e.g. rice).

## CLEANING



### **Danger!**

Before performing any cleaning operations, the machine must be turned off and disconnected from the mains power supply. Never immerse the coffee machine in water.

- Unplug from the mains.
- Wash the lid with water and mild detergent. Rinse thoroughly and dry.
- To remove the grinder (A2), set the grinding selection dial (Fig. 6) to the "FINE" position, then take hold of the top of the appliance's grinder with your fingers and turn it clockwise, then pull vertically to remove it.
- Carefully clean the inside of the coffee beans container (A3) with a damp cloth.

- To reposition the upper grinder, set the grinding selection dial (Fig. 6) to the "COARSE" position, insert the grinder and turn it once in an anti-clockwise direction.
- Carefully clean the pre-ground coffee container, its lid and the body of the appliance with a damp cloth, making sure that there is no residual coffee in the pre-ground coffee container.

## TECHNICAL DATA

Voltage: ..... 220-240V ~50/60 Hz max. 10A

Absorbed power: ..... 110 W

Weight:

KG79 ..... 1,5 Kg

KG89 ..... 1,7 Kg

**CE** The appliance complies with the following EC directives:

- Materials and accessories coming into contact with food conform to EC regulation 1935/2004.

## TROUBLESHOOTING

The appliance does not work.	Make sure the plug is properly inserted in the socket and that the socket is working properly.
	The lid of the coffee beans container is not positioned correctly.
	The pre-ground coffee container or its lid are not properly positioned.
The appliance stops during operation.	The appliance is overheating. The motor thermal fuse has intervened. Contact the authorised Customer Services.
	The maximum capacity of the coffee beans container or pre-ground coffee container has been exceeded
The grinding selector dial does not work.	Check that the upper grinder is correctly positioned.