

IMPORTANT WARNINGS

Safety warnings



Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance is exclusively for the use of toasting bread products. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Before inserting the plug into the socket, ensure that: The voltage of the socket corresponds to the value indicated on the information label, attached to the appliance. The electrical socket is earthed. The manufacturer does not accept any liability if this requirement is not observed.
- The use of adapters, multiple socket units and/or extension cables is not recommended.
- To avoid electric shocks, never let the toaster, cord or plug get wet, and NEVER put your hand or anything metal and sharp objects e.g. a knife or foil, into the toaster.
- Do not touch the appliance with wet or damp hands.
- Do not use the appliance with bare or wet feet.
- Always unplug the toaster when not in use, before cleaning or attempting to clear jammed bread.



Failure to observe the warning could result in injury or damage to the appliance.

- The appliance is designed and produced for domestic use only. It is not suitable for use in: staff kitchens in shops, offices and other workplaces, farm houses, hotels, motels or other holiday accommodation, guest houses.

- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- This appliance can be used by children aged 8 upwards and by persons with reduced physical, sensory or mental capabilities or who lack of experience and knowledge if they are supervised or have been given instructions concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children under 8 years of age.
- Do not unplug the appliance from the outlet by pulling on the cord.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Do not immerse the appliance, the plug, or the electrical cable in water.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.
- Details for cleaning refer to cleaning part of user manual.



Failure to observe the warning could result in burns or scalds.

- When the machine is running, the

external surface temperature can be very high. Always use handles or protective gloves if necessary.

- Bread is a foodstuff which may catch fire. Do not use this appliance under or next to curtains or other combustible material.
- Do not cover the appliance while it is in use, it could overheat and catch fire.
- We recommend that you do not use your toaster directly under wall cupboards.
- Burnt food can catch fire, so never leave your toaster on unattended, and set the browning control lower for thin or dry bread which can burn more easily.
- Never warm food with a topping or filling (e.g. pizza): if it drips into the toaster it could catch fire.
- Clean the crumb tray regularly: crumbs can smoke or burn.



Please note:

This symbol indicates recommendations and important information for the user.

- After removing the appliance from the packaging, make sure that the product is complete and in perfect condition. Ensure all labels and packaging have been removed from the toaster.
- Remove any dust that may have accumulated on the appliance during transit by dusting it off with a soft dry cloth.
- Do not let cord hang over edge of table or counter, or touch hot surfaces (for example the top plate **H**).



This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

- A** Bread toasting slots
- B** ON lever
- C** Slider browning control
- D** Crumb collection tray
- E** Defrost/indicator light button
- F** Reheat/indicator light button

- G** Stop/cancel button
- H** Top plate
- I*** Removable "Warming Rack" (only some models)
- J*** Dust cover (only some models)

USE

- Plug into the mains.
- Before using for the first time, heat up the empty toaster 3 times at max setting. This will remove possible odours caused by manufacturing processes. Ventilate the room after each cycle.
- Place the slices of bread in the toasting slots (**A**), select the desired browning by moving the slider (**C**) then lower the lever (**B**) as far as it will go. Do not cook or let the bread directly on the top plate (**H**) as this part is not intended for cooking purpose.



Please note: if the appliance is not plugged into the mains, the lever (**B**) will not stay down.

- When toasting is complete, the lever rises automatically, together with the slices of bread. **If the lever is accidentally blocked or held down, toaster may not switch off automatically.**
- If the bread is not sufficiently toasted, select a darker toasting level by moving the slider (**C**). Alternatively, if the toast is too dark, select a lighter toasting level.
- Toasting can be interrupted at any moment simply by pressing the stop/cancel button (**G**).
- Do not use the toaster empty (without slices of bread).
- Do not use very thin or broken slices of bread.
- Never use force to insert excessively large pieces of food.

"Defrost" function

You can toast frozen slices of bread by pressing the "defrost" button (**E**) immediately after lowering the lever (**B**). The toasting cycle will be prolonged in order to achieve the desired toasting level.

The light stays on while the defrost function is in use.

"Reheat" function

Lower the ON lever (**B**) and press the "reheat" button (**F**). The reheat light stays on while the reheat function is in use. The reheat time is fixed and cannot be adjusted by means of the toasting level knob.

Using the stop/cancel button

To stop toasting, press the stop/cancel button (**G**) at any moment.



Important! do not force the ON lever (B). Always use the stop/cancel button (G).

Crumb tray

The crumb tray (D) must be emptied regularly as accumulated crumbs could represent a fire risk. After toasting, allow the toaster to cool, then extract the crumb tray (D) and empty.

"WARMING RACK" device (L) (only some models)

Use this device to heat croissants.

- Fasten the removable "warming rack" to the appliance as shown in the figure on page 3.
- Rest the croissant on the grill.
- Move the slider browning control (C) to the medium position.
- Press down the control lever (B) until it clicks into place.
- If the croissant is not warm enough, next time select a darker level of toasting.

Dust cover (J) (only some models)

Use the accessory only to prevent the entry of dust inside the toaster during periods of rest. Before switching on the toaster, remove the accessory before to use. DO NOT cover the openings with the accessory during operation, danger of fire! To avoid the risk of burns, always hold the accessory by its plastic handle.

CLEANING - MAINTENANCE

- Before cleaning the toaster or carrying out maintenance, always unplug from the mains.
- Wait for the appliance to cool down before cleaning.
- The outside of the toaster must be cleaned with a damp cloth and using water only. Never use abrasive or flammable liquids cleaning products as they could damage the surface.
- **NEVER IMMERSE THE APPLIANCE IN WATER.**
- When you have finished using the toaster, always unplug from the mains and empty the crumb tray on the bottom of the appliance.
- If slices of toast remain stuck in the appliance, unplug, turn upside down and shake lightly.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"