

**Register Now**   
[www.delonghi.com/register](http://www.delonghi.com/register)

---

# TRNS Series

## OIL FILLED RADIATOR


### Instructions for use

*This product is only suitable for well insulated spaces or occasional use*



---

The DeLonghi logo, consisting of the brand name in a bold, sans-serif font inside a rounded rectangular border.

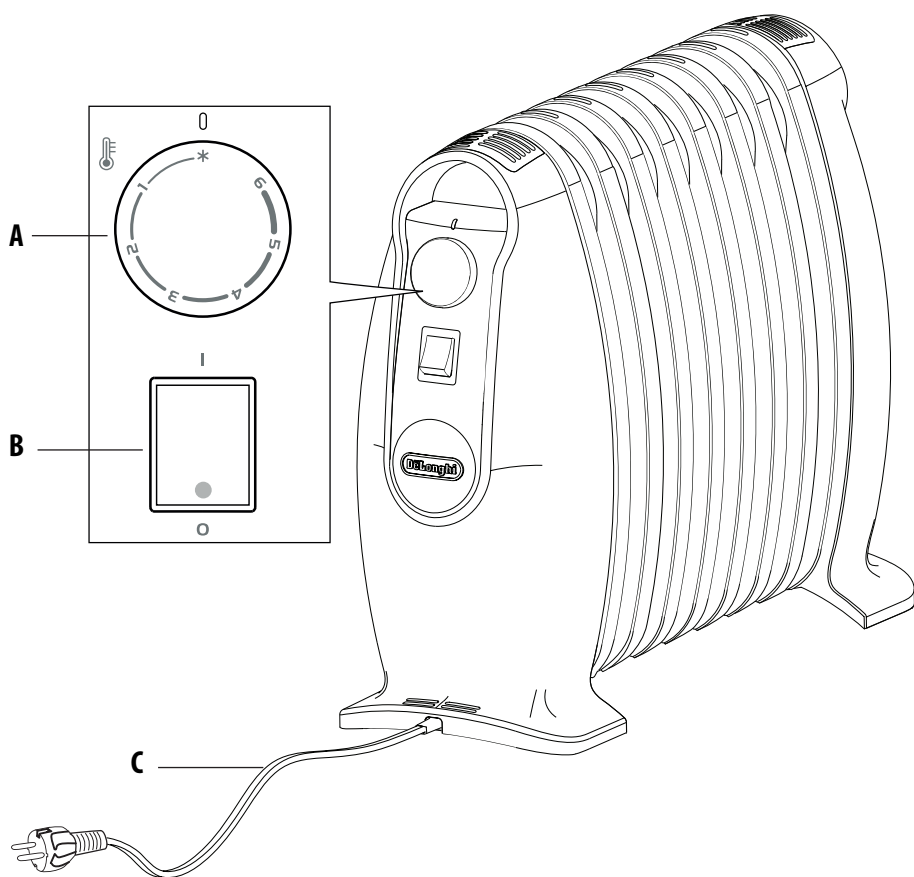

## IMPORTANT WARNINGS

Read all the Instruction for Use carefully before using the appliance. Keep this Instructions for Use.



### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.

- Do not use the heater in the vicinity of bathtubs, wash basins, showers, sinks and swimming pools.
- Never use the heater to dry laundry.
- If the power cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.



### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a

safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**

- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- The body of this radiator is filled with a precise quantity of special oil, so that repairs requiring the opening of the oil body must only be made by the service agent. Any oil leakage must be reported to the Customer Experience, see enclosed guarantee for details.
- When scrapping the heater, follow the regulations concerning the disposal of oil.
- The appliance must not be located immediately below a fixed socket-outlet.
- **CAUTION:** in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.
- Do not obstruct the air intake and outlet area (danger of overheating).



### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.

- **WARNING:** In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to



dangerous overheating.

- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- Never place the power cable on top of the heater while it is hot.
- Do not rest anything on the appliance.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



**Please note:**

This symbol indicates recommendations and important information for the user.

- We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
- Only use this heater on a horizontal and stable surface.
- Always use the appliance in an upright position.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- In order to eliminate the radiator's "new" smell, set it to maximum power for at least two hours when used for the first time. During this operation, the room in which the radiator is located must be ventilated. A little smoke due to the protective substances applied to the heating element before transport may be given off.
- Position the appliance so that the plug and the outlet can be easily reached.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> in area.

- The appliance is fitted with a safety device which will switch off it in case of accidental overheating.  
To reset, please contact Customer Experience, see enclosed guarantee.
- Before putting the appliance away, make sure it is completely cooled and unplugged from the mains socket.  
Do not store in dusty atmospheres.
- The appliance must not be hung.

## Fundamental safety warnings

Dear customer - the plug on the appliance heats up during use. This is completely normal. This HIGH POWER HEATING APPLIANCE complies with our usual high standards. You should, however, make sure that your power socket is in good condition and that the plug on the appliance is plugged into the socket correctly to avoid accidental overheating. If the appliance is used for long periods of time, we recommend checking the plug and mains socket regularly. If in doubt, consult an electrician.

For non-EU countries only:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## DESCRIPTION

- A** thermostat control knob
- B** switch
- C** power cable

## USE

### General features

Remove the appliance from the packaging, turn upside down. Check that neither the appliance nor the power cable has been damaged in any way during transportation.

Do not operate the appliance if damaged

### Electrical connection

Before plugging into the outlet, make sure the voltage of your outlet supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

### Switching on

- Plug into the mains socket.
- Turn the thermostat control knob clockwise to the highest setting **(6)** and switch on.
- Button in position **«I»**: ON (indicator light on).
- Button in position **«0»**: OFF (indicator light off).
- To turn appliance off, press the switch in **«0»** position or remove plug from wall socket.

### Adjusting the thermostat

When the room has reached the required temperature, slowly turn the thermostat anticlockwise until the indicator light goes off (or to the position marked by a click) and no further.

The set temperature will then be regulated automatically and kept constant by the thermostat.

### Frost protection function

With the thermostat in position **✱** and the switch pressed in ON position (**«I»**), the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

## MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool.

The oil-filled electric radiator requires no particular maintenance.

It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

## TECHNICAL CHARACTERISTICS

Supply voltage

See rating plate

Absorbed power

“

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	Be sure it is plugged in and that the electrical outlet is working.	Plug into the power outlet.
	The unit has reached a too high internal temperature	Check that the unit is not covered and let the appliance cool down. If the appliance doesn't work please contact De'Longhi Customer Experience.
	The temperature may be set too low.	Set the temperature to a higher value.
	The thermostat may be set too low.	Turn the thermostat clockwise to a higher setting until the heater restarts.