

## DESCRIPTION

- A Thermostat
- B Switches
- C Comfortemp button
- D Cord holder
- E Wheel

## USE

### Electrical connection

- Before plugging the radiator into the mains, check that the voltage of your mains electricity supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriately dimensioned.
- CONNECT THE RADIATOR TO EFFICIENTLY EARTHED SOCKETS ONLY.

### Models with “Easy wheel” sytem

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish.

Fully unfold the castors by turning them outwards (Fig.1). Turn the radiator back to its upright position.



### Important!

When in use, the radiator should always be kept vertical (wheels at the bottom, controls at the top). Any other position could be dangerous!

## INSTRUCTIONS FOR USE

### Switching on

Turn the thermostat dial clockwise to maximum.

Turn on both switches. The lights on the switches remain on irrespective of the cycle set by the thermostat. When the room reaches the required temperature, turn the dial anticlockwise slowly until you hear a click. The appliance will come on and go off automatically to maintain the required temperature.

### Economiser

For economy of use, the switches can be used singly:


- button in position «MIN» only = minimum power (light on)
- button in position «MED» only = medium power (light on)
- buttons in both positions «MIN» and «MED» = maximum power (lights on)




**Please note:** To turn the radiator off completely,

place both switches in the OFF position.

### Using the thermostat

The thermostat operates on the basis of room temperature and not radiator temperature. Turn the thermostat dial anticlockwise towards the lower numbers to reduce the temperature; turn it clockwise towards the higher numbers to raise the temperature. To turn the appliance off completely, turn the thermostat to minimum  and unplug from the mains.

### Frost prevention mode

Turn the thermostat to the  position and press both switches. The appliance will maintain a room temperature of about 5°C, preventing the pipes from freezing while saving energy. In models with timer, push the teeth inwards.

### COMFORTEMP BUTTON (only some models)

With the “COMFORTEMP” button and both switches pressed, the appliance is automatically set to reach and maintain what is considered to be the comfort temperature.

A green light comes on to indicate activation of “COMFORTEMP”. In this mode the temperature is automatically set only by the “COMFORTEMP”. To deactivate this mode and return to thermostat operation, press the COMFORTEMP button again.

## MAINTENANCE AND CUSTOMER SERVICES

Before performing any operations on the appliance, always unplug from the mains socket and leave to cool. Dust the radiator with a soft damp cloth without using detergents or abrasives.

If the radiator is not used for a long period of time, wrap the cable around the cable tidy and store the appliance in a dry place. This appliance has been made to last many years without problems. In the event of malfunction or doubt, do not try and repair on your own. There would be the danger of fire or electric shock.

Call your nearest customer services (see list of customer service centres).

## TECHNICAL CHARACTERISTICS

Supply voltage	See rating label
Absorbed power	“

**TROUBLESHOOTING**

PROBLEM	CAUSE	SOLUTION
The appliance does not work	The appliance is not plugged into a mains socket	Plug into the mains socket
	The socket is not working properly	Make sure the socket is working
	There are obstructions.	Remove the obstruction and wait until the appliance has cooled down. If the appliance does not work, contact customer services
	The set temperatures may be too low	Set a higher temperature