

IMPORTANT WARNINGS

Read all the Instruction for Use carefully before using the appliance. Keep this Instructions for Use.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- Do not use the heater in the vicinity of bathtubs, wash basins, showers, sinks and swimming pools.
- Never use the heater to dry laundry.
- If the power cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Chil-

dren aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- The body of this radiator is filled with a precise quantity of special oil, so that repairs requiring the opening of the oil body must only be made by the service agent. Any oil leakage must be reported to the Customer Experience, see enclosed guarantee for details.
- When scrapping the heater, follow the regulations concerning the disposal of oil.
- The appliance must not be located immediately below a fixed socket-outlet.
- **CAUTION:** in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.
- Do not obstruct the air intake and outlet area (danger of overheating).



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.
- The use of an extension lead is not rec-



ommended, as overheating of the extension lead may occur during the operation of the heater.

- Never place the power cable on top of the heater while it is hot.
- Do not rest anything on the appliance.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



Please note:

This symbol indicates recommendations and important information for the user.

- We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
- Use this heater on a horizontal and stable surface.
- Always use the appliance in an upright position.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- The heater must be positioned at least 50cm from furniture or other objects.
- The first time you use the appliance, operate it of at least 15 minutes with the thermostat at maximum to eliminate the "new" smell.

A little smoke due to the protective substances applied to the heating element before transport may be given off.

- Position the appliance so that the plug and the outlet can be easily reached even after installation.
- Do not use the appliance in rooms less than 4 m² in area.
- The appliance is fitted with a safety de-

vice which will switch off it in case of accidental overheating.

To reset, please contact Customer Experience, see enclosed guarantee.

- Before putting the appliance away, make sure it is completely cooled and unplugged from the mains socket. Do not store in dusty atmospheres.
- The appliance must not be hung.

Extra Europe market only:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

- A** Thermostat
- B** Power selector
- C** Indicator light
- D** cord holder
- E** wheel

USE

Remove the appliance from the packaging, turn upside down and rest on the polystyrene.

Check that neither the appliance nor the power cable has been damaged in any way during transportation.

Do not operate the appliance if damaged.

Connection

- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.

- CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY. Keep loose clothing or bedding, furniture and flammable material away from the heater's wall outlet.

Models with "Easy wheel" system

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the castors by turning them outwards (Fig. 1).

Turn the radiator back to its upright position.

Instructions for use

Switching on

Plug into the mains. Turn the thermostat as far as it will go to maximum position. Turn the radiator on using the power selector as described below.

- Place the power selector to the "**MIN**" position to select minimum power. (indicator light on)
- Place the power selector in the "**MED**" position to select medium power. (indicator light on)
- Place the power selector in the "**MAX**" position to select maximum power. (indicator light on)

To turn the appliance off, place the selector in the "**0**" position and unplug from the mains.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial slowly anticlockwise until the light goes out (or you hear a "click") and no further. The set temperature will then be regulated automatically and kept constant by the thermostat.

Frost prevention mode

With the thermostat in the ***** position and the power selector set to "MAX", the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not work	The appliance is not plugged into a mains socket	Plug into the mains socket
	The socket is not working properly	Make sure the socket is working
	There are obstructions.	Remove the obstruction and wait until the appliance has cooled down. If the appliance does not work, contact customer services
	The set temperatures may be too low	Set a higher temperature