

## INTRODUCTION

Thank you for choosing a De'Longhi product. Please take a few moments to read the instructions to avoid risks or damage to the appliance.

### Symbols used in these instructions

Important warnings are identified by the symbols below. It is important to respect the warnings.

Failure to respect the warnings could lead to electric shock, serious injury, burns, fire or damage to the appliance.



**Important!**

Failure to observe the warning could result in injury or damage to the appliance.



**Danger of burns!!**

Failure to observe the warning could result in burns or scalds.



**Please note:**

This symbol indicates recommendations and important information for the user.

## IMPORTANT WARNINGS

### Safety warnings



**Important!**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously

supervised.

- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- **WARNING:** In order to avoid  overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.
- The body of this radiator is filled with a precise quantity of special oil, so that repairs requiring the opening of the oil body must only be made by the service agent. Any oil leakage must be reported to the Customer Experience, see enclosed guarantee for details.
- The appliance must not be located immediately below a fixed socket-outlet.

# Important warnings/Description/Use **en**

- Do not use the heater in the vicinity of bathtubs, wash basins, showers, sinks and swimming pools.
- If the power cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- ATTENTION: in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

## **i** Please note:

- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- The first time you use the appliance, operate it of at least 15 minutes with the thermostat at maximum to eliminate the "new" smell. A little smoke due to the protective substances applied to the heating element before transport may be given off.
- Do not obstruct the hot air outlet grilles or the air intake grille on the bottom of the appliance.
- Position the appliance so that the plug and the outlet can be easily reached even after installation.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> in area.
- The appliance is fitted with a safety device which will switch off it in case of accidental overheating. To reset, please contact Customer Experience, see enclosed guarantee.

## **⚠** Danger of burns!!

- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.

**CE** The appliance complies with the following EC directives:

- Low Voltage Directive 2006/95/EC and subsequent amendments;
- EEC Directive 2004/108 on electromagnetic compatibility (EMC) and subsequent amendments;

## Disposing of the appliance

 In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.


## DESCRIPTION

- A** display
- B** on-standby button
- C** power button
- D** decrease button
- E** increase button
- F** timer button
- G** brightness button
- H** eco button
- I** cord holder
- L** wheel

## USE

### "Easy wheel" system

Turn the radiator upside down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the wheels by turning them outwards (Fig. 1). Turn the radiator back to its upright position.

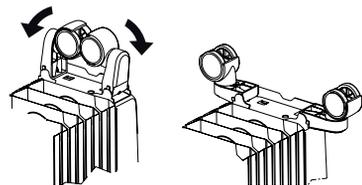

### Location

The heater must not be placed immediately below a power outlet. Do not use this radiator in rooms having a surface area of less than 43 square feet (4 sq.m.).

### Power connection

- Before using the appliance check that your supply voltage is the same of that shown on the rating label

of the unit and that the power socket and power supply line correspond to the load specified.

- Check also the current capacity of your fuses. **CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.**
- This appliance complies with directive 2004/108/ec on electromagnetic compatibility.

The appliance will be set in the stand-by condition.


The display will show the  symbol. Keep loose clothing or bedding, furniture and flammable material away from the power outlet where the heater is plugged in. After an interruption of the power supply (power failure or appliance unplugged) the unit goes always to stand-by. When the unit is switched on by pressing the on-standby button, the operating conditions will be same ones previously set.

## Heating function

To turn the appliance on, press the  (B) button.

Press button  (C) to set the required power level:

MIN (); MED (); MAX (). To select the desired temperature, press button + or - (E or D). By pushing the + or - button once, the temperature (shown on the display) will increase or decrease by 1°C. Keeping the + or - button depressed the value will increase o decrease rapidly.

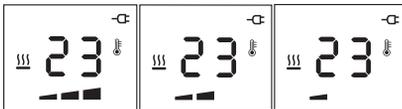

The appliance allows to set the temperature from 5° to 28°C.

## Anti-freeze function

Setting the temperature to 5°C with the "-" button, the appliance will activate the Antifreeze function. The display will show the  symbol, in this way the appliance will turn on automatically, **at the max power**, only if the room temperature falls below 5°C, to prevent freezing conditions. If you wish to go back to the Heating function, press the "+" button once.

## Eco function

When this function is active the appliance automatically sets the most appropriate power level to guarantee optimum comfort while reducing energy consumption.

To activate this function press the "ECO" (H) button. The display will show **eco** symbol. If the selected temperature is much higher then the actual room temperature, the appliance will start automatically and rapidly to heat the room.

The appliance will automatically select the most convenient power level (**MAX-MED-MIN-OFF**).

If **MAX** power level has been selected using the  button, the appliance will cycle between: **MAX-MED-MIN-OFF**.

If **MED** power level has been selected, the appliance will cycle between: **MED-MIN-OFF**.

If **MIN** power level has been selected, the appliance will cycle between: **MIN-OFF**.

## Working indicator

The symbol  indicates the heating status by means of its colors.

 **RED:** the unit is heating at the maximum power.

 **YELLOW:** the unit is heating at the medium power.

 **GREEN:** the unit is heating at the minimum power.

 **absent:** the unit is not heating.

## Brightness of the display

The appliance allows two different brightness settings for the display. The highest is active when any key button is pressed.

After a few seconds of keyboard inactivity, the brightness will decrease to the operating brightness level.

This lower level can be adjusted by means of the light button  (G). Press the light button repeatedly till the desired brightness is reached (three brightness levels available).

## Key lock

In order to avoid accidental operation, you can lock the keyboard using the keylock function. To activate this function press buttons + and - together for at least 3 seconds. The display shows the symbol  and a double acoustic signal will be emitted. To deactivate the function proceed in the same way.

## Timer function

This function can be activated in two different ways.

**Delayed start:** With the appliance on-standby, press the timer button (F) . The  symbol is displayed flashing together with the hours left before the appliance comes on. Change the hours using the + and - buttons, then wait a few seconds for the program to be stored.

The display will return to off and the  symbols remains on. When the programmed time has elapsed, the appliance will come on with the previous settings.

# Safety device/Maintenance/Troubleshooting



**Delayed stop:** with the appliance on, press the timer button . The  symbol is displayed flashing together with the hours left before the appliance goes on-standby.

Change the hours using the + and - buttons, then wait a few seconds for the program to be stored. The current settings and  symbol are displayed. At the end of the set time the appliance switches on-standby automatically. To go back to operating without the timer, press the timer button twice. The timer symbol  disappears from the display.

**Note:** the time is settable from 0.5 to 24 hours.

## Change of the temperature scale

The display can show the temperature in both °F and °C.

To select the desired temperature scale, when the unit is in standby position, press and hold the "+" and "ECO" keys for at least 10 seconds, then release. The change of scale will be indicated by two short beeps.

## Alarms

The appliance has a diagnostic system that makes it possible to signal malfunctions.

In case of problems, the display will show an alarm message:



(Probe Failure)

With this alarm the appliance does not operate. Contact the De'Longhi Customer Service.



(High temperature)

When the product's internal temperature is too high, the heating power will progressively and automatically be reduced. The display shows Ht for two seconds, cycling. To remove the cause of this alarm check that the unit is not covered or obstructed.

## SAFETY DEVICE

A safety device switches the heater off in the event of overheating. To restart the heater, call the De'Longhi Customer Service.

## MAINTENANCE

Always remove the plug from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth, do not use detergents and abrasives. Should the radiator not be in use over a certain length of time, wind the cord around the cord holder and store it in a dry place. This appliance has been built to give many years of trouble free service.

In case of malfunction or doubt, do not try to repair the heater by yourself: this may result in a fire hazard or electric shock. Call the De'Longhi Customer Service (see attached list of De'Longhi Customer Service).

## TECHNICAL CHARACTERISTICS

Power supply

See rating plate

Absorbed power

“

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<ul style="list-style-type: none"><li>- Be sure it is plugged in and that the electrical outlet is working.</li><li>- Check for any obstruction.</li><li>- The temperature may be set too low.</li></ul>	<ul style="list-style-type: none"><li>- Plug into the power outlet.</li><li>- Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the De'Longhi Customer Service.</li><li>- Set the temperature to a higher position.</li></ul>