

## DESCRIPTION

- A Thermostat
- B Power selector
- C/D/E Power indicator lights (MIN, MED, MAX)
- F Cord holder
- G Wheel

## USE

### Fitting the wheels

Turn the radiator upside down on a rug or soft surface to prevent damaging the paint finish. Fully unfold the wheels by turning them outwards (Fig. 1). Turn the radiator back to its upright position.

### Caution

Always operate the heater in upright position only (wheels on the bottom, controls on top). Any other position could create a hazardous situation.

### Location

The heater should not be placed immediately below a power outlet. Do not use this radiator in rooms with a floor area of less than 4 m<sup>2</sup> (43 sq. ft.).

### Electrical connection

- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.
- Check also the current capacity of your fuses. **CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.**

Keep loose clothing or bedding, furniture and flammable material away from the heater's wall outlet.

### Turning on

Insert the plug into an electrical outlet, rotate the thermostat dial to maximum and turn the unit on as follows using the power selector:

- Turn the power selector to position MIN to select minimum output (the min light will be on).
- Turn the power selector to position MED to select medium output (the min/med lights will be on).

- Turn the power selector to position MAX to select maximum output (the lights will be on).

### Adjusting the thermostat

When the room has reached the desired temperature, turn the thermostat dial slowly in an anti-clockwise direction until you hear a "click" and not beyond it. The thermostat will then adjust the set temperature automatically and keep it constant. If your unit is a three-output version, in intermediate seasons or on days when temperatures are not particularly cold, select minimum output to optimize savings and consumption.

### Antifreeze function

Turn the thermostat dial to the ❄ position and the power selector to position MAX. The appliance will maintain a minimum room temperature of approximately 5°C, thus preventing freezing while conserving energy.

### Reminder

To completely shut the appliance off, turn the power selector to the "0" position and then unplug the appliance from the outlet.

## SAFETY DEVICE

A safety device switches the heater off in the event of overheating. To restart the heater, call the nearest De'Longhi Customer Service.

## MAINTENANCE AND SERVICE

Always unplug the heater from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth; do not use detergents or abrasives. Should the radiator not be in use over a certain length of time, wind the cord around the holder and store it in a dry place. In case of malfunction or doubt, do not try to repair the heater by yourself: this might increase the risk of fire and electric shock. Call your nearest De'Longhi Customer Service (see attached list of Service Centers).

## TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	"

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	- Be sure it is plugged in and that the electrical outlet is working.	- Plug into the power outlet.
	- Check for any obstruction.	- Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the nearest De'Longhi Customer Service.
	- The temperature may be set too low.	- Set the temperature to a higher position.