

DESCRIPTION

- A display
- B on-standby button
- C power button
- D decrease button
- E increase button
- F timer button
- G brightness button
- H eco button
- I cord holder
- L wheel

USE

"Easy wheel" system

Turn the radiator upside down on a rug or a soft surface in order to prevent damaging the paint finish.


Fully unfold the wheels by turning them outwards (Fig. 1).

Turn the radiator back to its upright position.

Power connection

 
- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.
- Check also the current capacity of your fuses. **CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.**

 

 
The appliance will be set in the stand-by condition.

The display will show the  symbol. Keep loose clothing or bedding, furniture and flammable material away from the power outlet where the heater is plugged in. After an interruption of the power supply (power failure or appliance unplugged) the unit goes always to stand-by. When the unit is switched on by pressing the on-standby button, the operating conditions will be same ones previously set.

Heating function

To turn the appliance on, press the  (B) button.


Press button  (C) to set the required power level:

MIN (); MED (); MAX (). To select the desired temperature, press button + or - (E or D). By pushing the + or - button once, the temperature (shown on the display) will increase or decrease by 1°C. Keeping the + or - button depressed the value will increase or decrease rapidly.



 
The appliance allows to set the temperature from 5° to 28°C.

Anti-freeze function

Setting the temperature to 5°C with the "-" button, the appliance will activate the Antifreeze function. The display will show the  symbol, in this way the appliance will turn on automatically, **at the max power**, only if the room temperature falls below 5°C, to prevent freezing conditions. If you wish to go back to the Heating function, press the "+" button once.

Eco function

When this function is active the appliance automatically sets the most appropriate power level to guarantee optimum comfort while reducing energy consumption.

To activate this function press the "ECO" (H) button. The display will show **eco** symbol. If the selected temperature is much higher then the actual room temperature, the appliance will start automatically and rapidly to heat the room. The appliance will automatically select the most convenient power level (**MAX-MED-MIN-OFF**). If **MAX** power level has been selected using the  button, the appliance will cycle between: **MAX-MED-MIN-OFF**.

If **MED** power level has been selected, the appliance will cycle between: **MED-MIN-OFF**.

If **MIN** power level has been selected, the appliance will cycle between: **MIN-OFF**.

Working indicator

The symbol  indicates the heating status by means of its colors.

 **RED**: the unit is heating at the maximum power.

 **YELLOW**: the unit is heating at the medium power.


 **GREEN**: the unit is heating at the minimum power.

 **absent**: the unit is not heating.


Brightness of the display

The appliance allows two different brightness settings for the display. The highest is active when any key button is pressed.

After a few seconds of keyboard inactivity, the brightness will decrease to the operating brightness level.



This lower level can be adjusted by means of the light button  (G). Press the light button repeatedly till the desired brightness is reached (three brightness levels available).


Key lock

In order to avoid accidental operation, you can lock the keyboard using the keylock function. To activate this function press buttons + and - together for at least 3 seconds. The display shows the symbol  and a double acoustic signal will be emitted. To deactivate the function proceed in the same way.

Timer function


This function can be activated in two different ways.

Delayed start: With the appliance on-standby, press the timer button (F) . The  symbol is displayed flashing together with the hours left before the appliance comes on. Change the hours using the + and - buttons, then wait a few seconds for the program to be stored.

The display will return to off and the  symbols remains on. When the programmed time has elapsed, the appliance will come on with the previous settings.



Delayed stop: with the appliance on, press the timer button . The  symbol is displayed flashing together with the hours left before the appliance goes on-standby.

Change the hours using the + and - buttons, then wait a few seconds for the program to be stored. The current settings and  symbol are displayed. At the end of the set time the appliance switches on-standby automatically. To go back to operating without the timer, press the timer button twice.

The timer symbol  disappears from the display.

Note: the time is settable from 0.5 to 24 hours.

Change of the temperature scale

The display can show the temperature in both °F and °C.

To select the desired temperature scale, when the unit is in standby position, press and hold the "+" and "ECO" keys for at least 10 seconds, then release. The change of scale will be indicated by two short beeps.

Alarms

The appliance has a diagnostic system that makes it possible to signal malfunctions.

In case of problems, the display will show an alarm message:

PF

(Probe Failure)

With this alarm the appliance does not operate. Contact the De'Longhi Customer Service.

Ht

(High temperature)

When the product's internal temperature is too high, the heating power will progressively and automatically be reduced. The display shows Ht for two seconds, cycling. To remove the cause of this alarm check that the unit is not covered or obstructed.

SAFETY DEVICE

A safety device switches the heater off in the event of overheating. To restart the heater, call the De'Longhi Customer Service.

MAINTENANCE

Always remove the plug from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth, do not use detergents and abrasives. Should the radiator not be in use over a certain length of time, wind the cord around the cord holder and store it in a dry place. This appliance has been built to give many years of trouble free service. In case of malfunction or doubt, do not try to repair the heater by yourself: this may result in a fire hazard or electric shock. Call the De'Longhi Customer Service.

TECHNICAL CHARACTERISTICS

Supply voltage

See rating plate

Absorbed power

"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<ul style="list-style-type: none">- Be sure it is plugged in and that the electrical outlet is working.- Check for any obstruction.- The temperature may be set too low.	<ul style="list-style-type: none">- Plug into the power outlet.- Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the De'Longhi Customer Service.- Set the temperature to a higher position.