


IMPORTANT WARNINGS

Safety warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- **WARNING:** In order to avoid overheating, never under  any circumstances cover the appliances during operation, as this would lead to dangerous overheating.
- The appliance must not be located

immediately below a fixed socket-outlet.

- Do not use the heater in the vicinity of bathtubs, wash basins, showers, sinks and swimming pools.
- If the power cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- **ATTENTION:** in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** to reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.



Please note:

This symbol indicates recommendations and important information for the user.

- Use this heater on a horizontal and stable surface.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- We recommend that you not place the heater in a

draught, because strong draughts of air may adversely affect the equipment's operational efficiency.

- Only use the heater in an upright position.
- The first time you use the appliance, operate it of at least 15 minutes with the thermostat at maximum to eliminate the "new" smell. A little smoke due to the protective substances applied to the heating element before transport may be given off.
- Do not obstruct the hot air outlet grilles or the air intake grille on the bottom of the appliance.
- Position the appliance so that the plug and the outlet can be easily reached even after installation.
- Do not use the appliance in rooms less than 4 m² in area.
- The appliance is fitted with a tilt-switch which turns the appliance off if it should fall over. To restart the appliance, simply place it upright again.
- The appliance is fitted with a safety device which will switch the appliance off in case of accidental overheating. To reset, disconnect the plug from the power socket for a few minutes, remove the cause of overheating then plug the appliance in again. If the appliance doesn't work please contact the De'Longhi Customer Service.

For non-EU countries only:

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

INTRODUCTION

Thank you for choosing a De'Longhi product.

Please take a few moments to read the instructions to avoid risks or damage to the appliance.

DESCRIPTION (electric portable local space heater)

- a** Power selector
- b** Pilot lamp
- c** Thermostat
- d** Wheel

FIRST USE

General instructions

Remove the heater from the packaging. Check that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged.

Remove all publicity material present on the appliance.

Electrical connection

- Before plugging in the appliance, check that your supply voltage is the same as that shown on the rating plate of the appliance and that the power supply is able to withstand the power consumption (Watts) shown on the rating plate.
- If using more than one appliance at a time, it is important to ensure that the power supply is able to withstand the power requirements.

Use on the floor, feet assembly

Mount the feet on the appliance using the screws provided: 4 x wing screws (E). Fix the feet with the screws (E), as shown in fig.1.

USE


Functioning and use

- Insert the plug into the mains.
- Turn the thermostat knob in a clockwise direction until it reaches the 6 setting.
- **Minimum power:** turn the function knob to setting "MIN" (the pilot light will light on).
- **Maximum power:** turn the function knob to setting "MAX" (the pilot light will light on).
- **Switching off:** turn the function knob to setting "0" and remove the plug.

Adjusting the thermostat

Turn the thermostat knob in a clockwise direction until it reaches the maximum setting (6). When the room has reached the desired temperature, slowly turn the thermostat knob counter-clockwise until you hear a click and not beyond. The thermostat will now adjust the set temperature automatically keeping it constant.

Frost prevention mode

With the thermostat dial at minimum  and the mode selector on "MAX", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

MAINTENANCE

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool off completely. This heater requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	HMP1000: MIN 500W-MAX 1000W
	HMP1500: MIN 750W-MAX 1500W
	HMP2000: MIN 1000W-MAX 2000W

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	Be sure it is plugged in and that the electrical outlet is working.	Plug into the outlet.
	Check for any obstruction.	Remove the obstruction, unplug the heater and let the appliance cool down. If the appliance doesn't work please contact the nearest service center.
	The power selector is in the "0" position.	Turn the power selector to the position MIN, MAX.
	The thermostat may be set too low.	Turn the thermostat clockwise to a higher setting until the appliance restarts.