

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly polarized outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
16. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet (receptacle). Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet /receptacle/ may result in overheating of the power cord or fire.
17. Do not use an extension cord because the extension cord may overheat and cause a risk of fire.

Always plug the heater directly to a wall outlet. Never use with an extension cord or relocable power tap.

18. Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically if signs overheating or deformations are evidenced by the plug. Do not use the receptacle and CALL your electrician.
19. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
20. Before connecting to electric power outlet, check your electrical power supply. It must be 120 volts A.C. (alternating current). The outlet may be 15 amp. or 20 amp. The circuit must be of adequate size and must be protected by fuse or circuit breaker.
21. During use check frequently to determine if your plug outlet or faceplate is hot.
22. DO NOT place heater directly beneath electrical receptacle and DO NOT place heater against paper board or low density fiber-board.
23. DO NOT touch hot surfaces.
24. DO NOT immerse cord, plug or heater in water or other liquid, or pour this will cause dangerous electrical conditions and potential electrical shock.
25. DO NOT obstruct the top or bottom air openings.
26. Dust and lint on the heating element can obstruct the free flow of air. DO NOT operate when so obstructed. Operating with air openings obstructed could cause a dangerous condition.
27. Make sure that no pieces of polystyrene or other packaging material have been left into the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
28. When switching on the appliance for the first time, allow it to run at full power for about 1 hour to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation.
29. It is not advisable for the appliance to be positioned where it is exposed to draughts which might prevent it from working properly.
30. **CAUTION: Risk of fire! Do not open. No user serviceable parts inside.**
31. **CAUTION: Risk of fire! Do not operate without legs attached.**

**SAVE THESE INSTRUCTIONS
For Household use only**

HOW TO USE YOUR HEATER

Required Tools (not included): 1 Screwdriver PH 2 x 100 (Phillips type)

Estimated assembly time: 5 minutes

FEET ASSEMBLING

Remove the feet from the packing.

Fit the feet to the appliance as follows:

- 1 Insert the anchor pins (A) into the slots and turn the foot until it clicks into position (fig. 1).
- 2 Fasten the feet in position using the screw (fig. 2).

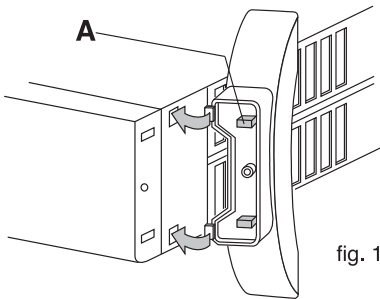 


fig. 1

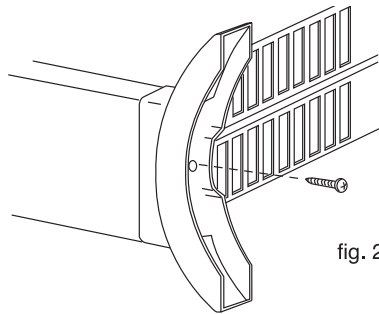 


fig. 2

BE CAREFUL

Operate the heater in upright position only.

Any other position could create hazard situation!

The appliance is fitted with a tilt-switch which turns the appliance off if it should fall over. To restart the appliance, simply place it upright again.

LOCATION

Place heater on floor beneath coldest window in the room or any desired location. Your heater will minimize the effect of cold drafts.

The heater must not be located immediately below a socket-outlet.

SWITCHING HEATER ON

The heater must be connected to a properly polarized A/C 120 V household outlet in perfect working conditions. Keep loose clothing or bedding, furniture and flammable material away from the wall outlet where the heater plug is fitted in.

Turn the thermostat knob clockwise to the highest setting and push one or both switches on. Pilot lights will go on, indicating that unit is operating.

REMINDER

To completely shut unit off, both switches must be placed in "0" position (lights off).

THERMOSTAT OPERATING

The thermostat operates on room air temperature and not heater temperature. Counter clockwise direction - lower number, lower temperature.

Clockwise direction - higher number, higher temperature.

Switch your heater on as shown in the previous paragraph. When your room reaches a

comfortable temperature, turn thermostat knob back gradually until you hear a "click" and not further. Keep thermostat at this setting for future use. When temperature drops below your selected temperature, the heater switches on automatically until the room again reaches the set temperature. Room comfort is thus maintained with minimum use of electricity.

MODEL WITH FAN

Proceed as follows:



- as warm ventilation during cold months, by pushing on the fan switch (see figure), along with one or both switches. Your fan will propel the heat instantly.
- as cold ventilation simply turning clockwise the thermostat knob to its maximum position and without pushing on the switches, but the fan switch. Your fan will refresh room-air circulation.

MAINTENANCE AND SERVICE

Disconnect electric and allow the heater to cool. Wipe with a soft damp cloth, do not use detergents and abrasives. Should the heater not be in use over a certain length of time, wrap the cable and store it in a dry place. This appliance has been built to give many years of trouble free service. In case of malfunction or doubt, do not try to repair the heater yourself. Call nearest Service Centre (see attached list of Service Centers).

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<ul style="list-style-type: none"> • Be sure it is plugged in and that the electrical outlet is working. • Check for any obstruction. • The switches are in the OFF position. • The thermostat may be set too low. • The appliance is not in the upright position. 	<ul style="list-style-type: none"> • Plug into the mains. • Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the nearest service center. • Switch on the appliance. • Turn the thermostat to a higher setting until the heater restarts. • Check the appliance is in the upright position in a flat surface.

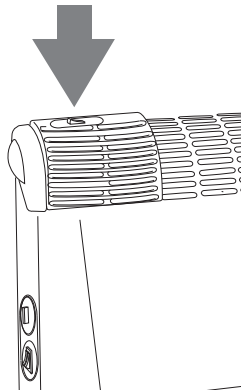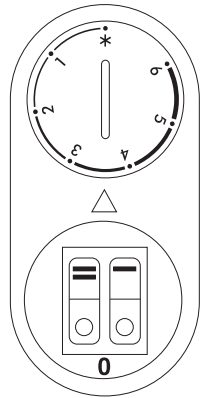  

Importer:
Coppel SA DE CV
Domicilio: Calle Republica 2855 PTE Recursos Hidraulicos
Culiacan Rosales Sinaloa 80105 MEXICO

WARRANTY POLICY

Product: ELECTRIC CONVECTOR HEATER

Brand name: DE'LONGHI

Model (s): HS15FM

Servicios Coppel SA DE CV guarantees, for a period of **1 year**, that this product, including all its parts and workmanship, is free from defects in material and operation, starting on the date of purchase or installation of the product, under the following conditions:

CONDITIONS

1. For this warranty to be effective, the consumer must present this policy, duly stamped by the store where the product was purchased, along with the product, to the said store where the product was sold.
2. Servicios Coppel SA DE CV agrees to replace the product free of charge to the consumer and to cover any costs resulting from the application of this warranty.

This warranty is not valid in the following cases:

1. When the product has been used under conditions other than those considered normal.
2. When the product has not been operated according to the provided instructions for use.
3. When the product has been modified or repaired by personnel not authorized by Coppel SA DE CV.

For this warranty to be valid, the consumer shall present the product and the currently valid warranty policy duly signed/stamped by the establishment where the product was sold. In case of loss of this warranty document, the consumer may request the store where the product was purchased to issue another warranty policy document, upon presentation of the corresponding proof of purchase or invoice.

Consumer name: _____
Street and number: _____
Area/neighborhood: _____
County or municipality: _____
City, postal code and state: _____

Stamp and signature of the store where product was sold and Purchase or installation date
--

The consumer is hereby permitted to request that this warranty be made effective and can obtain all parts, components, consumables and accessories at the address mentioned in this document.

This Warranty is valid for obtaining an equivalent replacement of the product and, therefore, no spare parts are granted.

