

**Register Now**   
[www.delonghi.com/register](http://www.delonghi.com/register)

---

# HCX Series

CONVECTOR

Instructions for use



*This product is only suitable for well insulated spaces or occasional use*



---

The DeLonghi logo is located in the bottom right corner of the page. It consists of the word "DeLonghi" in a bold, sans-serif font, enclosed within a black oval border with a white background.

# DESCRIPTION

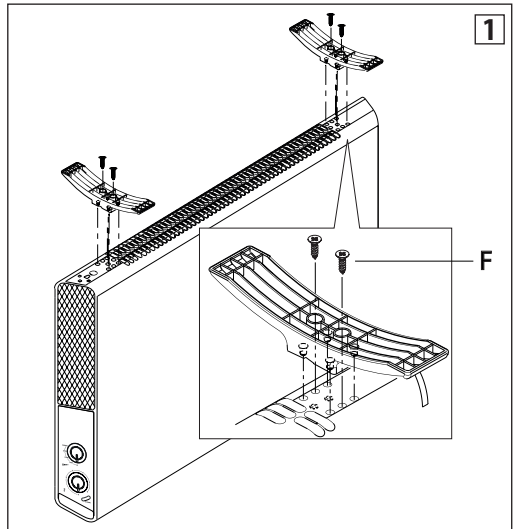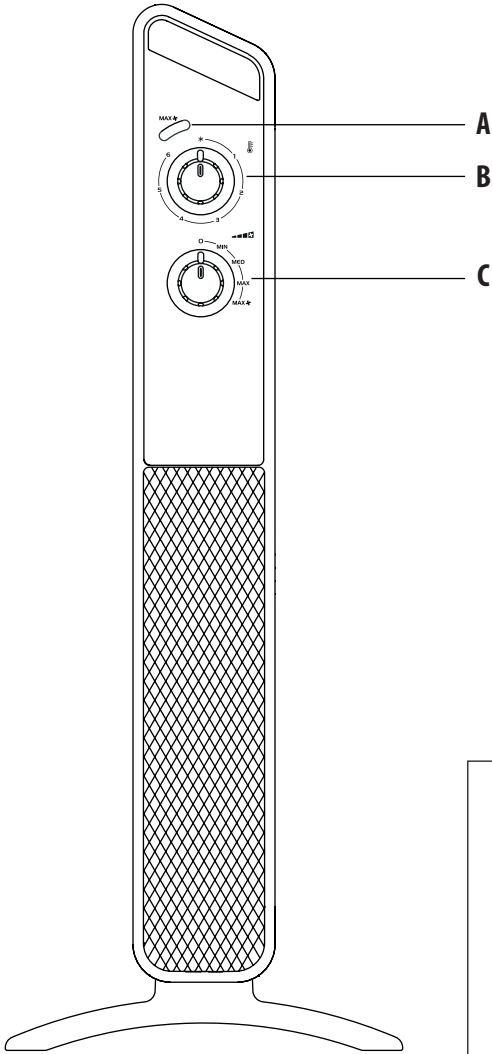

## IMPORTANT SAFEGUARDS

### Safety warnings



#### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.

- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- Never use the appliance to dry laundry.
- If the power cable is damaged, it must be replaced by the manufacturer, the manufacturer's customer services or a qualified electrician in order to eliminate all risk.



#### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance away from children under 3 years of age, unless they are supervised at all times.
- Children aged from 3 to 8 years may turn the appliance on and off only, providing it is positioned or installed in the usual operating position, they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years old must not unplug, adjust or clean the appliance or perform maintenance.

**IMPORTANT: certain parts of the appliance may become very hot and could cause burns. Pay particular attention in the presence of children or vulnerable people.**

- **IMPORTANT:** do not use the appliance in small rooms when occupied by people not able to leave the room without help, unless constant supervision is guaranteed.
- The appliance must not be placed directly under a fixed socket.
- **IMPORTANT:** to avoid risks associated with accidental resetting of the safety system, this appliance must not be powered through an external timer.
- Do not obstruct the air intake and outlet area (danger of overheating).



#### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.

- **IMPORTANT:** To avoid overheating, never under any  circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.
- The use of an extension lead is not recommended, as it may overheat during the operation of the appliance.
- Never lay the power cable on top of the appliance when it is hot.
- Do not rest anything on the appliance.
- **IMPORTANT:** to reduce the risk of fire, keep fabric, curtains or other flammable material at least 1 m away from the air outlet grille.
- Never place the appliance on long pile rugs or carpets to avoid obstructing the air intake grille on the bottom of the appliance.



**Please note:**

This symbol indicates recommendations and important information for the user.

- You are recommended to avoid positioning the appliance in a draught as strong air currents could reduce its efficiency.
- Use the appliance on a flat stable surface.
- Use the appliance in a vertical position only.
- Do not use the appliance if it has been dropped or fallen over.
- Do not use the appliance if it is visibly damaged.
- The appliance must be positioned at least 80 cm away from curtains or other heat sensitive moveable objects.
- The first time you use the appliance, leave it operating on maximum for at least 15 minutes to eliminate the "new" smell. A little smoke may be given off. This is caused by the protective substances applied to the heating element before transport and is completely normal.
- Position the appliance in such a way that the plug and socket are easily accessible.
- Do not use the appliance in rooms with a surface area of less than 4 m<sup>2</sup>.
- The appliance is fitted with a safety device which turns it off in the event of accidental overheating.
- To reset the device, unplug the appliance for a few minutes, remove the cause of the overheating, then plug in again. If the overheating reoccurs a number of times, contact customer services.
- Before putting the appliance away, make sure it is completely cool and unplugged from the mains socket.  
Do not store in dusty atmospheres.

- The appliance must never be hung in any way.

**For non-EU countries only:**

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**Use in accordance with the designated use**

Use this appliance only as described in this instruction manual. All other use is considered improper. This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance. This is an household appliance only. It is not intended to be used in:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- hotels, motels and other accommodation facilities;
- bed and breakfast type environments.

This type of use invalidates the manufacturer's guarantee.

**Fundamental safety warnings**

Dear customer - the plug on the appliance heats up during use. This is completely normal. This HIGH POWER HEATING APPLIANCE complies with our usual high standards. You should, however, make sure that your power socket is in good condition and that the plug on the appliance is plugged into the socket correctly to avoid accidental overheating. If the appliance is used for long periods of time, we recommend checking the plug and mains socket regularly. If in doubt, consult an electrician.

**Disposing of the appliance**



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## DESCRIPTION

---

- A Max + Fan indicator light
- B Thermostat
- C Power selector

### General instructions

 
Remove the heater from the packaging. Check that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged. Remove all publicity material present on the appliance.

### Electrical connection

- Before connecting the appliance to the current outlet, check that the voltage indicated on the appliance rating plate is the same as your electric plant and that it can stand the power consumption (Watt) indicated by the labelling.
- If more than one appliance is used at once, it is important to ensure that the electric plant is able to support the power required.

### Mounting the feet

Turn the appliance upside down on a rug or soft surface in order to prevent damaging the paint finish.



Fix the feet to the appliance with the nr. 4 screws F supplied  (see fig. 1), 2 screws for each foot.

## USE

---

### Operation and use

Plug into the mains, turn the thermostat dial (B) to maximum and turn the appliance on by means of the power selector (C) (see description) as described below:

- Turn the power selector knob to the **Min** position to select minimum power.
- Turn the power selector knob to the **Med** position to select medium power (only in some models).
- Turn the power selector knob to the **Max** position to select maximum power.
- Turn the power selector knob to the **Max**  position to select maximum power with the fan (the MAX + FAN indicator light comes on).
- To turn the appliance off completely: turn the power selector to the "0" position and the thermostat to the "" position, then unplug from the mains.


### Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial (B) slowly anticlockwise until you hear a click and no further.


The thermostat will automatically regulate the temperature set

and keep it constant. In spring or autumn or on mild days, you can save energy by using minimum power.

### Frost prevention mode

With the thermostat dial (B) in the  position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

### Models with ventilation

The appliance has 2 fans for faster more even heating. To start this function, turn the power selector (C) to Max .

## MAINTENANCE

---


Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool off completely. This heater requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner.

## TECHNICAL CHARACTERISTICS

---

Supply voltage	See rating label
Absorbed power	"

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	Be sure it is plugged in and that the electrical outlet is working.  Check for any obstruction.  The power selector is in the "0" position.  The thermostat may be set too low.	Plug into the outlet.  Remove the obstruction, unplug the heater and let the appliance cool down. If the appliance doesn't work please contact the nearest service center.  Turn the power selector to the position MIN, MED, MAX, MAX  .  Turn the thermostat clockwise to a higher setting until the heater restarts.

## ELECTRICAL REQUIREMENTS

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead and an appropriate plug fitted, as below. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug. **WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.
- B) UK Plug specifications: please follow the instructions provided below.

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

If you have a 3-pins plug, do not connect any wire to the "earth" terminal.

