

DESCRIPTION

- A Light + Max 
- B Thermostat
- C Power selector
- D Timer
- E Slide switch
- F Timer pointer

General instructions

Remove the appliance from the packaging. Make sure the appliance and power cord have not been damaged during transport. Do not turn the appliance on if damaged. Remove all promotional material from the appliance.

Electrical connections

- Before plugging the appliance into the mains, make sure the voltage of your mains supply corresponds to the voltage (V) specified on the rating plate and that the socket and power line are adequately dimensioned for the power (W) indicated.
- If you use more than one appliance simultaneously, make sure the mains supply is able to deliver the power required.

Free standing, attaching the feet

Tools required:

PH2x100 screwdriver (cross-tip)

4 4.8x13 PH screws provided (G)

Position the appliance on a stable surface.

To mount the feet, proceed as follows:

Fasten the feet with the 4 screws provided (see fig. 1), 2 for each foot.

See figure 2 for the minimum distances of the appliance from the walls



Important! never use the appliance without the feet.

USE

Operation and use

Plug the appliance into the mains socket, turn the thermostat dial (B) to position 6, then turn on using the power selector (C) (see the description) as indicated below:

- Turn the power selector dial to **Min** to select low power.
- Turn the power selector dial to **Med** to select medium power (certain models only).
- Turn the power selector dial to **Max** to select high power.
- Turn the power selector dial to the **Max**  position to select high power with fan.
- Turn the power selector dial (C) to the  position to retain the time set only.

- To turn the appliance off completely, turn the power selector to "0" and the thermostat to , then unplug from the mains socket.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial (B) anticlockwise until you hear a click and no further. The thermostat will regulate the temperature automatically, keeping it constant. In spring, autumn or on milder days, you can save energy by using low power.

Freeze prevention

With the thermostat dial (B) in the  position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Fan

The appliance has two fans for faster and more even heating. To start this function, turn the power selector (C) to Max  (when the thermostat is activated, the light A comes on).

Programming the 24 hour timer

To operate the appliance without the timer, place the timer slide switch (E) on  OFF. To operate the appliance at set times, place the timer slide switch on  ON and proceed as described below:

- Check the time on a clock or watch. If, for example it is 10:00, turn the numbered programming disk until the number 10 coincides with the pointer (F) marked on the programming device.
- Set the periods of time when you want the appliance to operate by pushing the teeth outwards. Each tooth corresponds to a 30 minute period. At the end of this procedure, sectors corresponding to the operating periods can be seen.
- The appliance will now operate automatically each day with the same settings. (Important: the appliance must always be plugged into the mains socket)
- To modify the settings, push the teeth back to the original position (teeth inwards) and programme the new operating times.
- To turn the appliance off, turn the power selector to "0". In this position, the time will not be retained. If on the other hand you want to retain the time set, turn the power selector (C) to the  position.

The following tables show operation of the timer in the ON and OFF position.

TIMER IN POSITION ON

Slide switch	Power selector	Operation
 ON	Max 	<ul style="list-style-type: none"> • Programming active. • The appliance operates at high power + fan. • The time is retained.
	Max	<ul style="list-style-type: none"> • Programming active. • The appliance operates at high power. • The time is retained.
	Med	<ul style="list-style-type: none"> • Programming active. • The appliance operates at medium power. • The time is retained.
	Min	<ul style="list-style-type: none"> • Programming active. • The appliance operates at low power. • The time is retained.
		<ul style="list-style-type: none"> • Appliance off. • The time is retained.
	0	<ul style="list-style-type: none"> • Appliance off. • The time is not retained.

TIMER IN POSITION OFF

Slide switch	Power selector	Operation
 OFF	Max 	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at high power + fan. • The time is retained.
	Max	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at high power. • The time is retained.
	Med	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at medium power. • The time is retained.
	Min	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at low power. • The time is retained.
		<ul style="list-style-type: none"> • Appliance off. • The time is retained.
	0	<ul style="list-style-type: none"> • Appliance off. • The time is not retained.

MAINTENANCE

Before carrying out maintenance of any kind, unplug the appliance from the mains electricity supply and wait for it to cool completely. The appliance requires no special maintenance. Simply remove the dust with a soft, dry cloth. Never use abrasive powder or solvents. If necessary, remove areas of concentrated dirt using a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not work.	<p>Check the appliance is plugged into a mains socket and there is power to the socket.</p> <p>Check for possible obstructions.</p> <p>The power selector is in the "0" position or </p> <p>The temperature set on the thermostat is too low.</p> <p>Setting the timer.</p>	<p>Plug into the mains socket.</p> <p>Remove the obstruction, unplug the convector heater from the mains socket and leave to cool down. If the problem continues, contact your local customer services.</p> <p>Turn the power selector to MIN, MED, MAX or MAX .</p> <p>Turn the thermostat dial clockwise to higher values until the heater comes on.</p> <p>Make sure the correct local time is set on the timer and check the position of the teeth.</p>