



De'Longhi Appliances
via Seitz, 47
31100 Treviso Italia



DCH7032

electrical connection (UK only)

- A) This appliance is fitted with a plug that will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.
- WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.
- With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.
- B) Please follow the instructions provided below.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked with the letter N or coloured black. The brown wire must be connected to the terminal marked with the letter L or coloured red. **If you have a 3-pins plug, do not connect any wire to the "earth" terminal.**

- Voltage and wattage can be found on the rating label on the underside of the machine.

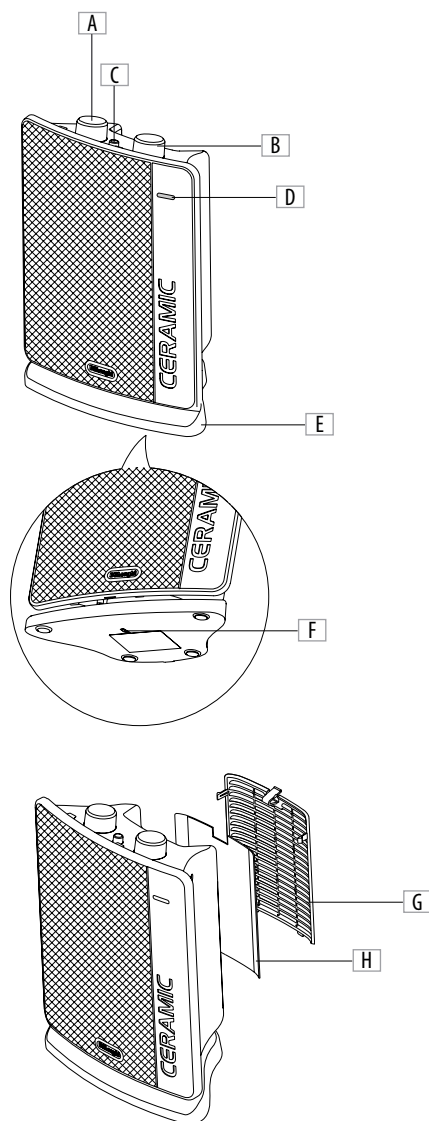


Fig. 1

INTRODUCTION

Thank you for choosing a De'Longhi Ceramic Fan Heater.
Please take a few minutes to read these instructions.
This will avoid all risks and damage to the appliance.

IMPORTANT SAFEGUARDS

- To avoid risk of cable overheating, extension leads must not be used in powering this appliance.
- Do not use this heater near showers, bathtubs, sinks, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the power cable is damaged, it must be replaced by the manufacturer. Please contact Customer Experience, see enclosed guarantee.
- The appliance must not be placed immediately under a fixed power socket.
- The heater must be positioned at least 50 cm from furniture or other objects. Do not use the appliance in rooms with a floor area of less than 4 m².
- Before storing the appliance, check it is completely off and the cable is unplugged. At this point wrap the cord around the base.
- Do not store in a dusty room.
- The room temperature should be between 0-30°C.
- The heater is fitted with a thermal cutout device which switches the heater off in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.



IMPORTANT: To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.

WARNING: to avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.

Safety functions

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all).
To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.
- **Tip over safety device (certain models):** a tip over safety device (F) turns the appliance off if it falls over or is positioned inappropriately in such a way as to jeopardise safety.
When the appliance is placed back in a vertical position it starts again automatically.

Disposing of the appliance



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

- A** Mode selector
- B** Thermostat
- C** Swing button
- D** Indicator light
- E** Base
- F** Tip over switch
- G** Filter protection grille
- H** Filter

USE

Installation

The appliance can be used on any horizontal surface.
Do not overload the electrical circuit. Avoid using the same socket for other appliances.

Electrical connection

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

Operation and use

1. Make sure the selector (**A**) is in the "0" position before plugging the appliance into the mains socket.
2. Plug into the mains socket.
3. Turn the appliance on by placing the thermostat (**B**) in the Max position and the mode selector (**A**) in one of the following positions: ✱/1/2/3.

The following modes are available:

- Summer mode (fan only): turn the mode selector to the ✱ position (the indicator light comes on).
- Low power operation: turn the mode selector to position 1. The appliance operates at low power, reducing noise levels and energy consumption to a minimum.
- Medium power operation: turn the mode selector to position 2. The appliance operates at medium power.
- High power operation: turn the mode selector to position 3. The appliance operates at high power to heat the room rapidly.
- To turn the appliance off: turn the mode selector to the "0" position and the thermostat to the ✱ position, then unplug from the mains.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat (**B**) slowly anticlockwise until you hear a "click". The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode

With the thermostat dial at minimum ✱ and the mode selector (**A**) on "3", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with motorised rotating base

A number of models have a motorised rotating base.

To distribute the air flow over a larger area, press the swing button (**C**). The appliance swings from right to left.

To stop the appliance in the desired position, simply press the swing button (**C**) again.

Models with motorised base are fitted with a tip over switch which turns the appliance off if it falls over.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- To clean the filter, remove the rear grille by pulling it outwards (fig. 1).
Remove the dust filter which retains impurities in the air drawn in from the room, blow on it lightly then replace in the appliance.
- Never use abrasive powders or solvents to clean the appliance.

TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	"
Max Power	2200W