

Proudly distributed by  
**De'Longhi Australia Pty Limited**  
P.O. BOX 4540  
CASULA MALL NSW 2170  
Customer Service Ph: 1800 126 659  
Fax: 1800 706932  
[www.delonghi.com.au](http://www.delonghi.com.au)  
e-mail: [delonghi@delonghi.com.au](mailto:delonghi@delonghi.com.au)

**De'Longhi New Zealand Limited**  
25 Carbine Road  
Mt Wellington  
Auckland, New Zealand  
P.O. Box 58-056 Botany  
MANUKAU 2163  
Customer Service Ph: 0508 200 300  
Fax: 0508 200 301  
[www.delonghi.com.nz](http://www.delonghi.com.nz)  
e-mail: [delonghi@delonghi.com.nz](mailto:delonghi@delonghi.com.nz)

---

DCH6031

CERAMIC FAN HEATER


Instructions for use



---

**DeLonghi**

Fig. 1

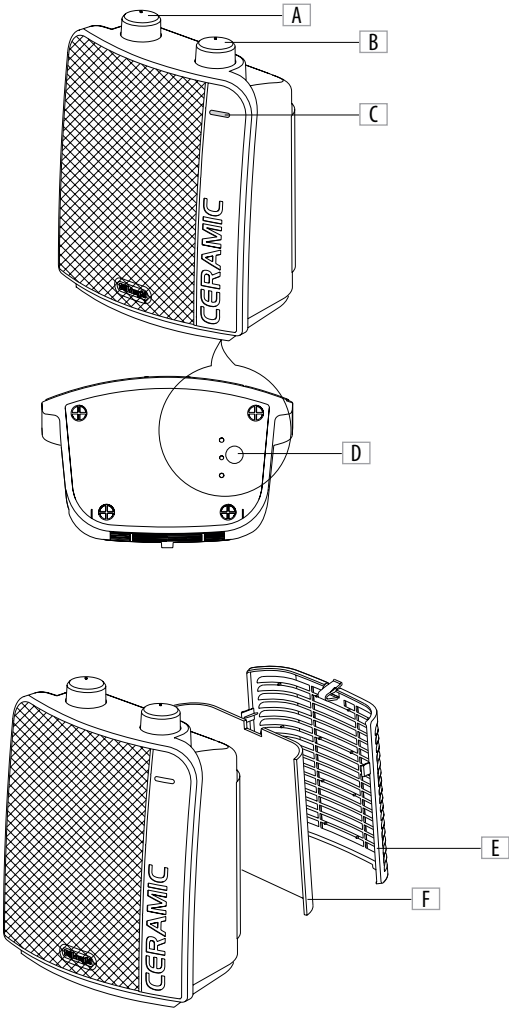

# IMPORTANT WARNINGS

## Safety warnings



### **Danger!**

- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- The appliance must not be placed immediately under a fixed power socket.



### **Important!**

- Always use the appliance in an upright position.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.



### **Danger of burns!!**

- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance near walls,

furniture, curtains, etc.

- Do not use the appliance in rooms with a floor area of less than 4m<sup>2</sup>.



### **Please note:**

- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Wrap the cable around the base. Do not store in dusty atmospheres.
- Room temperature should be between 0 and 30° C.
- Do not rest anything on the appliance.
- To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.



**IMPORTANT:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.

## INTRODUCTION

Thank you for choosing a De'Longhi product.

Please take a few minutes to read these instructions.

This will avoid all risks and damage to the appliance.

### **Symbols used in these instructions**

Important warnings are identified by the symbols below.

It is important to respect the warnings.

Failure to respect the warnings could lead to electric shock, serious injury, burns, fire or damage to the appliance.



### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.



### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.



### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.



### **Please note:**

This symbol indicates recommendations and important information for the user.

## **Safety functions**

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all).  
To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.
- **Tip over safety device:** a tip over safety device (D) turns the appliance off if it falls over or is positioned inappropriately in such a way as to jeopardise safety.  
When the appliance is placed back in a vertical position it starts again automatically.

## **DESCRIPTION**

(see fig. 1)

- A** Mode selector
- B** Thermostat
- C** Indicator light
- D** Tip over switch
- E** Filter protection grille
- F** Filter

## **USE**

### **Installation**

The appliance can be used on any horizontal surface.

Do not overload the electrical circuit. Avoid using the same socket for other appliances.

### **Electrical connection**

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

## **Operation and use**

1. Make sure the selector (A) is in the "0" position before plugging the appliance into the mains socket.
2. Plug into the mains socket.

3. Turn the appliance on by placing the thermostat (B) in the Max position and the mode selector (A) in one of the following positions: ✱/1/2/3.

### **The following modes are available:**

- Summer mode (fan only): turn the mode selector to the ✱ position (the light comes on).
- Low power operation: turn the mode selector to position "1".
- Medium power operation: turn the mode selector to position "2".
- High power operation: turn the mode selector to position "3".
- To turn the appliance off: turn the mode selector to the "0" position and the thermostat to the ✱ position, then unplug from the mains.

### **Adjusting the thermostat**

When the room has reached the required temperature, turn the thermostat (B) slowly anticlockwise until you hear a "click". The thermostat will then keep room temperature at the selected level automatically.

### **Frost prevention mode**

With the thermostat dial at minimum ✱ and the mode selector (A) on "3", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

## **MAINTENANCE**

- Always unplug from the mains socket before cleaning.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- To clean the filter, remove the rear grille (E) by pulling it outwards (fig. 1).  
Remove the dust filter (F) which retains impurities in the air drawn in from the room, blow on it lightly then replace in the appliance.
- Never use abrasive powders or solvents to clean the appliance.

## **TECHNICAL CHARACTERISTICS**

Power supply	See rating plate
Absorbed power	"