


IMPORTANT SAFEGUARDS

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- **ATTENTION:** To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.
- Do not use the appliance in small rooms when they are occupied by persons that are not capable of leaving the room, unless constant supervision is provided.
- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature. 

- The use of extension leads is not recommended.

However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.

- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance in rooms with a floor area of less than 4m².
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Do not store in dusty atmospheres.
- Do not rest anything on the appliance.
- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet grilles (danger of overheating).
- Do not use the appliance near walls, furniture, curtains, etc.
- The heater is fitted with a thermal cutout device which switches the heater off in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again. If the appliance doesn't work please contact the De'Longhi Customer Service.

**Disposal of the appliance**

In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre..

ELECTRICAL CONNECTION

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value in Volts (V) indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

INSTALLATION


The appliance must be used in the portable configuration only.

- If the appliance is used in the bathroom, respect the safety distances shown in fig. 1 and always position it away from taps, basins, showers, etc.

The appliance must not be placed immediately under a fixed power socket.

FUNCTIONING AND USE

Make sure the appliance is off before plugging into the mains.

1. Plug the appliance into the mains. The light comes on.
2. Turn the thermostat lever to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position **1** (in models with two fan speeds, the fan operates at minimum).
5. **Medium power operation:** turn the function selector to position **2** (in models with two fan speeds, the fan operates at maximum).
6. **High power operation:** turn the function selector to position **3** (the fan operates at maximum).
7. **Switching off:** turn the function selector to the "0" position.


Note: In models with two power levels, position 2 corresponds to maximum power.

Setting the thermostat

Position the thermostat on maximum. When the room has reached the required temperature, turn the thermostat lever slowly clockwise until you hear a click and the fan goes off

The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode

With the function selector in position 3 and the thermostat lever in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.