

## IMPORTANT INFORMATION



### **Danger!**

Failure to observe the warnings may result in life-threatening injury by electric shock.

- The device should not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, its service centre or a qualified electrician so as to eliminate all risk.
- The appliance must be installed so that the controls are not accessible by those who are using a bath or shower.



### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children at least 8 years old and by persons with reduced physical, mental and sensory capacities or with inadequate experience and knowledge, as long as they are carefully supervised or instructed on how to safely use the appliance and the hazards involved.

Make sure that children do not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children without supervision.

- Children less than 3 years old should be kept away from the appliance unless continuously supervised.
- Children between 3 and 8 years old may only switch the appliance on and off, provided that it has been placed or installed in its normal operating position, they are carefully supervised and

instructed concerning use of the appliance in a safe way and they understand the hazards involved.

Children between 3 and 8 years old should not insert the plug, adjust and clean the appliance or perform maintenance on it.

**ATTENTION: Some parts of the appliance can become very hot and cause burns. Pay particular attention when children and vulnerable persons are present.**

- **IMPORTANT:** To avoid the risk of the safety cutoff device resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, nor connected to a circuit which is turned on and off regularly by the energy supplier.



### **Danger of burns!!**

Failure to observe the warning could result in burns.

- **IMPORTANT:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.



### **Note:**

This symbol indicates recommendations and important information for the user.

- Always use the appliance in an upright position.
- The use of extension leads is not recommended. However if they cannot be avoided, carefully follow the instructions accompanying the extension lead, taking care to not exceed the power limit marked on the extension lead.
- There must be no furniture or other objects in the 50 cm in front of the appliance.
- Do not use the appliance in rooms whose surface area is less than 4 m<sup>2</sup>.
- Before moving the appliance, make sure it is completely turned off and it is unplugged from the power socket.
- Do not position it in dusty atmospheres.

- Do not rest anything on the appliance.
- Do not obstruct the air intake and outlet grilles (danger of overheating).
- Do not use the appliance near walls, furniture, curtains, etc.
- When you first use the device it may release an odour due to heating up. It is advisable to ventilate the room.

## Safety features

- **Safety device:** the appliance is fitted with a safety cut-off device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all).  
To reset the cutoff, disconnect the appliance from the power socket for a few minutes, remove the cause of overheating then reconnect to the power supply.  
If the problem persists or the appliance does not return to normal operation, do not use it and contact an authorised service centre to resolve the problem.

## Disposing of the appliance



The appliance must not be disposed of with household waste but must be taken to an authorised waste separation and recycling centre.

## DESCRIPTION

(see p. 3)

- A** Function selector
- B** Warning lamp
- C** Room thermostat
- D** Timer (if provided)
- E** Towel rail (select models only)
- F** Pedestal (select models only)

## USE

### Electrical connection

- Before plugging into the power socket, make sure that the voltage of your power system corresponds to the value in Volts indicated on the appliance and that the power socket and power line are suitable for the electrical load.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

### Installation

The device should only be used in an upright position.

### Models with towel rail

Some models are equipped with a towel rail (E) that provides

a drying function and can be used only with the appliance fixed to the wall.

If the unit is used in a bathroom, to avoid hazards, it must be installed as shown in fig. 4. If installed in another room the minimum distances shown must be respected.

The wall-mount kit includes:

- 1 bracket
- 2 x screws
- 2 x wall plugs (0.6x30)

Install as follows:

1. Remove the bracket mounted on the back, pulling it downwards.
2. Choose the point to install the appliance ensuring that:
  - a. The plug and the socket are easily accessible after installation.
  - b. Neither the electrical cables nor other pipework can be damaged.
  - c. Curtains or other flammable material are kept away from the appliance.
3. Before drilling the wall, mark the exact points as shown in fig.1.
4. For brick walls, use a 6 mm masonry bit. Drill and insert the wall plugs provided. (For plasterboard or false walls we suggest that you locate the wooden battens behind and use wood screws size 6 directly into the wood or special anchors.  
For any other type of wall ask the advice of a specialist.
5. Secure the bracket with the two screws provided.  
Next, insert the appliance into the top and bottom hooks of the bracket, and then lightly press the unit down.

Slowly lift the rail (E) to the first stop. To avoid overheating problems in this mode, the heat setting should not exceed 1000W.

At this point you can hang towels or sheets on the rail for drying. When the appliance is not used in drying mode lift the arm upwards up to the top which unlocks it and then bring it down.



**Attention!** Do not overload the towel rail (E) and pay special attention to drying of delicate fabrics.

### Models with pedestal

Models equipped with pedestal (F) can be used in a portable version with the pedestal or wall-mounted, excluding the need for the pedestal in the second case.

To remove the pedestal (F) press the two tabs on the back of the base while pushing the heater forwards then raise the ap-

pliance. The two tabs are identified by the word "PUSH" (figure 2/3). If you want to install it to the wall, however, proceed as described for models with towel rail.

## OPERATION AND USE

1. Make sure the appliance is turned off before inserting the plug into the power socket and turning on the socket switch if necessary.
2. Turn on the appliance by placing the thermostat (C) in the maximum position and the function selector (A) in one of the following positions: ❄️/1/2.
  - **Summer** (fan only): turn the function selector (A) knob clockwise to position.
  - **Min power operation:** Turn the function selector (A) to position "1". The red warning lamp lights up.
  - **Max power operation:** Turn the function selector (A) to position "2".
  - **To switch off the appliance:** Turn the function selector to position "●".

## Adjusting the thermostat

When the room has reached the desired temperature, slowly move the thermostat counterclockwise until the indicator light turns off and no further.

The temperature thus fixed will be automatically maintained by the thermostat.

## Freezing prevention

With the thermostat knob at the minimum position ❄️ and the function selector at pos. 2 the appliance keeps the ambient temperature at about 5°C, preventing freezing with a minimum expenditure of energy.

## MODELS WITH 24-HOUR TIMER (if provided)

To program the heating proceed in the following way:

Look at the time on your watch. If it is 10.00 for example, turn the numbered programmer disk until the number 10 coincides with the index mark ▲ imprinted on the programmer. Set the periods of time that you want the appliance to function, pushing the teeth toward the centre. Each tooth corresponds to a period of time of 15 min. At this point you will see the red sectors that correspond to the periods of operation. Set up in this way, the unit will work automatically every day during the scheduled periods. (Important: the plug must be always inserted in the power socket and the socket switched on if necessary).

- To change the programming, simply return the red teeth to the initial position and set the new operating periods.
- If you want to operate the appliance without program-

ming, push all the teeth toward the centre. In this case, for total shutdown of the appliance, as well as turning off the switches, it is also necessary to remove the plug from the power socket, to avoid unnecessary operation of the programmer.

## MAINTENANCE

- Before cleaning, always remove the plug from the power socket.
- Regularly clean the air intake and outlet grilles.
- Never use abrasive powders or solvents.

## TECHNICAL CHARACTERISTICS

Power supply	See appliance rating plate
Power consumption	"