

IMPORTANT SAFEGUARDS

When using any electrical appliance, some basic safety precautions should always be observed to reduce the risk of fire, electric shock, and/or injury to persons. Read all instructions carefully before using the appliance. Specifically:



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- If the power cable is damaged, stop using the product. Power cable must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- Never position the appliance where it may fall into a bathtub or come in contact with water. Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- Never use this heating appliance in the immediate vicinity of swimming pool.
- If the appliance is located in a room with bath or shower, respect the "safety distances" shown in fig. 1 and always install away from taps, basins, showers, etc.
- **CAUTION: ALTHOUGH THIS DEVICE IS PROVIDED WITH PROTECTION WHICH REDUCES THE RISK OF ELECTRIC SHOCK, THIS PRODUCT SHOULD NEVER BE USED NEAR WATER.**
- Do not insert or allow foreign objects to get into the air intake or air outlet grille, as this may cause electric shock or fire, or damage the appliance.
- Make sure that the plug is fully inserted into the outlet. Wall outlets may deteriorate with time, so check the plug periodically for signs of overheating or deformation. If the outlet has

deteriorated, stop using it and have it repaired.


- **CAUTION: To prevent electric shock, make sure the wide prong of the plug is inserted in the wide slot of the outlet.**
- **CAUTION — Some parts of this product can become very hot and cause burns.**



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Always disconnect the plug from the power outlet when the appliance is not in use.
- Do not use the appliance outdoors.
- Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Keep the cord away from any passageways where it could be tripped over.
- To prevent a possible fire, do not block air intake or air outlet grille in any way. Do not use the appliance on soft surfaces, such as beds, where the openings may become blocked.
- Use this appliance only as described in this manual. Any other use not indicated by the manufacturer may cause fire, electric shock, or injury to persons.

- To prevent current overload and blown fuses, make sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
- Do not use this appliance with an extension cord or outlet strip. Connect the appliance directly to a suitable outlet.
- Do not use the appliance in small rooms when they are occupied by persons that are not capable of leaving the room, unless constant supervision is provided.
- Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- Use the appliance always and only in the vertical position.
- Do not use this appliance in a room smaller than 43 square feet (4 m²).
- ing and the risk of fire.
- The internal parts of the appliance can become very hot or produce sparks during operation. Do not use the appliance in areas where gasoline, paints, or other flammable liquids are used or stored.
- It is normal for heater's plug and cord to feel warm to the touch. However, an excessively hot or deformed plug or cord is not normal and may be the result of a defective electrical outlet. Defective outlets must be replaced before using the heater. Plugging the heater into a worn outlet may result in overheating of the power cord or may cause the risk of fire.
- Do not use the appliance to dry laundry, and do not obstruct the air intake and outlet grilles (danger of overheating).
- Do not operate the appliance in contact with walls, furniture, curtains, etc.
- **WARNING:** To avoid overheating, never under  any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature, and risk of fire. Do not use the appliance on soft surfaces, such as beds, where the openings may become blocked.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** in order to avoid overheating, do not cover the heater.
- This appliance gets very hot when in use. To prevent burns, do not touch hot surfaces with bare skin. Use the handle when moving the appliance. Keep all flammable materials, such as furniture, pillows, bedding, paper, clothing, and curtains at least 90 cm (3 feet) from the front and top of the appliance also avoid contact with the sides and back.
- Do not wrap the cord around the appliance immediately after use.
- Do not cover the appliance while it is functioning in order to avoid overheating



Please note:

This symbol indicates recommendations and important information for the user.

- To completely turn off the appliance, turn the function selector knob to 0, and then unplug the heater.
- Check that neither the appliance nor the power cord have been damaged during shipping.
- Make sure that no styrofoam or other packing

materials remain in the appliance.

- The first time the appliance is used, run it at the maximum power for at least two hours. During this time, ventilate the room thoroughly to eliminate the “new” smell released by the appliance. It is completely normal for the appliance to emit “creaking” sounds the first time it is run.
- Do not open the appliance. No user-serviceable parts inside.
- Before storing the appliance, check it is completely off and the cable is unplugged. At this point wrap the cord around the base. Do not store in a dusty room. The room temperature should be between 0-30°C (32-86°F). Do not load anything above it.
- Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the use of other appliances.
- The heater must not be located immediately below a socket-outlet.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

 
SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

i **Please note:** Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

GFI SAFETY PLUG (Appliance Leakage Current Interrupter)

This device provides protection against electric shock due to ground fault currents by automatically shutting off the power. To test the operation of the GFI Safety Plug ,



switch the heater ON at either the 1 or 2 setting. Press the TEST button on the GFI Safety Plug located at the end of the power cord. The heater and fan should stop operating and the Power Light should be extinguished. Press the RESET button on the GFI Safety Plug to resume normal operation of the heater. This device should not be used as an ON/OFF operation switch. “CAUTION: ALTHOUGH THIS DEVICE IS PROVIDED WITH PROTECTION WHICH REDUCES THE RISK OF ELECTRIC SHOCK, THIS PRODUCT SHOULD NEVER BE USED CARELESSLY NEAR WATER.”

Tip over safety device

A tip over safety device turns the appliance off if it falls over or is positioned inappropriately in such a way as to jeopardise safety. When the appliance is placed back in a vertical position it starts again automatically.

DESCRIPTION

- A Timer
- B Thermostat
- C Function selector
- D Indicator light
- E Pedal switch
- F Swivelling base


USE

Electrical connection

Before plugging into the outlet, make sure the voltage of your outlet supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

Functioning and use

Make sure the appliance is off before plugging into the outlet.

1. Plug the appliance into the outlet. The light comes on. Your appliance has a timer, see the section “Models with 24 hour timer”. However, to operate the appliance without programming, move all the teeth of the timer to the outside.
2. Turn the thermostat dial to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.

4. **Low power operation:** turn the function selector to position **1** (the fan operates at minimum).
5. **Medium power operation:** turn the function selector to position **2** (the fan operates at medium).
6. **High power operation:** turn the function selector to position **3** (the fan operates at maximum).
7. **Switching off:** turn the function selector to the **"0"** position.

Setting the thermostat

Position the thermostat on maximum. When the room has reached the required temperature, turn the thermostat dial slowly counter clockwise until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode

With the function selector in position 3 and the thermostat dial in position ✱, the appliance maintains room temperature at about 5°C (41°F), preventing freezing with minimal energy consumption.


24 HOUR TIMER

After setting the thermostat and function selector to the required position, to programme heating, proceed as follows:

- turn the timer disk clockwise until the pointer on the timer ▲ lines up with the number corresponding to the current time.
- set the times when you want the appliance to operate by pushing the teeth towards the outside. Each tooth corresponds to 30 minutes.

THE TIMER IS SET FOR THE FOLLOWING PERIODS OF OPERATION:

FROM 11 TO 13: ON
FROM 13 TO 18: OFF
FROM 18 TO 20: ON
FROM 20 TO 11: OFF

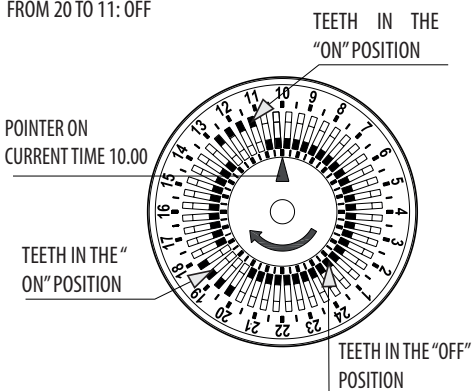

The appliance will now function automatically each day at the times set.



Please note: To use the appliance without programming, push all the teeth outwards.

MOTORIZED ROTATING BASE

Some models have a motorized rotating base. To distribute the air flow over a larger area, press the pedal. The appliance swings from right to left. To stop the appliance in the desired position, simply press the pedal again.

MAINTENANCE

- Always unplug from the outlet before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	Be sure it is plugged in and that the electrical outlet is working.	Plug into the power outlet.
	Check that the unit is not covered.	Let the appliance cool down. If the appliance doesn't work please contact the De'Longhi Customer Service.
	The temperature may be set too low.	Set the temperature to a higher position.