

## DESCRIPTION

- A Thermostat
- B Function selector
- C Pedal switch (certain models only)
- D Swivelling base (certain models only)
- E Switches (only in certain models)

## USE

### Electrical connection

Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

### Installation


The appliance must be used in the portable configuration only. If the appliance is used in the bathroom, respect the safety distances shown in fig. 1 and always position it away from taps, basins, showers, etc.

The appliance must not be placed immediately under a fixed power socket.

### Functioning and use

#### MODELS WITH FUNCTION SELECTOR AND THERMOSTAT.

Make sure the appliance is off before plugging into the mains.

1. Plug into the mains.
2. Turn the thermostat dial to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position 1.
5. **Max power operation:** turn the function selector to position 2.
6. **Switching off:** turn the function selector to the "0" position.

### Setting the thermostat

Position the thermostat on maximum.

When the room has reached the required temperature, turn the thermostat dial slowly anticlockwise until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.




### Frost prevention mode

With the function selector in position 2 and the thermostat dial in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

### Models with thermostat only

To switch the appliance on turn the thermostat dial as far as it will go to maximum position. To set refer to the paragraph "Setting the thermostat". To turn the appliance off completely, turn the dial anticlockwise to minimum, then unplug from the mains socket.

## MODELS WITH SWITCH

- Heating at low power: press switch  (the red zone can be seen on the switch).
- Heating at maximum power: press both switches  ;  (the red zone can be seen on the switch).
- Turning off: turn off both switches.

We recommend unplugging the power cord when the appliance is not in use.



**Please note:** the maximum power is only active when the  switch is pressed.

## MODELS WITH SWIVELLING BASE (ON/OFF PEDAL SWITCH)

A number of models have a swivelling base and ON/OFF pedal switch. The appliance can be manually oriented to an angle of 30° to the right or left to direct the air flow in the preferred direction.

To turn the appliance on, set the thermostat dial and function selector as described above, then press the pedal on the base. To turn the appliance off, just press the pedal again.

**Important:** the appliance will come on only if you press the pedal.

## MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.

## TECHNICAL CHARACTERISTICS

Supply voltage

See rating plate

Absorbed power

"