

**Register Now**   
[www.delonghi.com/register](http://www.delonghi.com/register)

---

DCH6031

## CERAMIC FAN HEATER

### Instructions for use

*This product is only suitable for well insulated spaces or occasional use*



---

**De'Longhi**

## ELECTRICAL CONNECTION (UK ONLY)

---

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

### Important

The wires in the mains lead are coloured in accordance with the following code:



Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



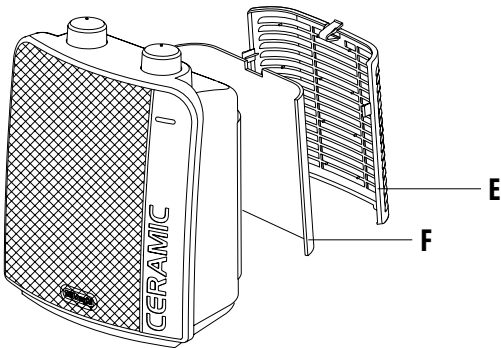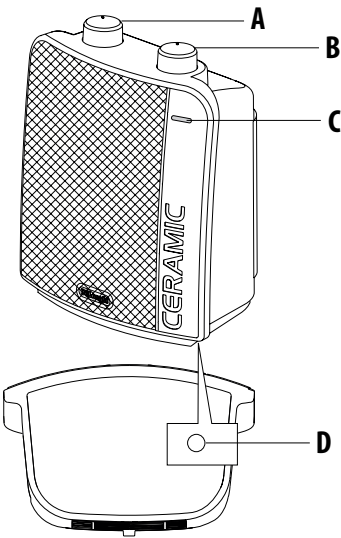

## IMPORTANT WARNINGS

### Safety warnings



#### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.



#### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**

- **CAUTION:** To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



#### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.

- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.
- **WARNING:** to reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



### Safety functions

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or

not at all).

To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again. If the appliance doesn't work please contact the De'Longhi Customer Service.

- **Tip over safety device:** Certain models are fitted with a tip-over switch which turns the appliance off if it falls over. To restart the appliance, simply place it upright again.



**Please note:**

This symbol indicates recommendations and important information for the user.

- Use this heater on a horizontal and stable surface.
- Always use the appliance in an upright position.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- The use of extension leads is not recommended.

However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.

- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance near walls, furniture, curtains, etc.
- Do not use the appliance in rooms with a floor area of less than 4m<sup>2</sup>.
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket.  
Do not store in dusty atmospheres.

- Do not rest anything on the appliance.
- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet area (danger of overheating).
- The appliance must not be hung.
- Some models are supplied with a device which delays of few seconds the fan shut off.

Extra Europe market only:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  
Children should be supervised to ensure that they do not play with the appliance.

## Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## Fundamental recommendations regarding safety

Dear Customer – The plug on this appliance will get 'warm' during use, this is perfectly normal.

This product is A HIGH POWER HEATING APPLIANCE designed to our usual high standards but please make sure your wall sockets are in good condition and the plug is inserted correctly to avoid any accidental overheating.

We suggest that you check the plug AND THE SOCKET regularly if the heater is in prolonged use, if you are in any doubt please consult an electrician.

## DESCRIPTION

- A** Mode selector
- B** Thermostat
- C** Indicator light

- D Tip over switch
- E Filter protection grille
- F Filter

## USE

### Installation

The appliance can be used on any horizontal surface.  
Do not overload the electrical circuit. Avoid using the same socket for other appliances.

### Electrical connection

Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

### Operation and use

1. Make sure the selector (A) is in the "0" position before plugging the appliance into the mains socket.
2. Plug into the mains socket.
3. Turn the appliance on by placing the thermostat (B) in the Max position and the mode selector (A) in one of the following positions: ❄️/1/2/3.

### The following modes are available:

- Summer mode (fan only): turn the mode selector to the ❄️ position (the light comes on).
- Low power operation: turn the mode selector to position "1".
- Medium power operation: turn the mode selector to position "2".
- High power operation: turn the mode selector to position "3".
- To turn the appliance off: turn the mode selector to the "0" position and the thermostat to the ❄️ position, then unplug from the mains.

### Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat (B) slowly anticlockwise until you hear a "click". The thermostat will then keep room temperature at the selected level automatically.

### Frost prevention mode

With the thermostat dial at minimum ❄️ and the mode selector (A) on "3", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

## SAFETY DEVICE

A safety device shuts the appliance down in the case of overheating. To start the radiator up again, contact Customer Experience. See enclosed guarantee leaflet.

## MAINTENANCE

- Always unplug from the mains socket before cleaning.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- To clean the filter, remove the rear grille (E) by pulling it outwards. Remove the dust filter (F) which retains impurities in the air drawn in from the room, blow on it lightly then replace in the appliance.
- Never use abrasive powders or solvents to clean the appliance.

## TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"