

DESCRIPTION

- A ON/STAND-BY button
- B +/- Adjustment buttons
- C Oscillation button
- D "ECO PLUS" function button
- E Timer button
- F MODE button (for selecting the operating mode)
- G Power indicator light
- H Back cover with filter
- I Receiver for remote control (certain models only)

USE



Installation

The appliance can be used on any horizontal surface.
Do not overload the electrical circuit. Avoid using the same socket for other appliances.

Electrical connection

Before plugging the appliance into the mains socket, check that the mains power supply corresponds to the value indicated on the rating plate and that the mains power supply is adequate for the load.

Operation and use

- Connect the appliance to the power outlet.
- The appliance emits a beep and the power indicator light (G) also comes on and remains lit while power to the appliance is on. The appliance goes into STAND-BY.
- Press the ON/STAND-BY button (A) to turn on the appliance. It will begin to heat with the predefined settings.
- Press the MODE button (F) to select one of the following functions available:
 - **Ventilation** 
In this operating mode only the fan operates, so the appliance does not heat the room.
 - **Anti-freeze** 
In this operating mode the appliance keeps the room at a temperature of 7°C to prevent freezing temperatures.
 - **Heating 1 and Heating 2**
In this operating mode you can set the desired temperature by pressing the + and - adjustment buttons (B).
- **Heating 1 (minimum power level):**
The appliance operates at the minimum power, reducing noise and energy consumption to the minimum.
- **Heating 2 (maximum power level):**
The appliance operates at the maximum power for rapid heating of the room.

- To turn off the appliance press button ON/STAND-BY (A). The display could show the count down for about 6 seconds. To completely turn off the appliance, remove the plug from the socket.




Please note: The display can show the temperature in both °C and °F. To change the temperature scale, press and hold the + key for few seconds, then release.

ECO PLUS function

In this operating mode the appliance will automatically set the power level to guarantee the best comfort reducing the energy consumption.


The maximum temperature setting is 26 °C. To activate this function, press the ECO PLUS button (D).


 

Oscillation button

If you want the appliance to distribute the airflow over a larger area, press the oscillation button (C) . The appliance will then oscillate right and left. To stop the oscillation in the desired position, just press oscillation button (C) again.

24-HOUR DIGITAL TIMER



This function can be activated from any operating mode.

Delayed switch-on: with the appliance in the STAND-BY position, press the timer button (E) .


The display shows the symbol  and the time remaining before switch-on. To set the timer, use the + and - adjustment buttons (B), then wait a few seconds for the programming to be set. The display returns to show  for stand-by and the symbol  to indicate you have set the timer.

When the programmed time has been reached, the appliance turns on with the same settings it had during the previous operation.

Delayed shut-off: With the appliance on, press the timer button (E) .

The display shows the symbol  and the time remaining before shut-off. To set the timer, use the + and - adjustment buttons (B), then wait a few seconds for the programming to be set. The display returns to show the current settings and the symbol  to indicate you have set the timer.


When the programmed time has been reached the appliance shuts off automatically. If you want to go back to operation without the timer, press the timer button (E) twice.

The timer symbol  disappears from the display.

Using the remote control (certain models only)

The remote control functions correspond to those on the control panel. See the section "Operation and Use" on the previous page for a description of the functions.

Inserting or replacing the batteries

- The remote control is provided with a lithium battery CR2032. To let the appliance function, remove the battery cover strip, by pulling it.
- To replace the batteries, remove the battery cover by rotating it. Replace the battery paying attention to respect the right polarity as shown in figure 1.
- Replace the cover rotating it towards the position .
- Old batteries must be removed and disposed off in accordance with current legislation as they are harmful to the environment.

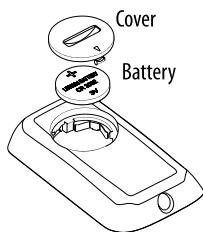


Fig. 1

MAINTENANCE

- Before carrying out any maintenance, always unplug from the mains socket.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- Never use abrasive powders or solvents to clean the appliance.
- The dust filter which retains impurities in the air, It is integrated in the removable back cover. To clean the filter, remove the grille by pulling outward. Blow it lightly, then replace it into the appliance.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
<i>PF</i> display and emits a beep	Temperature sensor is not working properly	Please contact Customer Service
Product doesn't turn on	<p>Check that the plug is connected to the outlet</p> <p>Auto-start is on</p> <p>Room temperature reaches the set temperature</p>	<p>Plug in</p> <p>Wait till time elapsed or press the button (E) twice to cancel the auto-start and push the button (A)</p> <p>Use the "+" button to increase the set temperature</p>
The appliance goes off unexpectedly	<p>Check that the plug is connected to the outlet</p> <p>The set temperature has been reached or the time set on the timer has elapsed</p>	Plug in
A green dot is flashing and unit is off	The tip-over switch has been activated	Make sure the appliance is standing upright on a flat surface. If the appliance doesn't work please contact Customer Service
The display shows "Ht" blinking	The internal temperature is too high. The air intake or outlet grille is obstructed	<p>Check the appliance is correctly positioned respecting the minum distances from the wall, or objects, as indicated on the instruction manual, if not, position the appliance correctly</p> <p>Remove the obstruction</p> <p>Disconnect the plug from the outlet and let the appliance cool down. After few minutes plug the appliance again. If the appliance doesn't work please contact Customer Service</p>