

Register Now 

www.delonghi.com/register

HVA Series

FAN HEATER

Instructions for use

This product is only suitable for well insulated spaces or occasional use



The DeLonghi logo, consisting of the brand name in a stylized font inside a rounded rectangular border.

ELECTRICAL CONNECTION

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

Important

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



DESCRIPTION OF APPLIANCE

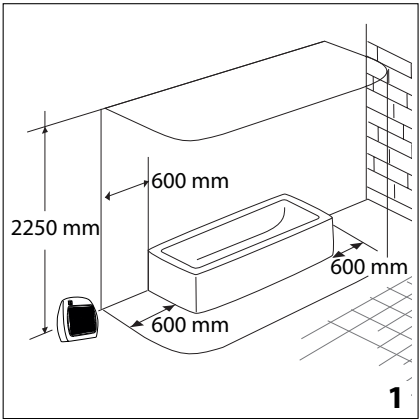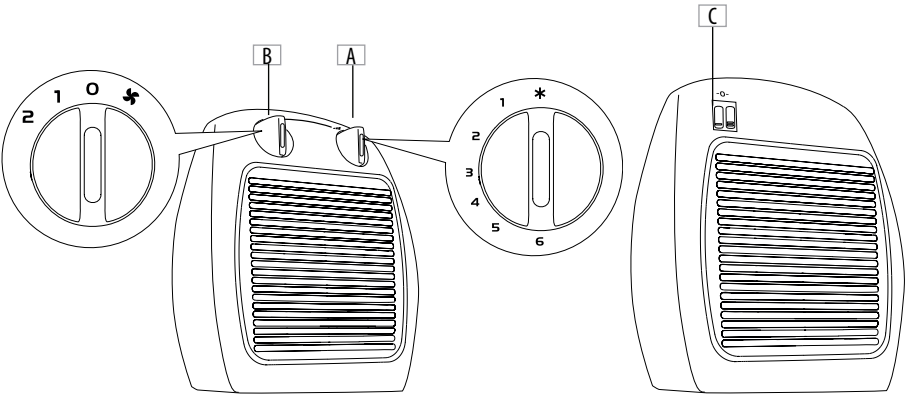

IMPORTANT WARNINGS

Safety warnings



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- **CAUTION:** To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.
- **WARNING:** to reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



Safety functions

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or

not at all).

To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again. If the appliance doesn't work please contact the De'Longhi Customer Service.

- **Tip over safety device:** Certain models are fitted with a tip-over switch which turns the appliance off if it falls over. To restart the appliance, simply place it upright again.



Please note:

This symbol indicates recommendations and important information for the user.

- Use this heater on a horizontal and stable surface.
- Always use the appliance in an upright position.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.
- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance near walls, furniture, curtains, etc.
- Do not use the appliance in rooms with a floor area of less than 4m².
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Do not store in dusty atmospheres.

- Do not rest anything on the appliance.
- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet area (danger of overheating).
- The appliance must not be hung.
- Some models are supplied with a device which delays of few seconds the fan shut off.

Extra Europe market only:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Disposing of the appliance



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

(page 3)

A Thermostat

B Function selector

C Switches (only in certain models)

USE


Electrical connection

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

Functioning and use

MODELS WITH FUNCTION SELECTOR AND THERMOSTAT.

Make sure the appliance is off before plugging into the mains.


1. Plug into the mains.
2. Turn the thermostat dial to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position 1.
5. **Max power operation:** turn the function selector to position 2.
6. **Switching off:** turn the function selector to the "0" position.

Setting the thermostat

Position the thermostat on maximum.

When the room has reached the required temperature, turn the thermostat dial slowly anticlockwise until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.




Frost prevention mode

With the function selector in position 2 and the thermostat dial in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with thermostat only


To switch the appliance on turn the thermostat dial as far as it will go to maximum position. To set refer to the paragraph "Setting the thermostat". To turn the appliance off completely, turn the dial anticlockwise to minimum, then unplug from the mains socket.

MODELS WITH SWITCH

- Heating at low power: press switch  (the red zone can be seen on the switch).
- Heating at maximum power: press both switches  ;  (the red zone can be seen on the switch).
- Turning off: turn off both switches.

We recommend unplugging the power cord when the appliance is not in use.



Please note: the maximum power is only active when the  switch is pressed.

MODELS WITH SWIVELLING BASE (ON/OFF PEDAL SWITCH)

A number of models have a swivelling base and ON/OFF pedal switch.

The appliance can be manually oriented to an angle of 30° to the right or left to direct the air flow in the preferred di-

rection.

To turn the appliance on, set the thermostat dial and function selector as described above, then press the pedal on the base. To turn the appliance off, just press the pedal again.



Important! the appliance will come on only if you press the pedal.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"