

DESCRIPTION OF THE APPLIANCE

- A Function selector
- B Thermostat
- C Indicator light

USE

Electrical connection

Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value in Volts (V) indicated on the appliance and that the socket and power line are appropriate for the load required.

Installation



The appliance must be used in the portable configuration only.

If the appliance is used in the bathroom, respect the safety distances shown in fig. 1 and always position it away from taps, basins, showers, etc.

The appliance must not be placed immediately under a fixed power socket.

Functioning and use

Make sure the appliance is off before plugging into the mains.

1. Plug the appliance into the mains. The light comes on.
2. Turn the thermostat dial to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position 1.
5. **Medium power operation:** turn the function selector to position 2.
6. **High power operation:** turn the function selector to position 3.
7. **Switching off:** turn the function selector to the "0" position and the thermostat dial to the  position, then unplug from the mains socket.




Please note: In models with two power levels, position 2 corresponds to maximum power.

Setting the thermostat

Position the thermostat on maximum. When the room has reached the required temperature, turn the thermostat lever slowly clockwise until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.


Frost prevention mode


With the function selector in position 3 (position 2 for models

with two power levels only) and the thermostat dial in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with thermostat only

To switch the appliance on, turn the thermostat dial clockwise to maximum (the light comes on).

To switch the appliance off completely, turn the knob to the  position, then unplug from the mains.

For the frost prevention function, turn the thermostat dial to the  position and leave the appliance plugged into the mains.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"