

DESCRIPTION

(see p. 3)

- A** Function selector
- B** Warning lamp
- C** Room thermostat

- Never use abrasive powders or solvents.

TECHNICAL CHARACTERISTICS

Power supply	See appliance rating plate
Power consumption	"

USE

Electrical connection

Before plugging into the power socket, make sure that the voltage of your power system corresponds to the value in Volts indicated on the appliance and that the power socket and power line are suitable for the electrical load.

Installation

The device should only be used in an upright position.

OPERATION AND USE

1. Make sure the appliance is turned off before inserting the plug into the power socket and turning on the socket switch if necessary.
2. Turn on the appliance by placing the thermostat (C) in the maximum position and the function selector (A) in one of the following positions: ❄/1/2.
 - **Summer** (fan only): turn the function selector (A) knob clockwise to position.
 - **Min power operation**: Turn the function selector (A) to position "1". The red warning lamp lights up.
 - **Max power operation**: Turn the function selector (A) to position "2".
 - **To switch off the appliance**: Turn the function selector to position "●".

Adjusting the thermostat

When the room has reached the desired temperature, slowly move the thermostat counterclockwise until the indicator light turns off and no further.

The temperature thus fixed will be automatically maintained by the thermostat.

Freezing prevention

With the thermostat knob at the minimum position ❄ and the function selector at pos. 2 the appliance keeps the ambient temperature at about 5°C, preventing freezing with a minimum expenditure of energy.

MAINTENANCE

- Before cleaning, always remove the plug from the power socket.
- Regularly clean the air intake and outlet grilles.