

Proudly distributed by
De'Longhi Australia Pty Limited

P.O. BOX 4540
CASULA MALL NSW 2170
Customer Service Ph: 1800 126 659
Fax: 1800 706932
www.delonghi.com.au
e-mail: info.au@delonghigroup.com

De'Longhi New Zealand Limited

99 Khyber Pass Road
Grafton 1023
Auckland, New Zealand
P.O. Box 58-056 Botany
MANUKAU 2163
Customer Service Ph: 0508 200 300
Fax: 0508 200 301
www.delonghi.co.nz
e-mail: info.nz@delonghigroup.com



Register Now 
www.delonghi.com/register

HVS Series

FAN HEATER Instructions for use



The De'Longhi logo, featuring the brand name in a bold, sans-serif font inside a rounded rectangular border.

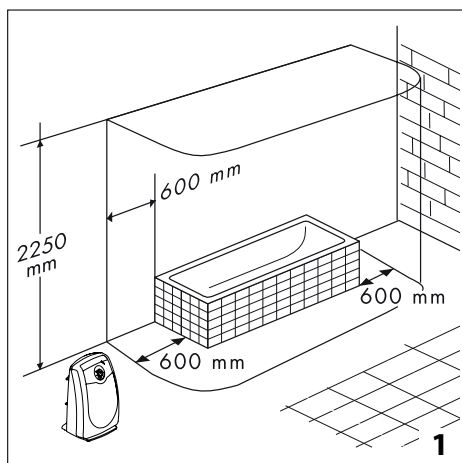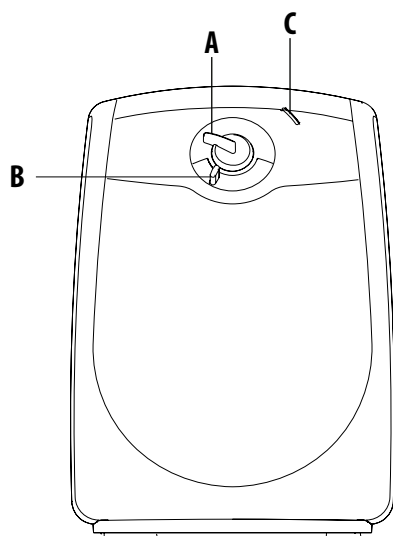

IMPORTANT WARNINGS

Safety warnings



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **CAUTION:** To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the

room on their own, unless constant supervision is provided.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.
- **WARNING:** to reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



Safety functions

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again. If the appliance doesn't work please contact the De'Longhi Customer Service.
- **Tip over safety device:** Certain models are fitted with a tip-over switch which turns the appliance off if it falls over. To restart the appliance, simply place it upright again.



Please note:

This symbol indicates recommendations and important information for the user.

- Use this heater on a horizontal and stable surface.
- Always use the appliance in an upright position.

- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.
- Do not use the appliance near walls, furniture, curtains, etc.
- Do not use the appliance in rooms with a floor area of less than 4m².
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Do not store in dusty atmospheres.
- Do not rest anything on the appliance.
- The appliance must not be hung.
- Some models are supplied with a device which delays of few seconds the fan shut off.
- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet area (danger of overheating).
- For clothes dryers only:
This appliance is intended only for drying textiles washed in water.

Important!

- **WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN.**
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- Examine devices and make sure the battery compartment is correctly secured. Do not use if compartment is

not secure.


- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.

Fundamental safety warnings

Dear customer - the plug on the appliance heats up during use. This is completely normal.

This HIGH POWER HEATING APPLIANCE complies with our usual high standards. You should, however, make sure that your power socket is in good condition and that the plug on the appliance is plugged into the socket correctly to avoid accidental overheating. If the appliance is used for long periods of time, we recommend checking the plug and mains socket regularly. If in doubt, consult an electrician.

Disposing of the appliance

 The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION OF THE APPLIANCE

- | | |
|----------|-------------------|
| A | Function selector |
| B | Thermostat |
| C | Indicator light |

USE

Electrical connection

Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value in Volts (V) indicated on the appliance and that the socket and power line are appropriate for the load required.

Installation

The appliance must be used in the portable configuration only.


If the appliance is used in the bathroom, respect the safety distances shown in fig. 1 and always position it away from taps,

basins, showers, etc.

The appliance must not be placed immediately under a fixed power socket.

Functioning and use

Make sure the appliance is off before plugging into the mains.

1. Plug the appliance into the mains. The light comes on.
2. Turn the thermostat lever to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position **1** (in models with two fan speeds, the fan operates at minimum).
5. **Medium power operation:** turn the function selector to position **2** (in models with two fan speeds, the fan operates at maximum).
6. **High power operation:** turn the function selector to position **3** (the fan operates at maximum).
7. **Switching off:** turn the function selector to the **"0"** position.




Please note: In models with two power levels, position 2 corresponds to maximum power.

Setting the thermostat

Position the thermostat on maximum. When the room has reached the required temperature, turn the thermostat lever slowly clockwise until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode

With the function selector in position 3 and the thermostat lever in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating plate
Absorbed power	"