

ELECTRIC OVEN FOUR ÉLECTRIQUE HORNO ELÉCTRICO

XR640

Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit **www.delonghiregistration.com**.
Visit **www.delonghi.com** for a list of service centers near you.

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez **www.delonghiregistration.com**.
Visitez **www.delonghi.com** pour y voir une liste des centres de réparation proches de chez vous.

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite **www.delonghiregistration.com**.
Visite **www.delonghi.com** para ver la lista de centros de servicios cercanos a usted.

Instructions for use

Keep these instructions

Mode d'emploi

Conservez cette notice

Instrucciones para el uso

Repase y guarde estas instrucciones

 
ELECTRICAL SPECIFICATIONS: CARACTÉRISTIQUES ÉLECTRIQUES: CARACTERISTICAS
ELECTRICAS:

120 V~ 60 Hz 1 400 W

ELECTRICAL CONNECTION

Only use a three-pin, 120 Volt, 60 Hz power outlet

GROUNDING INSTRUCTIONS

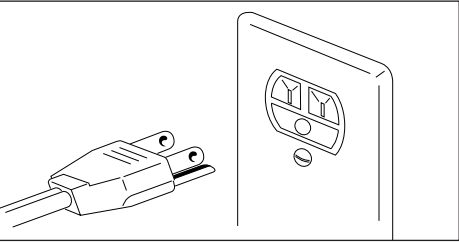

MAKE SURE THAT THE PLUG IS CORRECTLY GROUNDED

This appliance must be grounded: in the event of short circuits, the ground connection reduces the risk of electric shock, allowing the electrical current to be dispersed.

This appliance is fitted with a power cable with ground wire.

The plug must be connected to a power outlet that has been correctly installed and grounded.

WARNING: IMPROPER USE OF THE GROUND WIRE MAY LEAD TO THE RISK OF ELECTRIC SHOCK.

If you are not sure that the power outlet is properly grounded, contact a qualified electrician.

If an extension cord is required, only use three-wire extension cords with three-pin plugs and sockets that fit the plug on the appliance.

The capacity of the extension cord must be greater than or equal to the rated power input of the appliance.

- The length of the power cable for this appliance has been devised so as to avoid the possibility of tripping on or getting entangled in a long cable.

If a longer cable is required, an extension cord can be used with a rated capacity not below 15 amps, 120 volt and with UL/CSA approval.


- A six-foot long extension cord, with a 15 amp rating, is available from authorized resellers.

When using an extension cord, make sure it does not hang loose in the work area or where someone may accidentally trip on it or get entangled in it.

- Handle the power cable with care for longer life; avoid pulling or stressing the cable around the connectors to the power outlet and the appliance.

CONVERSION TABLE

°C	°F
120.....	250
135.....	275
150.....	300
163.....	325
177.....	350
190.....	375
205.....	400
218.....	425
233.....	450

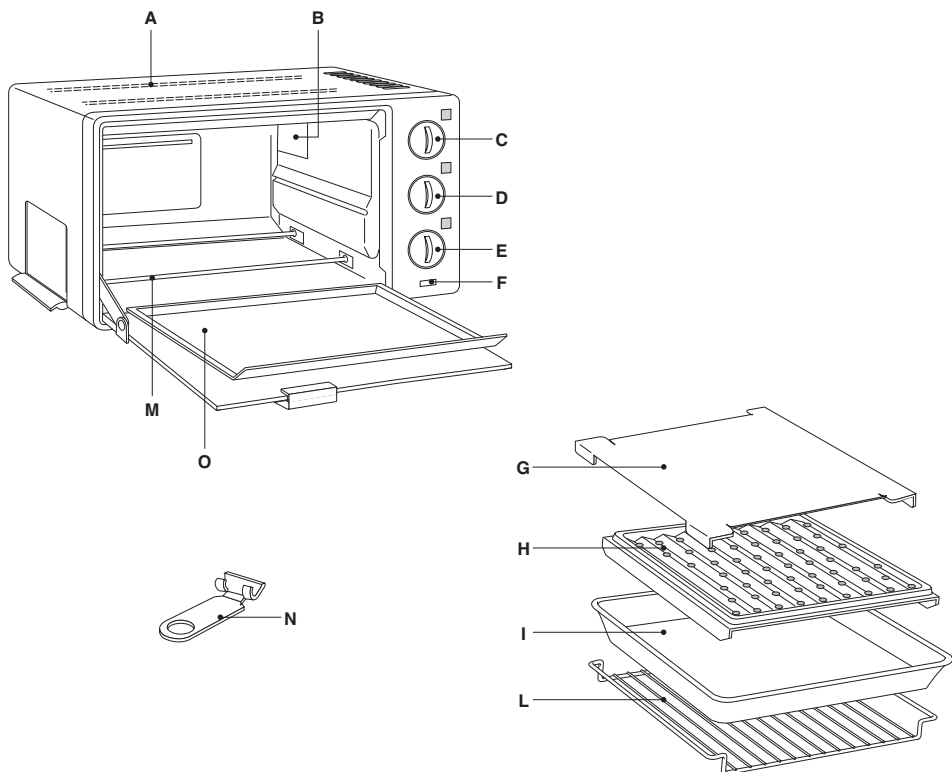 

DESCRIPTION

- A. Upper heating element
- B. Oven light (*)
- C. Thermostat dial
- D. ON/OFF and Toast programming dial
- E. Function selector dial
- F. ON/OFF light
- G. Cookie sheet (*)
- H. DuraStone II broiling rack
- I. DuraStone II bake pan
- L. Wire rack
- M. Lower heating element
- N. Handgrip for wire rack (*)
- O. Crumb Tray (*)

(*) *Optional: not for all models*

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**








2. Do not touch hot surfaces. Use handles or dials.
3. Before using this appliance, move it two to four inches away from the wall or any object on the counter top. Remove any object that may have been placed on top of the appliance. Do not use on surfaces where heat may cause a problem.
4. To protect against electrical shock, do not place unit in or under water. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children because the door and the metal parts may get hot.
6. Unplug from outlet when not in use and before cleaning. Always turn the ON/OFF dial to "OFF" and the temperature dial to "I" before unplugging.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. If the plug gets hot, please call a qualified electrician.
14. Do not use this appliance for other than intended use.
15. Use extreme caution when removing the oven pan or disposing of hot grease.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. To assure safe operation, oversized foods or utensils must not be inserted into the oven.
18. A fire may occur if this appliance is covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.

19. Never leave the toaster-oven-broiler unattended when in use (especially when broiling and toasting).
20. When broiling, the oven-pan, the broiling rack and wire rack must be used according to the instructions on page 5.
21. Extreme caution should be exercised when using containers other than oven proof metal glass or ceramic.
22. Do not store any materials, other than the manufacturer's recommended accessories, in the oven when not in use.
23. Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
24. Do not cover any part of the oven with metal foil. This will cause overheating of the oven.
25. To switch off the toaster-oven broiler, turn the ON/OFF dial to "OFF" and the thermostat dial to "I".
26. **Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.**
27. Once having removed the appliance from the packaging, check that the door is intact. As the door is made from glass, it is fragile, and should be replaced if visibly chipped, scored or scratched. Furthermore, when using, cleaning or moving the appliance, do not slam or bang the door or pour cold liquids on the glass when the appliance is hot.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

SUMMARY OF OPERATION

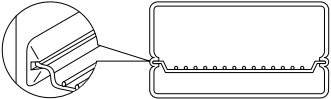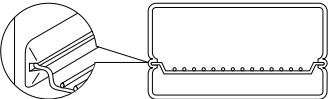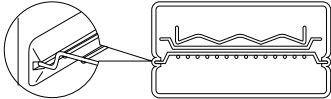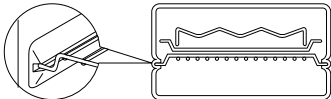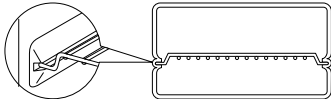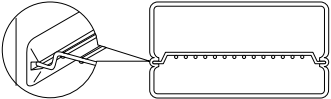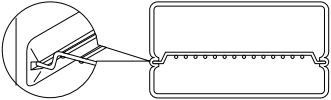Program	Position ON/OFF and toast programming dial	Position of thermostat dial	Position of function selector dial	Position of wire rack/accessories	Notes and tips
Keep warm	ON	KEEP WARM	BAKE/ TOAST		Turn to this setting to keep hot food warm. Do not hold food more than an hour or reheat cold food. If not hot enough for serving turn temperature dial up.
Bake	ON	Up to maximum temp. indicated	BAKE/ TOAST		Ideal for meat, pizza, cakes, baked casseroles, fruit desserts, fish, stuffed vegetables, puddings and other moist foods that do not require browning and crisping.
Broil	ON	BROIL	BROIL	<div><p>Lower position</p><p>Upper position</p></div>	Always use the broiling rack (H) set in the bake pan (I). The oven pan with the broiling rack are shown in the two broiling positions: Use the UPPER POSITION when a faster browning and broiling time is required. Place the broiling rack with side walls turned downwards to rest in the pan. Allow 1 inch between the food and the upper heating element (A). Ideal for foods such as hamburgers, steaks, kebabs. Use the LOWER POSITION for foods that require a longer broiling time such as chicken. For the lower position, turn the broiling rack so that it rests in the pan with its side walls upwards.
Top browning	ON	BROIL	BROIL		Use the broil settings to top-brown open-face sandwiches, cheese toppings, hors d' oeuvres. When using for the first time keep an eye on the food and reduce the operating time so that over browning is thus avoided.
Toast	Range of light to dark	TOAST	BAKE/ TOAST		Set the ON/OFF dial to the color desired. Some breads, muffins etc.. will take longer than others.
Sandwich	Range of light to dark	TOAST	BAKE/ TOAST		Reset dial if results are too light. Place the bread to be toasted following instructions on page 9.

OPTIONAL ACCESSORIES

COOKIE SHEET (G)

 
Must be placed directly on the wire rack. Perfect for baking biscuits and pastries.

OVEN LIGHT (B) AND ON/OFF LIGHT (F)

- If the oven has an interior light (B), the light will remain turned ON when the oven is in operation. The ON/OFF light (F) will turn OFF once the selected baking temperature inside the oven is reached and will turn on and off during cooking.
- If your oven does not have an oven light (B), the ON/OFF light (F) will light continuously when the oven is switched on (it does not operate as a temperature indicator).

HANDGRIP FOR WIRE RACK (N)

Use handgrip to bring the wire rack out of the oven when it is hot.

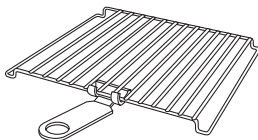

KEEP FOOD WARM

Place the food to be kept warm on the wire rack

- Set the thermostat dial (C) to the "KEEP WARM" position.
- Set the ON/OFF (D) dial to the "ON" position.
- Set the function selector dial to the "TOAST BAKE" position.

Once the "keep warm" function is no longer needed, turn the thermostat dial to "I" and the ON/OFF dial to OFF.

This feature is designed to keep foods warm, after they are cooked for short periods of time without overcooking. We do not recommend keeping foods warm for prolonged periods or using this feature to reheat frozen or cold foods.

BAKING

You can bake foods in your oven, just as in your regular oven.

Casseroles or baking dishes may be placed directly on the removable wire rack (L). Use the DuraStone II bake pan (I) (or cookie sheet, if provided) to bake such items as cookies, biscuits, rolls and uncovered casserole dishes. Place the DuraStone II bake pan or the cookie sheet directly on the removable wire rack (please refer to the table on page 5 for wire rack position).

1. Close the door
2. Set the thermostat dial (C) to the desired position/temperature.
3. Turn the ON/Off (D) dial to the "ON" position.
4. Turn the function selector dial to the TOAST/BAKE position.
5. When baking is finished turn the thermostat dial to the "I" position and the ON/OFF dial to the "OFF" position.

NOTE: We do not recommend the use of glass covers on casseroles. Glass cooking dishes should never be closer than one inch from the heating element. During the bake and toast function, do not put the DuraStone II bake pan (or any other accessory/container) directly on the lower heating element.



HELPFUL BAKING HINTS

To obtain best performance from this toaster-oven-broiler:

- Do not overfill the oven. Whenever possible, place foods in center of oven.
- Avoid opening the door too frequently to prevent heat loss.
- Foil may be used to cover the baking dish or pan. Be sure the ends of foil are tucked closely against the edge of the baking dish/pan.

TEMPERATURE AND TIME FOR TYPICAL FOODS (baking and roasting)

The suggested temperature and times will vary depending on the temperature of the food placed in the oven, the quantity and personal preference. Times given for meat and poultry are for

refrigerator temperature. **Add five minutes for preheating the oven.** In order to avoid overcooking when using for the first time we suggest you to set a low temperature. As you use the oven, the best settings will become familiar.

FOOD	TEMPERATURE SETTING	APPROXIMATE TIME	NOTES AND TIPS (For wire rack position refer to table on page 5)
Whole chicken 2.5-3 lbs. Unstuffed	400 °F	80-90 min. or until internal temperature of 175 °F in thigh and breast	Turning at half of cooking time is not required. It is possible to cook also above the broiling rack inverted (lower position) inside the oven pan, in order to reduce spattering.
Pork loin or Rib Roast 2-3 lbs	400 °F	80-90 min. or until internal temperature of 170 °F is reached	Roast as for whole chicken.
Beef Sirloin or Rib Roast 3 lbs	400 °F	60-70 min. or until tender and brown	No turning is needed.
Meat loaf 2-2.5 lbs	350 °F	50-60 min.	Use the DuraStone II bake pan. No turning is needed. Mix and beat together 1.5 - 2 lbs. of ground meat (beef). With eggs, bread-crumbs, salt, pepper and flavoring.
Baked potatoes 3-4 large cut into pieces	400 °F	50-60 min.	Cut the potatoes into small pieces, use the DuraStone II bake pan, stir three times when cooking and after at least 20 minutes.
Loaf cakes	350 °F	Follow traditional recipe timing (slightly lowered)	Use metal rectangular bake pans.
Pies, uncovered	350 °F	Follow traditional recipe timing (slightly lowered)	Use metal bake pan for cakes
Cookies: drop rolled and cut, sliced, formed	375 °F	10-15 min.	Insert the rack as for TOASTING function. Use the cookie sheet (G) (if provided) or the oven pan.

TOP BROWNING

Top browning is ideal for melting, crisping and toasting food surfaces. Use it for open face sandwiches, pre-buttered muffins or browning cooked casseroles.

1. Place the food on the DuraStone II bake pan (or on the cookie sheet, if provided) and place it on the wire rack.
2. Close the door, set both the function selector and thermostat dials to BROIL.
3. Turn the ON/OFF and toast programming dial to MEDIUM or to ON (for longer browning times)

 
When experimenting with new uses, watch the food to avoid overbrowning.

When the browning cycle is completed (top surface with desired color) turn the thermostat dial to "I" and the ON/OFF dial to OFF.

BROILING

Always use the DuraStone II bake pan with the DuraStone II broiling rack for broiling. No preheating of the broiler is necessary. Do not leave the broiler unattended when in use. Before using the broiler for the first time and after use, wash the DuraStone II bake pan and broiling rack with warm, sudsy water. Do not cover the oven wire rack with foil. This prevents fat and oils from draining, causing spatter and smoking, and also restricts air circulation for proper ventilation.

1. Place the oven wire rack as shown in the table on page 5.
2. Place the food to be broiled on the DuraStone II broiling rack (H) (set inside the bake pan), then put the assembly on the wire rack.
3. Always leave the oven door slightly ajar (as shown) during the broiling process.
4. Turn the thermostat dial (C) to "BROIL".
5. Turn the ON/OFF (D) dial to the "ON" position.
6. Turn the function selector dial to "BROIL".
7. When broiling is finished, turn the ON/OFF dial to the "OFF" position and the thermostat dial to the "I" position. Care should be taken when turning food, removing the bake pan and disposing of the grease collected while broiling. Use oven mitts.



- The broiling rack can be inverted if necessary, but do not attempt to broil without the rack: the broiling rack shields the fat drippings from direct heat, reducing spattering, smoking and possible flaming. Always use the DuraStone II bake pan when broiling any fatty foods.
 - For easier clean-up, the DuraStone II bake pan can be lined with foil. Be sure not to cover the broiling rack or let foil extend beyond the edges of the pan.
 - To top-brown casseroles with crumb or cheese toppings, place the dish directly on the wire rack 2 - 3 inches from the top heating element and watch carefully to avoid burning the toppings.
- NOTE: Oven-glass dishes should not be exposed to direct broiler heat.

When broiling is finished, turn the ON/OFF dial (D) to the "OFF" position and the thermostat dial (C) to the "I" position.


SUGGESTED BROILING TIMES

FOOD	WEIGHT OR THICKNESS	APPROX. TIME (Turn at half time)
Beef Sirloin, Porterhouse Steak	1- 1 1/2 in.	Rare 12 - 15 min. Medium 16 - 18 min.
Beef Flank Steak, Fillet	3/4 - 1 in.	Rare 10 - 12 min. Medium 13 - 16 min.
Hamburger	1 in.	Medium-well 15 - 18 min.
Pork Chop	3/4 - in.	Well 18 - 22 min.
Fish Fillets, Steak (See note)	1/2 - 1 in.	10 - 16 min.
Chicken Pieces, Broiler	3 - 4 lb.	40 - 50 min. until juices run clear when fork-tested and no pink when cut.
Bacon, Sausage	Up to capacity of broilrack.	10 - 15 min. for crisp bacon, well-done sausage.


Since fish is non-fatty it can be broiled directly on the DuraStone II bake pan, broil until it flakes easily with a fork. Thin fillets need not to be turned.

AUTOMATIC TOASTING

 
- The capacity of the wire rack (L) is such as to allow the toasting of 6 slices of bread at the same time. In any case better results are obtained with 4 slices.
- For toasting, place the slices of bread as shown below:

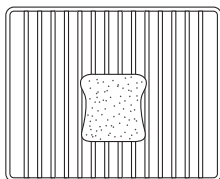


Toasting one slice

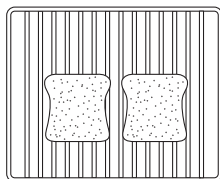 

Toasting two slices

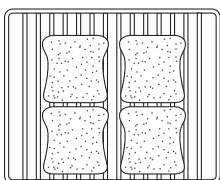 

Toasting four slices

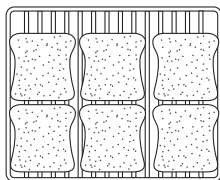 

Toasting six slices

For consecutive toasting, turn the toast dial to a lower setting.

Always use the oven wire rack for toasting bread, sandwiches, English muffins and frozen waffles.

1. Place the wire rack as shown in the table on page 5.
2. Center the food to be toasted on the wire rack. Close the door.
3. Set the thermostat dial to TOAST/BROIL position and the function selector dial to TOAST/BAKE.
4. The ON/OFF and toast programming dial (D) can be set clockwise for light, MEDIUM or DARK toast or any shade desired in between.

When using the toaster-oven-broiler for the first time, set the dial (D) to a medium setting. Toast a few pieces of bread to check for desired brownness. If necessary, adjust the control to suit your preference.

5. When toasting, both the top and bottom heating elements switch on to brown both sides of the food at the same time. Condensation may build up on the inside of the glass door. This is normal.

The condensation will evaporate during the toasting cycle.

6. A ring indicates the end of the set time. The toasting cycle has been completed and the heating elements will shut

off automatically. Turn the thermostat dial to the "I" position.

NOTE:

This toaster-oven-broiler is capable of toasting in a wide range of colors, automatically from light to dark. However, if you prefer a lighter shade of toast, simply interrupt the automatic toast cycle by turning the ON/OFF knob to "OFF". This will shut the unit off without damaging the oven.

If you prefer a darker shade, restart the toasting cycle by turning the dial (D) clockwise until the desired color is obtained.

Then switch off manually the thermostat dial and the toast programming dial as described earlier.

As you use the oven, the best settings for favorite breads will become familiar.

HINTS FOR TOASTING SUCCESS

Heavier breads and frozen breads will require a darker setting. One slice of bread will require a lighter setting than several slices.

CARE AND CLEANING

- **After use let the oven cool and unplug the appliance cord before cleaning.** This unit has been designed and engineered with your safety in mind. To assure maximum safe operation, keep unit clean free of grease and build up of food particles.
- Wash the pan, broiler rack and wire racks in hot, sudsy water or in a dishwasher. Remove stubborn soil with a scouring pad. Do not use steel wool pads as bits of metal may remain and touch electrical parts or contaminate the food.
- To clean the inside walls use a damp cloth and a mild liquid soap solution. Never use harsh abrasives, corrosive products or spray detergents.
- Clean the glass door with a damp sponge or cloth. If necessary use a glass cleaner. Wiping a damp paper towel over the inside of the door for a few minutes will make cleaning easier.
- Clean the outside finish of the oven with a damp sponge. Never use an abrasive cleaner as it will damage the finish.
- Dry wet surfaces with a dry cloth after cleaning.

CLEANING THE BOTTOM OF THE OVEN

If your oven has a bottom that can be opened:

To clean the bottom of the oven, open the access panel by pressing the latch spring then pull the access panel downwards. (see fig. A/B). Place the oven on its rear panel. This will make cleaning easier.

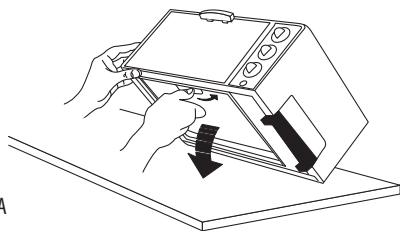 


Fig. A

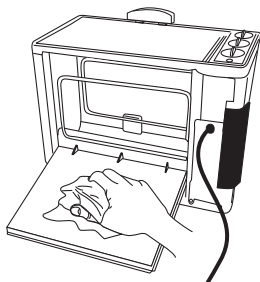 


Fig. B

Clean the oven floor after use to avoid build-up of residue, as this will affect the cooking performance. Brush off crumbs or wipe the oven floor with a damp cloth. For stubborn stains, use a nylon or plastic scouring pad or a non-caustic cleaner, dry thoroughly before closing. After cleaning, close the access panel and check that it is locked securely into position.

IF YOUR OVEN HAS A CRUMB TRAY:

Slide the crumb tray out from under the bottom of your oven (see Fig. C). Wash by hand. Should the particles be difficult to remove, rinse the crumb tray with hot soapy water and if necessary, scour it delicately, without scratching it.

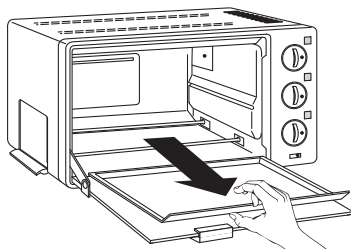 


Fig. C

OTHER SERVICING

Any servicing requiring disassembly should be performed by an authorized service representative.

OVEN LIGHT (optional)

The oven may be used safely even if the oven light is not working. Contact an authorized service representative for bulb replacement.

LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at 01-800-322-3848 or log onto our website at www.delonghi.com.

Residents of Canada:

Please contact our toll free hotline at 01-888-335-6644 or log onto our website at www.delonghi.com.

Residents of Mexico:

Please contact our toll free hotline at 01-800-711-8805 or log onto our website at www.delonghi.com.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states/countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/country to country.