

# Description - Important safeguards en

## Description

- A Water tank door
- B Water tank filter
- C Tank release lever
- D Removable water tank
- E Regenerable limescale filter
- F Limescale filter retainer lever
- G Hook for steam/cable tube and protective cap for limescale prevention system
- H Iron rest
- I Cable tidy

## Description accessories

- J Indicator paper to determine water hardness (Total Hardness test)
- K Limescale filter holder
- L Sachet of citric acid granules
- M Mobile iron rest

## Description of iron

- N Iron at temperature light
- O Continuous steam lock
- P Steam button
- Q Thermostat dial
- R Steam selector (tip or whole plate)

## Description of the control panel

- S "Safe Transport" iron lock/release
- T "No water" light ✱
- U "OK" button: confirms filling of the tank (if held down for at least 5 seconds, confirms filter regeneration or steam generator cleaning)
- V Filter light ☼☼☼
- W Water hardness regulator
- X Steam regulation lights
- Y Steam regulation dial
- Z Steam generator on button
- Z1 Iron on button

### ✱ Important:

- When the water in the tank has run out, the pump becomes noisier.  
This is part of normal operation and is not a cause for concern. **However, you are recommended to top up the water in the tank immediately.**
- When the "no water" light comes on, you should top up the water in the tank as rapidly as possible. This will enable you to continue ironing after a short interruption
- **When the "no water" light comes on, you should not continue steam ironing with the pump vibrating.**

**If this practice is continued, in the long run it could irreparably damage internal components.**

## Fundamental safety warnings



### *Danger of electric shock!*

This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional.

Adapters, multiple sockets or extensions should not be used.

- To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains. Never fill the appliance under running water.
- Always unplug the appliance from the mains socket before filling the tank with water.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to Customer Services.
- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.**

**Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



### *Danger of burns!*

- Never aim the steam at persons or animals.
- The user must never leave the iron unattended when plugged in.
- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.
- All contact between the hot base and cables must be rigorously avoided.





### *Important!*


- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the

appliance and contact qualified personnel only.

- Dispose of the plastic bag with care as it represents a hazard for children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children must be supervised to ensure they do not play with the appliance.

- NEVER mix the water in the tank with stain removers, additives or perfumed oils. This reduces the safety of the appliance and irreparably damages the steam generator which would have to be replaced.
- **“Safe transport”**: certain models are fitted with a locking system which locks the iron in position during transport. **When the iron is locked in position, it must not be used as a carrying handle to transport the appliance!** To position the iron correctly, insert the tip of the plate into the housing, rest the iron in position and move the lock to the locking position  .

To release the iron, move the lock into the release position  and remove the iron from its housing. While ironing, you can rest the tip of the iron on the heat resistant base above the housing.

- The appliance must be used and rested on a stable heat resistant surface.
- When placing the iron on the iron rest, make sure the appliance is resting on a stable surface. **NEVER store the iron in a vertical position!**
- Do not use the appliance if it has been dropped and there are visible signs of damage or leaks.

If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to Customer Services.

### Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

### What water to use

This ironing system has a resin limescale filter installed in the tank, allowing you to use ordinary tap water.

The resins reduce water hardness, prolonging the working life of the appliance.



Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc).




Do not use mineral or other types of water (such as rain-water or water for batteries or air conditioners etc.).

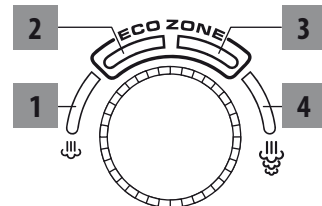


**Important!**

If you use filtering devices, make sure the water obtained has a neutral pH.


**Using for the first time:** If the light  comes on when you have filled the iron, press OK to confirm filling of the tank. If the light comes on again, fill again and confirm by pressing the OK button.

### Ironing tips



1. Ideal for garments not requiring steam.
2. Ideal for good quality ironing with maximum energy and water savings.
3. Ideal for top quality ironing with energy and water savings.
4. Ideal for difficult-to-iron garments or creases.

### Efficiency of the limescale filter


When the  filter light comes on, the limescale filter must be regenerated or replaced.

**Regenerating the limescale filter:** see instructions on page. 6.

**Replacing the limescale filter:** limescale filters are available from customer services. Remove the exhausted filter and insert the new one.



**Please note:**

- Regenerating the resin filter guarantees its long term efficiency. However, after 5 years of use, it should be replaced.
- The appliance cannot be used without the limescale filter inserted correctly.
- If you do not regenerate the limescale filter, you are recommended to turn the water hardness regulator to position 4 and rinse the steam generator whenever the filter light comes on .


# Rinsing the steam generator - Disposal en



 

## Rinsing the steam generator

After every 10 ironing sessions, proceed as described on page 7.

### Disposal

 In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## Troubleshooting en

PROBLEM	CAUSE	REMEDY
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the iron and steam generator buttons.
Steam comes from behind the tank.	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact an authorised De'Longhi Customer Services.
Water leaks out from the holes in the bottom of the sole plate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The ironing system is positioned on an unstable and/or sloping surface.	Rest the ironing system on a stable flat surface.
Brown coloured fluid leaks from the sole plate.	Chemical water softeners or additives have been poured into the water tank or steam generator.	Never pour products into the water tank (see "What water to use"). Clean the sole plate with a damp cloth.
The first time the appliance is turned on, you notice smoke	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal
The appliance emits a continuous noise associated with vibrations.		Unplug the system from the mains and contact an authorised De'Longhi Customer Services.
After topping up with water, the light does not reset. 	The steam lock is on.	Release the steam lock O and press the OK button.
	The filter has been removed for maintenance/replacement.	Repeat the fill procedure used when the iron was turned on for the first time.
After regenerating/replacing the filter, the light  does not reset.		Press and hold the OK button down for a few seconds.