

Fundamental safety warnings



Danger of electric shock!

This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- **Models with cable wind button (A8):** do not pull the power cable out beyond the point indicated by the red mark on the cable.
The yellow mark before the red mark indicates that the cable is about to run out.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains.

- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

The iron must not be left unattended while connected to the mains.

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.

- All contact between the hot base and cables must be rigorously avoided.



Important:

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



NEVER rest the iron on the case of the appliance when the iron rest is removed.

- Use the removable iron rest on an ironing board.
- **NEVER** use the iron rest on a table. The heat could ruin the surface!

The appliance must be used and rested on a stable heat resistant surface.

When placing the iron on the iron rest, make sure the appliance is resting on a stable surface.

- **NEVER store the iron in a vertical position!**

Do not use the appliance if it has been dropped and there are visible signs of damage or leaks. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.





 


Description of the appliance (A)




- A1** Water reservoir extraction handle
- A2** Removable water reservoir
- A3** Hook for steam/cable tube
- A4** Iron tip housing for transport system and heat resistant base to rest the iron during ironing)
- A5** Removable tube for regenerating the built-in limescale filter
- A6** Limescale system cap (steam generator rinse)
- A7** Power cable
- A8*** Cable wind button (*certain models only)
- A9** Steam/cable tube
- A10** Control panel
- A11** Removable iron mat
- A13*** Cable tidy strip (*certain models only)
- A12*** Power cable compartment (*certain models only)

Description of iron (B)

- B1** Iron on light
- B2** Steam button
- B3** Thermostat dial
- B4*** Steam selector (tip or whole soleplate) (*certain models only)

Description of control panel (C)

- C1** light:  :
 - On: regenerate the filter
- C2** light:  :
 - On: rinse the steam generator
- C1**  + **C2**  + **Beep**:
 - Flashing: the removable tube (A5) has not been closed
- C3** button  : press and hold down for at least 5 seconds to confirm steam generator rinsing and filter regeneration
- C4** Water hardness regulator
- C5** Steam regulation dial with 
- C6** "Safe Transport" lock/release
- C7** ON/OFF button 

- C8**  light:
 - On: steam ready
 - Flashing: the water in the steam generator is heating up
- C9**  light:
 - On: no water in water reservoir
 - Flashing: the water reservoir is not in place or is positioned incorrectly
- C10**  light:
 - On: appliance on
 - Flashing: the appliance is in **AUTO OFF** (auto-off)

Description of accessories (D)

- D1** Indicator paper
- D2** Regenerator
- D3** Regenerator cap
- D4** Regenerator container
- D5** Regenerator safety clip

What water to use

This ironing system has a resin limescale filter allowing you to use ordinary tap water.

The resins reduce water hardness, prolonging the working life of the appliance.



Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc.).



Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).





Important!







If you use filtering devices, make sure the water obtained has a neutral pH.

Setting water hardness

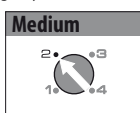
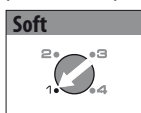
The resins reduce water hardness, prolonging the working life of the appliance.

The filter must be regenerated when the  and  lights on the appliance control panel come on steadily. To customise the warning according to the water used, proceed as follows:

- check the hardness of your water using the indicator paper **D1** provided:
 - dip the paper in the water for 1 second,
 - shake to remove excess water;
 - wait for 1 minute;
 - compare the result with the following table to confirm the hardness of your water.


0 - 9 °F Soft

10 - 18 °F Medium

19 - 36 °F Medium-hard


>36 °F Very hard


- set the appliance according to the hardness measured:
 - use a coin to turn the water hardness regulator to the position corresponding to your water hardness:



Filling the reservoir

Make sure the cable is unplugged from the mains socket.

- Release the reservoir (fig. 1) and remove;
- Fill the reservoir, taking care not to exceed the MAX level marked on the reservoir (fig. 2).
- Reinsert the reservoir fully (fig. 3);
- Models with cable wind button:** extract the cable as far as the yellow mark (fig. 4). The cable **must** be extracted when the appliance is plugged into the mains power supply.
- Models without cable wind button:** extract the cable completely (fig. 4).
- Plug the appliance into a mains socket.

 *Please note:*







The first time you use the appliance, the steam generator is empty.

 
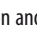

When filling the steam generator for the first time, it will take longer to heat up as the air must be eliminated from the steam generator and replaced by the water.

During filling/heating it is normal for the pump to make a noise.

The appliance will also run out of water much more quickly than with subsequent fills.

Operation

- Press the  button (fig. 5). The light on the button and the light on the iron come on. The  light flashes on the control panel.
- When the  light comes on steadily, the appliance is ready to use.
- To deliver steam, press the steam button B2 (fig. 6).
- NEVER rest the iron in a vertical position while ironing.
- DUAL VAP (certain models only) (fig. 7): place the selector on the  symbol to deliver steam from the whole soleplate; place the selector on the  symbol to deliver steam from the whole soleplate; place the selector on the  symbol to deliver steam from the whole soleplate.
- Safe transport: the iron has a locking system to avoid it being accidentally dropped during transport or when stored after use.

To lock the iron in position, insert the tip in the housing on the iron rest, rest the iron on the base and place the lock/release slide C6 in the  position (fig. 8). To release the iron, place the slide in the  position and extract the iron (fig. 9). During ironing, leave the slide in the  position.



Never move or lift the appliance using the iron as a carrying handle.

- Removable iron rest: to iron more comfortably, you can remove the iron rest from the appliance and rest it on the ironing board (fig. 10).
Never use the iron rest on a table. The heat could ruin the surface of the table!

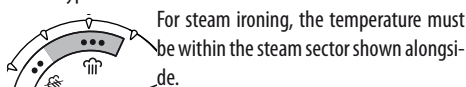


Please note:

- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.
- While ironing, it is normal to hear the water fill pump come on and go off. This is caused by transfer of water from the reservoir to the steam generator. It is part of normal operation and is not a cause for concern.

Adjusting the iron thermostat (B3)

Turn the thermostat dial to set the most suitable temperature for the type of fabric to be ironed.



Below is a brief guide to help you choose the best temperature for the type of fabric to be ironed.

- Acetate, acrylic, nylon, polyester, rayon
- Silk, wool
- Linen, cotton

Steam regulation dial (C5)

The steam regulation dial enables the quantity of steam to be increased or decreased according to the fabric being ironed.



1. Ideal for garments requiring little steam.
2. Ideal for difficult-to-iron garments or creases.



2. Ideal for good quality ironing with maximum energy and water savings.
3. Ideal for top quality ironing with energy and water savings.

Topping up the water in the reservoir

When the water runs out, the light comes on. When the "no water" light comes on steadily, you should top up the water in the reservoir as soon as possible. This will enable you to continue ironing after a short interruption.

When the water in the reservoir has run out, the pump becomes noisier.

This is part of normal operation and is not a cause for concern. However, **you are recommended to top up the water in the reservoir immediately.**

When this light comes on, proceed as described in the section "Filling the reservoir".

Dry ironing

To dry iron, turn the thermostat dial on the iron to select the temperature most suitable for the garments to be ironed, then iron without pressing the steam button.

Auto-Off

 

If steam is not delivered for more than 8 minutes, auto-off is activated and the light C10 in the / AUTO OFF button flashes.

To reactivate the appliance, press the button or the steam button on the iron and wait for the steam ready light (C8) to come on steadily.

Rinsing the steam generator

To optimise operation, maintain constant steam production over time and save energy, rinse the steam generator whenever the light (fig. 11) comes on. Proceed as follows:

- Make sure the appliance is turned off, unplugged from the mains and completely cold.
- Extract the reservoir and remove the iron rest;
- Turn the protective cap A6 anticlockwise (fig. 12).
- Unscrew the steam generator cap (fig. 13) anticlockwise and remove;
- Eliminate the water in the steam generator (fig. 14);
- Rest the appliance on its side (fig. 15) and fill with a maximum of 0.7 litres of water using a funnel to avoid the water spilling outside the steam generator. Close tightly;

- Shake the appliance to rinse the entire steam generator (fig. 16), then throw the water away;
- Rinse again;
- Screw the steam generator cap back on clockwise;
- Replace the protective cap A6.
- The next time you turn the iron on, press the  button (fig. 17) for at least **5 seconds**. The  light goes off.

Before resuming ironing, discharge steam into the air for a few seconds to completely eliminate any residues from the internal circuits.

Regenerate the limescale filter

When the  (C2) and  (C1) lights (fig. 18) come on, the limescale filter needs regenerating.



Important!

The filter should only be regenerated when the lights come on (with average use, about every two years).

Proceed as follows:



- Rinse the steam generator as described below;
- Make sure the appliance is off and unplugged from the mains power socket;
- Place the appliance near a sink;
- Remove the water reservoir;
- Extract the removable tube (A5) and rotate downwards (fig. 19);
- Take a dose of regenerator (D4);
- Remove the regenerator cap (D3) by pulling it upwards (fig. 20);
- Upturn the descaler and insert it in the hole in the water reservoir area (fig. 21), then press down forcefully until it rests on the safety clip (fig. 22);
- Remove the safety clip from the regenerator (D5 –fig. 23);
- Push the regenerator down as far as it will go (fig. 24). A small quantity of water comes out of the removable tube and onto the water reservoir area;
- Fill the water reservoir to the MAX level, put back in place and push down fully. After a few minutes, descaler solution comes out of the removable tube.
Wait about 30 minutes until the solution flow has stopped.
- Remove the water reservoir, fill it up to the MAX level again and put back in place. Rinse for about 30 minutes.
- Extract the water reservoir and eliminate the empty de-

scaler pack.



- Turn the removable tube and push it back fully in its compartment.

- The next time the appliance comes on, press the



button for **5 seconds**. The  (C2) and  (C1) lights go out.

After use

Place the iron on the iron rest and lock in place by placing the lock/release slide in the   position. Wait for the system to cool down.

Models with cable wind button: press the  button (A8) to wind the cable.

Models without cable wind button: wind the cable tidily and hold it in place with the Velcro cable tidy strip (A13), then place it in the cable compartment.

Fix the steam/cable tube on the hook A3.

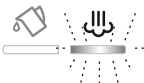



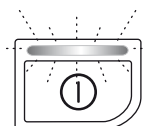



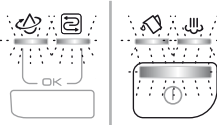
Store the iron in a dry place.









Disposal



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

Explanation of lights en

INDICATOR LIGHT	MEANING	WHAT TO DO
 The light flashes	The water in the steam generator is heating up.	Wait for the appliance to heat up completely.
 The light is on steadily	Steam ready: the appliance is at temperature.	Begin ironing.
 The light is on steadily	The water reservoir is empty.	Fill the reservoir as described in the instructions.
 The light flashes	The reservoir is not in place.	Make sure the water reservoir is fully inserted
 The light flashes	When the steam button is not pressed for 8 consecutive minutes, auto-off is activated.	To exit from auto-off, press the ① button, or the steam button on the iron, wait for steam to be ready (☁ light on steadily) and proceed to iron.
 The light is on steadily	The steam generator needs rinsing.	Proceed to rinse as described in the instructions. After rinsing, press the OK button (C3) for at least 5 seconds.
 The lights come on steadily	The permanent filter needs regenerating to guarantee efficiency (with average use of the appliance, this must be done about every two years).	Proceed with regeneration as described in the instructions. At the end of the operation, press the OK button (C3) for at least 5 seconds.
 The lights flash and the appliance emits a beep	The removable tube for filter regeneration has not been closed correctly.	Make sure the tube is correctly in place and pushed in fully.
 All lights on the control panel flash simultaneously.	All lights on the control panel flash simultaneously.	All lights on the control panel flash simultaneously.

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the  button (C7).
Steam leaks from under the steam generator.	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact the manufacturer's customer services.
Water leaks out from the holes in the bottom of the soleplate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button (B2) several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The thermostat dial (B3) is not in the correct position.	Place the thermostat dial (B3) in the  sector.
	The ironing system is positioned on an unstable and/or sloping surface.	The iron must be used and rested on a stable surface.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water reservoir or steam generator.	Never pour products into the water reservoir (see section: "What water to use"). Clean the plate with a damp cloth and rinse the steam generator ().
White specks come out of the iron soleplate.	The steam generator has not been rinsed regularly.	Rinse the steam generator ().
The first time the appliance is turned on, you notice smoke.	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal.
A click sound comes from inside the appliance.		This is completely normal.
The steam generator cap is difficult to unscrew.	Limescale has made the steam generator cap difficult to open.	Turn the cap forcefully. To avoid the problem, rinse the steam generator frequently.
During regeneration, no solution comes out of the removable tube.	The tube (A5) has not been extracted correctly.	Put the tube (A5) back then extract again .
		Wait for a few minutes for the internal circuit to fill and solution to come out. If necessary, extract and replace the water reservoir.
After regenerating the filter, the  and  lights do not go out.		Hold the OK button (C3) down for at least 5 seconds.
After filling the reservoir, the  light comes on again.	The reservoir (A2) is not positioned correctly.	Extract and reinsert the reservoir or turn the appliance on and off by pressing the  button (C7).
I have started filter regeneration but did not rinse before turning the appliance on.		Turn the appliance off immediately and complete the procedure by rinsing.
The appliance has been dropped during transport.		Check that the appliance has not been damaged and if necessary take it the manufacturer's customer services.