

IMPORTANT SAFEGUARDS en

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use appliance only for its intended use.
2. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
3. Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
4. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
5. Always disconnect appliance from electrical outlet before filling the appliance with water, emptying the water from the boiler, and when the appliance is not in use.
6. Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the appliance, take it to an authorised Customer Service Centre en for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.
7. Not intended for use by children. Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam appliance upside down – there may be hot water in the reservoir.
9. The use of an accessory attachment is not recommended by De'Longhi and may result in fire, electric shock or personal injury.
10. To arrange the cord so that it cannot be pulled or tripped over.
3. Connect the appliance to an efficiently earthed power supply and sockets with a current rating of 15A.
4. The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line. If in doubt, consult a qualified professional.
5. Never leave the appliance filled with water in a room where it will be subject to a temperature below or equal to 32°F/0°C.
6. After removing the packing, make sure the appliance is not damaged. If in doubt, do not use the appliance and contact a authorised Customer Service Centre.
7. Do not leave packaging (plastic bags, polystyrene foam, etc) within reach of children as it could be dangerous.
8. Noises could occur when the steam generator is heating up or cooling down. This is due to normal expansion of the metal it is made from.
9. If the cap or hydraulic and electric safety system are damaged, have the components replaced with original spare parts by an authorised Customer Service Centre.
10. To repair or if the power cable is damaged and requires replacement, contact your local dealer or an authorised Customer Service Centre in order to avoid compromising the efficiency of your appliance. For the same reasons, you are always recommended to use original spare parts.
11. DO NOT OPEN THE CAP WHILE USING THE APPLIANCE OR BEFORE THE WATER IS COMPLETELY USED UP. This occurs when steam is no longer discharged by the appliance. To add water, unplug and wait about 15 minutes to avoid sudden temperature changes. Place a cloth over the cap and unscrew slowly to allow residual steam to escape gradually.
12. Use the iron rest provided ONLY. If it is damaged, use an original replacement only.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken

IMPORTANT SAFEGUARDS en

The use of all electrical appliances implies the observance of some fundamental rules. **IN PARTICULAR:**

- Never touch the appliance with wet or damp hands or feet. Never immerse the appliance in water.
- Never use the appliance in bathrooms.
- Never pull the power cable or the appliance with wet or damp hands or feet.
- Never let children or unfit persons use the appliance without supervision.
- Never leave the appliance plugged in as it could be a safety hazard.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- In the event of malfunction or faulty operation, switch off and do not attempt to repair. For all repairs contact a Customer Service Centre appointed by the manufacturer only and ask for original spare parts. Failure to respect the above could reduce the safety of the appliance.
- When the appliance is to be discarded, after unplugging from the mains, the cable should be cut to make the appliance unusable.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre in order to eliminate all risk.
- Never fill the appliance under running water.
- All contact between the hot base and cables must be rigorously avoided.
- If the safety thermistor is activated, the appliance switches off automatically. Before re-use, it must be serviced by a qualified professional.
- Do not direct the steam jet toward people, animals or iron clothes while they are being worn as this could be dangerous.
- Do not use the iron on excessively damp clothes.
- After ironing, allow the iron to cool before putting away.
- Never use mixtures of stain removers or similar.
- Unplug the appliance when not in use. Do not leave plugged in unnecessarily.
- During use, the steam generator should not be moved.
- Never unscrew the steam generator cap while the appliance is plugged into the mains.
- The ironing system must be used and rested on a stable ironing board/surface.
- If the ironing system is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. Take to an authorised service centre.
- The steam generator should be placed on a flat surface extremely resistant to high temperatures.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Symbols used in these instructions

Important warnings are identified by these symbols. These warnings must absolutely be respected.



Danger!

Failure to observe the warning could result in possible life threatening injury from electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Danger of burns!

Failure to observe the warning could result in scalds or burns.



Please note:

This symbol identifies important advice or information for the user.

Description - Preparation for use - What water to use - Fill the steam generation

Steam ironing - Using the "domestic iron" - Adjusting the thermostat

en

Description (see page 3)

- A** Funnel with water level control
- B** Iron rest
- C** Control panel
- D** Steam/cable tube compartment
- E** Cable tidy
- F** Steam generator cap

Control panel

- G** "Steam ready" light
- H** Steam generator button with light
- I** Steam regulation knob
- J** Iron button with light

"Domestic" iron

- K** "On" light (steady) or auto-off light (flashing)
- L** Continuous steam lock
- M** "Iron at temperature" light
- N** Steam button
- O** Steam trigger
- P** Thermostat knob

Preparation for use

What water to use

The machine works with normal **tap water**.

In case of very hard water (hardness above 27°F) we suggest using 50% demineralized water diluted with tap water.



Important!

Never use other types of water, chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc).

Filling the steam generator



Danger!

Make sure the cable is unplugged from the mains socket.

- Unscrew the steam generator cap **G** (fig. 1).
- This model is provided with a special funnel **A** providing an indication of the water level in the steam generator. When the indicator at the centre of the funnel rises, the steam generator is full (fig. 2).
- Screw up the cap **G** fully and plug the iron into the mains socket.
- Each time you turn the system on, always **FILL** the steam generator completely.





Danger of burns!

DO NOT OPEN THE CAP WHILE USING THE APPLIANCE OR BEFORE THE WATER IS COMPLETELY USED UP. This occurs when steam is no longer discharged by the appliance. To add water, unplug and wait about 15 minutes to

avoid sudden temperature changes. Place a cloth over the cap and unscrew slowly to allow residual steam to escape gradually.

Steam ironing

- Press the  button **J** (iron on) and the  button **H** (steam generator on). The lights on the corresponding buttons come on (fig. 2).
- Wait until the "steam ready" light **G** and "iron at temperature" light **M** go out.
- Proceed by pressing the steam button **N** or **O**.



Please note:

- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.
- The lights **G** and **M** will go on and off during ironing, according to the temperature reached by the steam generator and iron. It is part of normal operation and not a cause for concern.

Using the "domestic" iron

- After turning the appliance on as described above, wait for the "iron at temperature" light **M** to go off.
- To deliver steam, press the steam button **N** on the iron. You can use either the top button **N** or the bottom trigger **O** as you prefer.
- The "auto-off" safety device turns the iron off if left unused for 30 seconds in the horizontal position or 15 minutes in the upright position (fig. 4). When the device is active, the light **K** flashes. This light is on steadily during normal use and indicates that the iron is plugged into the mains. To resume ironing, shake the iron slightly forwards until the light **K** comes on steadily. Wait for the light **M** to go off before discharging steam.
- The iron can be rested in an upright position. Make sure the surface is flat to avoid the iron falling over accidentally. To rest the iron correctly, fix the steam/cable tube on the right or left by pushing it as far as it will go until it clicks into place.

Adjusting the thermostat

Turn the thermostat knob to set the most suitable temperature for the type of fabric to be ironed.

For steam ironing, the temperature must be within the steam sector shown alongside.



Steam regulation knob I - Topping up the steam generation with water - Dry ironing - Cleaning - After ironing - Ironing tips

en

Below is a brief guide to help you choose the best temperature for the type of fabric to be ironed.

● Acetate, acrylic, nylon, polyester, rayon


● ● Silk, wool

● ● ● Linen, cotton

Steam regulation knob I

The steam regulation knob **I** enables the quantity of steam to be increased or decreased according to the fabric being ironed.

When you turn the iron on, you are recommended to turn the steam regulation knob to the maximum steam position.

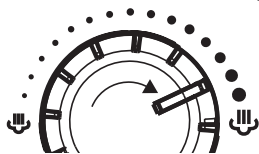

Topping up the steam generator with water

When the water in the steam generator runs out, the iron no longer delivers steam.

To fill again, proceed as follows:

- Turn the steam generator off using the steam generator button **H**.
Release any steam left using the **N** or **O** control.
- Turn the appliance off using the ON/OFF button **J**.
- Unplug from the mains socket and wait 15 minutes for the appliance to cool down.
- Unscrew the cap slowly and fill as described in the paragraph "filling the steam generator".

Dry ironing

- To dry iron, turn the appliance on by pressing the button **J**.
- Turn the thermostat knob to select the most suitable temperature for the garments being ironed and wait for the "iron at temperature" light to go off.

Cleaning

- The surface of the plate must be kept clean. To clean, just wipe the cold surface with a damp cloth.
- **The iron must never be treated with descaling solutions.**

After ironing

When you have finished ironing, you are recommended to put the ironing system away.

Place the iron on the iron rest and wait for the system to cool down before putting it away.

To put the appliance away tidily, place the steam/cable tube in the compartment **D**, wrap the power cable around the

cable tidy **E** (fig. 6) and place the funnel on the cap (certain models only).

Store the iron in a dry place.

Please note:

- After ironing, the water remaining in the steam generator need not be drained.
However, the appliance should be drained of water if left unused for long periods.

Ironing tips

- The original appearance and softness of fabrics such as velvet or wool, or gloves, bags etc. can be restored by passing the iron a short distance away with the steam jet in operation.
- Do not rest or use the iron on zips, hooks, rings etc. to avoid scratching the sole plate.
- Separate clothes according to the recommended ironing temperature and begin ironing with items requiring the lowest temperatures.
- Silk may be dry-pressed on the reverse.
- Wool, cotton and fine linen can either be steam-ironed on the reverse or on the right side, interposing a thin cloth between the iron and the fabric to avoid "shine".
- Starched fabrics require greater moisture.
- Iron whites and light colours on the right side and dark colours on the reverse. Embroidery should also be ironed on the reverse to make it stand out.
- Each time the iron is used (including for the first time) or if you have not used steam for several minutes, press the steam button a number of times away from the ironing board. This will eliminate condensation from the steam circuit.

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the iron and steam generator buttons.
Water leaks from the holes in the bottom of the sole plate.	The temperature of the sole plate is too low.	Adjust the iron temperature as described in the section "Adjusting the thermostat"
	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The ironing system is positioned on an unstable and/or sloping surface.	Rest the ironing system on a stable flat surface.
	The Auto-off device intervened and the appliance is cold.	Wait for the "iron on temperature" and "Steam ready" lights to go off.
Brown coloured fluid leaks from the sole plate	Chemical water softeners or additives have been poured into the steam generator.	Never pour products into the steam generator (see our tips in the quick guide). Clean the sole plate with a damp cloth.
The first time the appliance is turned on, you notice smoke	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
Steam leaks from the bottom of the steam generator.	The steam generator has not been filled before beginning ironing.	Each time you turn the system on, always FILL the steam generator completely.
While heating up, the appliance vibrates	The steam generator was not filled before turning the system on	Turn the appliance off, leave it to cool completely, unscrew the cap and fill the steam generator with water
After filling the steam generator, steam leaks from the cap.	The cap is not screwed up tightly.	Screw the cap up completely.
	The cap gasket is worn.	Contact the manufacturer's customer services.

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for three years (3) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com

Residents of Mexico: Please contact our toll free number 01-800-711-8805 for assistance or log onto our website at www.delonghi.com

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states/ countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does country law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/country to country.