

Fundamental safety warnings



Danger of electric shock!

This is an electrical appliance and may cause electric shock. You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- **Models with cable wind:** unwind the cable completely, then rewind it when you have finished ironing.
Do not pull the power cable out beyond the point indicated by the red mark. The yellow mark before the red mark indicates that the cable is about to run out.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.
- To fill or top up with water, turn the ironing system off by rotating the dial B1, then unplug from the mains.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



surfaces marked with this symbol are liable to get hot during use.

- Never aim the steam at persons or animals.
- The iron must not be left unattended while connected to the mains. Keep the appliance out of reach of children less than 8 years of age when it is energized or cooling down.
- Never move the appliance while in operation.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.
- All contact between the hot base and power cables must

be rigorously avoided.



Important:

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only. Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



NEVER rest the iron on the case of the appliance when the iron rest is removed.

- During use, rest the appliance on a work surface only (e.g. ironing board or table).
- Use the removable iron rest on an ironing board.
- The appliance must be used and rested on a stable heat resistant surface.
- The iron must be used and rested on a stable surface, resisting to high temperature. When placing the iron on the iron rest, make sure the appliance is resting on a stable surface.
- **NEVER** store the iron in **the vertical position!**
- Do not use the appliance if it has been dropped and there are visible signs of damage or leaks. If the ironing system is dropped causing visible damage to the appliance, do not use. Take to customer services.

Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

Description of the appliance (A)

(* certain models only)

- A1 Removable iron rest
- A2 Water softener filter compartment
- A3 Limescale filter retainer lever
- A4 Water tank
- A5* Cable wind button
- A6 Power cable
- A7* Power cable compartment
- A8 Hook for steam/cable tube

Description of control panel (B)

- B1 Appliance ON/OFF and steam regulation dial
- B2 Steam lights
- B3 Filter replacement confirmation button
- B4 Filter replacement light
- B5 Water hardness regulator

Description of iron (C)

- C1 Steam button
- C2 Steam ready light
- C3 Thermostat dial

Description of accessories (D)

- D1 Water softener filter
- D2 "Total Hardness Test" indicator paper

What water to use

The appliance is fitted with a resin water softener filter which must be inserted in the filter compartment. This enables normal tap water to be used. The resins reduce water hardness, prolonging the working life of the appliance.



Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc).



Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).



Important!

- **Never use the appliance if the filter is not in place.**

IF THE FILTER BECOMES EXHAUSTED, THE TANK MUST BE FILLED WITH DEMINERALISED WATER.

Using for the first time (pag. 4)

When using the appliance for the first time

- measure and set water hardness by turning the water hardness regulator (B5) according to the result of the test paper (D2);
- immerse the filter in water for at least five minutes;
- Place the limescale filter supplied in the appliance (fig. 2) and fix in position by placing the lever in the position.
- rotate the knob in position.


When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the appliance. You are recommended to ventilate the room. It is also normal to hear the noise of the pump conveying water to the iron. When the iron is at temperature, press the steam button and hold it down to fill the water circuit and begin steam delivery. This operation will be faster when you use the iron again.

Filling and use (page 5)

Important:

- When the water in the water reservoir has run out, the pump becomes noisier. This is part of normal operation and is not a cause for concern. However, **you are recommended to top up the water in the reservoir immediately.**
- **To dry iron** do not press the steam button.

Ironing tips

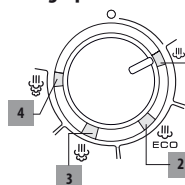


1. Ideal for garments requiring little steam.
2. Ideal for good quality ironing with maximum energy and water savings.
3. Ideal for top quality ironing with energy and water savings.

4. Ideal for difficult-to-iron garments or creases.

Disposal



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is connected correctly and turn the ON/OFF/steam regulation dial.
Water leaks out from the holes in the bottom of the soleplate.	The water in the tank has almost run out.	Fill the tank with water.
	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The thermostat dial on the iron is not in the steam sector.	Position the thermostat dial on the iron in the steam sector.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water tank.	Never pour products into the water reservoir (see section: "What water to use"). Clean the soleplate with a damp cloth.
	The thermostat dial on the iron is not in the steam sector.	Position the thermostat dial on the iron in the steam sector.
The first time the appliance is turned on, you notice smoke.	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	The noise is generated by the water intake pump.	This is completely normal.
	The water in the tank has almost run out.	Fill the tank with water.
The appliance emits no steam.	The water circuit is empty.	This is normal the first time you use the iron or when you have changed the filter. Rotate the B1 knob on  . When the iron is at temperature, press the steam button C1 and hold it down to fill the water circuit and begin steam delivery. If the noise persists, unplug the ironing system and contact the manufacturer's customer services.
After replacing the filter, the filter replacement light does not go out.		Press and hold the "Anticalc Reset" button for five seconds.
Steam or bubbles appear in the tank and the system makes a slight noise.	The safety system is releasing excess pressure.	This is part of normal functioning.