

## SAFETY

### Fundamental safety warnings



#### **Danger of electric shock!**

This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains.

- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

Do not open the cap while using the appliance or before the water is completely used up. This occurs when steam is no longer discharged by the iron. To add water, unplug from the mains and wait about 15 minutes to avoid sudden temperature changes. Place a cloth over the cap and unscrew slowly to allow residual steam to escape gradually.

The iron must not be left unattended while it is connected to the mains supply.

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.

- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.
- All contact between the hot base and power cables must be rigorously avoided.



#### **Important:**

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only. Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- During use, rest the appliance on a work surface only (e.g. ironing board or table).
- (Certain models only) Use the removable iron rest on an ironing board.
- **NEVER** use the iron rest on a table. The heat could ruin the surface!
- While ironing, you can rest the tip of the soleplate on the heat resistant base above the housing.

The appliance must be used and rested on a stable heat resistant surface.

When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- **NEVER store the iron in a vertical position!**

The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

EN

## DESIGNATED USE

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

## DESCRIPTION OF THE APPLIANCE

(see page 3)

- 1) Steam button lock (certain models only)
- 2) Steam discharge button
- 2A) Steam discharge button (certain models only)
- 3) Iron thermostat knob
- 4) "Iron at temperature" light
- 5) Removable iron rest (certain models only)
- 6) Clamps (models with removable iron rest only)
- 7) Steam generator cap
- 8) Cable winder (certain models only)
- 9) Fixed iron rest (certain models only)
- 10) Funnel (certain models only)
- 11) Control panel
- 12) Luminous iron/steam generator ON/OFF button and "steam ready" light

## PREPARATIONS FOR USE

### Models with removable iron rest:

#### Preparing for ironing

This should always be done with the appliance cold and unplugged from the mains.

In this iron, the position of the steam/cable tube can be adapted to all working positions:

- lift the removable iron rest (5);
- turn the tube clamps outwards (fig. 1);
- extract the tube and position it on the opposite side, rotating it from the back of the control panel to avoid the internal cables twisting (fig. 2);
- fix by turning the clamps with a coin.  
Unless the tube clamps are correctly closed, the iron rest cannot be positioned correctly.

**Unless the tube clamps are correctly closed, the iron rest cannot be positioned correctly.**



#### What water to use

The appliance works with normal **tap water**.



Never use other types of water (e.g. rainwater, water for batteries, conditioners etc.) and do not use chemicals or detergents (e.g. perfumed water, essences, water softener, etc).

### Filling the steam generator and connecting to the mains



Make sure the power cable is unplugged from the mains socket.

- Unscrew the steam generator cap (7) and fill the tank with water using the funnel (10) (if provided).
- In versions fitted with a cap lock device, the cap cannot be unscrewed while the steam generator is still under pressure.
- Screw up the cap (7) fully and plug the iron into the mains socket.




Important: never unscrew the cap (7) with the boiler under pressure.

## OPERATION

Press the ON/OFF switch ① (12) to turn power to the steam generator and iron on.

The "steam ready" light incorporated in the switch (12) and the "iron at temperature" light (4) on the iron come on.

Position the thermostat regulation knob (3) in the area indicated in figure 4 or 5 (depending on model) according to the type of fabric to be ironed (fig. 3). Before ironing, wait until the "iron at temperature" light (4) goes off and the "steam ready" light OK  (12) comes on.

To obtain steam, press the steam button (2) located on the iron.

NB: If your iron has both buttons (2) and (2A), you can choose to use either the top or the bottom button as you prefer.



#### **Please note:**

- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.
- Both lights go on and off during ironing according to the temperature of the steam generator. It is part of normal operation and not a cause for concern.
- Each time the iron is used (including for the first time) or if you have not used steam for several minutes, press the steam button a number of times away from the ironing board. This will eliminate condensation from the steam circuit.

### Steam button lock (1) (certain models only)

This device allows a continuous output of steam to be obtained by keeping the steam button pressed down mechanically, avoiding the need to do so manually.

To use, simply press the button (2) and slide the lock backwards.

To release the button, slide the lock forwards.



#### ***Danger of burns!***


The tube connecting the iron to the steam generator may become hot.

### Topping up the steam generator with water

When the water in the steam generator has run out, no more steam is given off. To refill, proceed as follows:

- Vent any steam left using the button (2) or (2A) on the handle of the iron.
- Turn the appliance off using the switch (12).
- Unplug from the mains socket.
- Wait a few minutes for the iron to cool down.
- Unscrew the cap slowly and fill as described in the paragraph “filling the steam generator”.

### Dry ironing

- the appliance into the mains.
- Press the switch OK  (12) to turn power to the iron on. The “iron at temperature” light (4) and the light incorporated in the switch come on.
- Position the thermostat regulation knob (3), according to the type of fabric to be ironed (fig. 3).
- When dry ironing, do not use the steam control (2).



#### ***Please note!***

When the iron has reached the selected temperature, the light (4) goes out.

### After ironing

Attendere che l'apparecchio si raffreddi, quindi, nei modelli dove removibile, sistemare il poggiaferro sull'apparecchio.

Nei modelli dove previsto, avvolgere il cavo all'avvolgicavo (8)

### DISPOSAL



In compliance with European Directive 2002/96/EC, the appliance must not be disposed of as household waste, but must be taken to an official differentiated waste collection centre.