

Description - Important safeguards en

Description

- A Water tank door
- B Water tank filter
- C Tank release lever
- D Removable water tank
- E Regenerable limescale filter
- F Limescale filter retainer lever
- G Hook for steam/cable tube and protective cap for limescale prevention system
- H Iron rest
- I Cable tidy


Description accessories

- J Indicator paper to determine water hardness (Total Hardness test)
- K Mobile iron rest

Description of iron

- L Iron at temperature light
- M Steam button
- N Thermostat dial
- O Steam selector (tip or whole plate)

Description of the control panel

- P Safe Transport™ iron lock/release
- Q "No water" light ✱
- R "OK" button: confirms filling of the tank (if held down for at least 5 seconds, confirms filter regeneration or steam generator cleaning)
- S Filter light 
- T Water hardness regulator
- U Steam regulation lights
- V Steam regulation dial
- W Steam generator on button
- X Iron on button

✱ Important:

- When the water in the tank has run out, the pump becomes noisier.
This is part of normal operation and is not a cause for concern. **However, you are recommended to top up the water in the tank immediately.**
- When the "no water" light comes on, you should top up the water in the tank as rapidly as possible. This will enable you to continue ironing after a short interruption
- **When the "no water" light comes on, you should not continue steam ironing with the pump vibrating. If this practice is continued, in the long run it could irreparably damage internal components.**

Fundamental safety warnings



Danger of electric shock!

This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains.

If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.

Before cleaning or servicing, disconnect the appliance by unplugging from the mains.

- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

The user must not leave the iron unattended while connected to the mains power supply;

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.
- All contact between the hot base and cables must be rigorously avoided.



 



Important:

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

- Use the removable iron rest on an ironing board.
- NEVER use the iron rest on a table. The heat could ruin the surface!
- **"Safe transport"**: certain models are fitted with a locking system which locks the iron in position during transport. **When the iron is locked in position, it must not be used as a carrying handle to transport the appliance!** To position the iron correctly, insert the tip of the soleplate into the housing, rest the iron on the iron rest and move the lock to the locking position  .
To release the iron, move the lock to the release position   and remove the iron from the housing.
- While ironing, you can rest the tip of the soleplate on the heat resistant base above the housing.

The appliance must be used and rested on a stable heat resistant surface.

When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- **NEVER store the iron in a vertical position!**

The appliance is not to be used if it has been

dropped, if there are visible signs of damage or if it is leaking. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

What water to use

This ironing system has a resin limescale filter installed in the tank, allowing you to use ordinary tap water.

The resins reduce water hardness, prolonging the working life of the appliance.



Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc).




Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).




Important!

If you use filtering devices, make sure the water obtained has a neutral pH.

Using for the first time: If the light , comes on when you have filled the iron, press OK to confirm filling of the tank. If the light comes on again, fill again and confirm by pressing the OK button.

Ironing tips

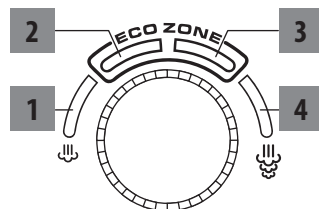

1. Ideal for garments not requiring steam.
2. Ideal for good quality ironing with maximum energy and water savings.
3. Ideal for top quality ironing with energy and water savings.
4. Ideal for difficult-to-iron garments or creases.

Rinsing the steam generator - Disposal en

Efficiency of the limescale filter

When the  filter light comes on, the limescale filter must be replaced.

Replacing the limescale filter: see instructions on page. 6. Limescale filters are available from customer services. Remove the exhausted filter and insert the new one.



Please note:

- The appliance cannot be used without the limescale filter inserted correctly.



Rinsing the steam generator



After every 10 ironing sessions, proceed as described on page 7.

Disposal



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

Troubleshooting en

PROBLEM	CAUSE	REMEDY
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the iron and steam generator buttons.
Steam comes from behind the tank.	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact an authorised De'Longhi Customer Services.
Water leaks out from the holes in the bottom of the sole plate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The ironing system is positioned on an unstable and/or sloping surface.	Rest the ironing system on a stable flat surface.
Brown coloured fluid leaks from the sole plate.	Chemical water softeners or additives have been poured into the water tank or steam generator.	Never pour products into the water tank (see "What water to use"). Clean the sole plate with a damp cloth.
The first time the appliance is turned on, you notice smoke	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal
The appliance emits a continuous noise associated with vibrations.		Unplug the system from the mains and contact an authorised De'Longhi Customer Services.
After topping up with water, the light does not reset. 	The filter has been removed for maintenance/replacement.	Repeat the fill procedure used when the iron was turned on for the first time.
After replacing the filter, the light  does not reset.		Press and hold the OK button down for a few seconds.