

## FUNDAMENTAL SAFETY WARNINGS



### **Danger of electric shock!**

This is an electrical appliance and may cause electrical shocks.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- **Models with cable wind button (A7):** Do not pull the power cable out beyond the point indicated by the red mark. The yellow mark before the red mark indicates that the cable is about to run out.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains.

If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.

Before cleaning or servicing, disconnect the appliance by unplugging from the mains.

During use, the pressurised apertures must not be opened for filling, descaling, rinsing or inspection.

- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

The iron must not be left unattended while it is connected to the mains.

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.

- All contact between the hot base and cables must be rigorously avoided.



### **Important**

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only. Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



NEVER rest the iron on the case of the appliance when the iron rest is removed.

- Use the removable iron rest on an ironing board.
- NEVER use the iron rest on a table. The heat could ruin the surface of the table!

The iron must be used and rested on a stable heat-resistant surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- **NEVER store the iron in a vertical position!**

The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

### **Designated use**

- This appliance must be used exclusively for the purpose for which it was expressly conceived.
- Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

## DESCRIPTION









### Description of the appliance (A)

- A1 Water reservoir extraction handle
- A2 Removable water reservoir
- A3 Hook for steam/cable tube
- A4 Iron tip housing for transport system and heat resistant base to rest the iron during ironing
- A5 Limescale system cap (steam generator rinse)
- A6 Power cable
- A7\* Cable wind button (\*certain models only)
- A8 Steam/cable tube
- A9 Control panel
- A10 Removable iron mat
- A11\*Power cable compartment (\*certain models only)
- A12\*Cable tidy strip (\*certain models only)

### Description of iron (B)

- B1 Iron on light
- B2 Steam button
- B3 Thermostat dial
- B4\* Steam selector (tip or whole soleplate) (\*certain models only)

### Description of control panel (C)

- C1  EXTRA STEAM on/off button (when washing the steam generator, press and hold the button for at least 8 seconds to reset the “wash steam generator” light)
- C2  light on: rinse the steam generator
- C3  light on: extra steam active
- C4 Slide to lock /release  the iron in the “safe transport” position
- C5  light:
  - On: no water in reservoir
  - Flashing: the water reservoir is not in place or is positioned incorrectly
- C6  light:
  - On: steam ready
  - Flashing: the hot water is heating up
- C7 Light on: appliance on  
Light flashing: the appliance is in AUTO-OFF mode (standby)
- C8 Pulsante  ON/OFF button (the appliance comes on in OPTIMAL STEAM mode; to turn the appliance off, press and hold the button for 1 second)

### What water to use

The appliance works with normal tap water.



**Important!**

In case of very hard water (hardness above 27°F) we suggest using demineralised water diluted with 50% tap water. Never use demineralised water on its own.



Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc.).



Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).

### Filling the reservoir

Make sure the cable is unplugged from the mains socket. Release the reservoir (fig. 1) and remove;

- Release the reservoir (fig. 1) and remove;
- Fill the reservoir, taking care not to exceed the MAX level marked on the reservoir (fig. 2);
- Reinsert the reservoir fully (fig. 3);
- **Models with cable wind button:** extract the cable as far as the yellow mark (fig. 4). The cable must be extracted when the appliance is plugged into the mains power supply.
- **Models without cable wind button:** extract the cable completely (fig. 4).
- Plug the appliance into a mains socket.










#### **Please note:**


The first time you use the appliance, the steam generator is empty.

When filling the steam generator for the first time, it will take longer to heat up as the air must be eliminated from the steam generator and replaced by the water.







During filling/heating it is normal for the pump to make a noise. The appliance will also run out of water much more quickly than with subsequent fills.

### Operation

- Press the  button (fig. 5). The appliance is in OPTIMAL STEAM mode and the light on the button and the light on the iron come on. The  light flashes on the control panel.
- When the  light comes on steadily, the appliance is ready to use.
- To deliver steam, press the steam button B2 (fig. 6).
- To use EXTRA STEAM, press the  button. When the  light comes on steadily, EXTRA STEAM is active. To go back to OPTIMAL STEAM, press the  button again.
- NEVER rest the iron in a vertical position while ironing.
- DUAL VAP (\*certain models only) (fig. 7): place the selector on the  symbol to deliver steam from the whole soleplate.

plate; place the selector on the  symbol to deliver steam from the tip only.

- Safe transport: the iron has a locking system to avoid it being accidentally dropped during transport or when stored after use.

To lock the iron in position, insert the tip in the housing on the iron rest, rest the iron on the base and place the lock/release slide C4 in the   position (fig. 8). To release the iron, place the slide in the   position and extract the iron (fig. 9). During ironing, leave the slide in the   position.



Never move or lift the appliance using the iron as a carrying handle.

 
- Removable iron rest: to iron more comfortably, you can remove the iron rest from the appliance and rest it on the ironing board (fig. 10). Never use the iron rest on a table. The heat could ruin the surface of the table!

### Please note:




- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.
- While ironing, it is normal to hear the water fill pump come on and go off. This is caused by transfer of water from the reservoir to the steam generator. It is part of normal operation and is not a cause for concern.

## Adjusting the iron thermostat (B3)


Turn the thermostat dial to set the most suitable temperature for the type of fabric to be ironed.



Below is a brief guide to help you choose the best temperature for the type of fabric to be ironed.

-  Acetate, acrylic, nylon, polyester, rayon
- ●  Silk, wool
- ● ●  Linen, cotton

## Topping up the water in the reservoir

When the water runs out, the  light comes on. When the “no water” light comes on steadily, you should top up the water in the reservoir as soon as possible. This will enable you to continue ironing after a short interruption.

When the water in the reservoir has run out, the pump becomes noisier.

This is part of normal operation and is not a cause for concern. However, **you are recommended to top up the water in the reservoir immediately.**

When this light comes on, proceed as described in the section “Filling the reservoir”.

## “TURBO” function



Press the steam button B2 twice to obtain turbo steam for a few seconds.

## Dry ironing


To dry iron, turn the thermostat dial on the iron to select the temperature most suitable for the garments to be ironed, then iron without pressing the steam button.

## Auto-off


If steam is not delivered for more than 8 minutes, auto-off is activated and the light C7 flashes.

To reactivate the appliance, press the  button and wait for the steam ready  light (C6) to come on steadily.



## Turning off

To turn the appliance off, press and hold the  button for one second. Turning off is confirmed by a beep.

## Rinsing the steam generator


To optimise operation, maintain constant steam production over time and save energy, rinse the steam generator whenever the  light (fig. 11) comes on. Proceed as follows:

- Make sure the appliance is turned off, unplugged from the mains and completely cold;
- Extract the tank;
- Turn the protective cap A5 anticlockwise (fig. 12);
- Unscrew the steam generator cap (fig. 13) anticlockwise and remove;
- Eliminate the water in the steam generator (fig. 14);
- Rest the appliance on its side (fig. 15) and fill with a maximum of 0.7 litres of water using a funnel to avoid the water spilling outside the steam generator;
- Shake the appliance to rinse the entire steam generator (fig. 16), then throw the water away;
- Rinse again;
- Screw the steam generator cap back on clockwise, making sure it is tightly closed.
- Replace the protective cap A5.

- The next time you turn the iron on, press the EXTRA STEAM  button (fig. 17) for at least 8 seconds. The  light goes off.

Before resuming ironing, discharge steam into the air for a few seconds to completely eliminate any residues from the internal circuits.

### After use

Place the iron on the iron rest and lock in place by placing the lock/release slide in the  position. Wait for the system to cool down.






**Models with cable wind button:** press the  button (A7) to wind the cable.

**Models without cable wind button:** wind the cable tidily and hold it in place with the Velcro cable tidy strip (A12), then place it in the cable compartment.

Fix the steam/cable tube on the hook A3.

Store the iron in a dry place.

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the  button (C8).
Steam leaks from under the steam generator	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact the manufacturer's customer services.
Water leaks out from the holes in the bottom of the soleplate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button (B2) several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The thermostat dial (B3) is not in the correct position	Place the thermostat dial (B3) in the  sector.
	The ironing system is positioned on an unstable and/or sloping surface.	The iron must be used and rested on a stable surface.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water reservoir or steam generator.	Never pour products into the water reservoir (see section: "What water to use"). Clean the plate with a damp cloth and rinse the steam generator (  ).
White specks come out of the iron soleplate	The steam generator has not been rinsed regularly	Rinse the steam generator (  ).
The first time the appliance is turned on, you notice smoke.	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal.
A click sound comes from inside the appliance		This is completely normal.
The steam generator cap is difficult to unscrew	Limescale has made the steam generator cap difficult to open	Turn the cap forcefully. To avoid the problem, rinse the steam generator frequently.
After regenerating the filter, the  light does not go out		Hold the OK button (C3) down for at least 5 seconds.
After filling the reservoir, the  light flashes.	The reservoir (A2) is not positioned correctly	Extract and reinsert the reservoir.
The appliance has been dropped during transport		Check that the appliance has not been damaged and if necessary take it to the manufacturer's customer services.