

FUNDAMENTAL SAFETY WARNINGS



Danger of electric shock!

This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets and/or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains

- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.

During use, the openings under pressure must never be opened for filling, descaling, rinsing or inspection.

- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

The iron must not be left unattended while it is connected to the mains.

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.
- All contact between the hot base and electrical wires must be rigorously avoided.



Important

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel. Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The iron must be used and rested on a stable heat-resistant surface.

When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- **NEVER store the iron in a vertical position!**
- During use, rest the appliance on a work surface only (e.g. ironing board or table).

Do not use the appliance if it has been dropped and there are visible signs of damage or leaks. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to Customer Services.

Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.







DESCRIPTION

Description of the appliance

(see page 3)

- A Iron rest
- B Water reservoir door
- C Limescale system cap
- D Hook for steam/cable tube
- E Power cable compartment
- F Control panel

Control panel

- G  ON/OFF switch
- H  light:
flashing: on/heating up
on steadily: steam ready
- I ECO OPTIMAL STEAM button
- J Ironing mode light:
on: ECO OPTIMAL STEAM
off: EXTRA STEAM
- K "No water" light 
- L Steam generator rinse light 
- M Button:
 confirms the reservoir has been filled after the water has run out
 confirms that rinsing has been performed (press and hold for 5 seconds after rinsing)

Iron

- N Iron on light
- O Steam button
- P Thermostat dial

PREPARATIONS FOR USE

What water to use

The appliance works with **normal tap water**. In case of very hard water (hardness above 27°F), we suggest using demineralised water diluted with 50% tap water. Never use demineralised water on its own. Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solutions, etc.).



Important!

Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).

Filling the reservoir





Danger!

Make sure the cable is unplugged from the mains socket.

- Open the door of the water reservoir and fill (fig. 1).
Never exceed the MAX level marked on the reservoir (fig. 2).

- Plug the appliance into a mains socket.

STEAM IRONING

- Turn on by pressing the ON/OFF switch (G) (fig. 3). The  light (H) on the control panel flashes, together with the light (N) on the iron.
- Wait for the  light (steam ready) to remain on steadily and the light (N) on the iron to go off (fig. 5).
- To deliver steam, press the steam button (O) under the handgrip (fig. 6).
- The light on the iron (N) comes on and goes off during ironing according to the temperature of the iron. This is part of normal operation and not a cause for concern.
- Continuous steam: press the steam button (fig. 6) twice in rapid succession (within 1 second). Continuous steam will be delivered for a few seconds. Press the steam button (fig. 6) again to stop the function.
- Vertical steam: the iron can also be used to steam iron hanging garments.

OPTIMAL STEAM function

This function is recommended to iron the most delicate fabrics such as silk, wool and synthetics.

- To use the OPTIMAL STEAM function, press the button (I) (fig. 4).
- Wait for the light (H) (steam ready) to remain on steadily.
- To go back to normal steam ironing, press the button (I) again.



Please note:

- While ironing, it is normal to hear the water fill pump come on and go off. This is caused by transfer of water from the reservoir to the steam generator. This is part of normal operation and not a cause for concern.

Adjusting the iron thermostat (P)

Turn the thermostat dial to set the most suitable temperature for the type of fabric to be ironed.



For steam ironing, the temperature must be within the steam sector shown alongside.

Below is a brief guide to help you choose the best temperature for the type of fabric to be ironed:



- Acetate, acrylic, nylon, polyester, rayon
- Silk, wool
- Linen, cotton

TOPPING UP THE WATER IN THE RESERVOIR

When the water in the reservoir has run out, the pump becomes noisier. This is part of normal operation and not a cause for concern: **You are recommended to top up the water in the reservoir immediately. This will enable you to continue ironing without interruption (see section “Filling the reservoir”).**

“No water” light (K)

When the water runs out, the  light comes on (fig. 7).

To continue steam ironing, fill the reservoir (see section “Filling the reservoir”) and confirm by pressing the button (M).

DRY IRONING

To dry iron, turn the thermostat dial on the iron to select the temperature most suitable for the garments to be ironed, then iron without pressing the steam button.

ENERGY SAVING FUNCTION

When the system is in energy saving mode, the OPTIMAL STEAM light (J) flashes.

The appliance switches to energy saving mode when no steam has been delivered for 10 minutes.

To reactivate the steam function, press the button (M) or the steam button (O).

After ironing

- Press the ON/OFF switch (G) to turn the appliance off.
- Unplug from the mains and allow to cool. You are recommended to store the ironing system with the door tightly closed to avoid dust and foreign bodies falling into the reservoir and possibly jeopardising operation of the pump. Wait for the system to cool down before putting it away.
- To put the appliance away tidily, fix the steam/cable tube to the hook (D) and place the power cable in the power cable compartment (E). Store the iron in a dry place.




Please note:


After ironing, the water remaining in the reservoir need not be drained. However, the appliance should be drained of water if left unused for long periods.

MAINTENANCE

Rinsing the steam generator


To optimise operation, maintain constant steam production over time and save energy, the steam generator must be rinsed with water. When the  light (L) comes on, proceed as follows:

- Make sure the appliance is turned off, unplugged from the mains and completely cold.

- Empty the water reservoir by turning the appliance upside down over a sink.
- Use a coin or screwdriver to unscrew the steam generator cap (fig. 8).
- Eliminate the water in the steam generator (fig. 9).
- Rest the appliance on its side (fig. 10) and fill with a maximum of 0.7 litres of water using a funnel to avoid the water spilling outside the steam generator.
- Shake the appliance to rinse the entire steam generator, then throw the water away (fig. 11).
- Repeat the rinse procedure.
- Screw the cap back on, making sure it closes the steam generator efficiently.
- After rinsing, plug the appliance into the mains and turn on by pressing the ON/OFF switch (G) (fig. 3).
- Press and hold the button (M) for at least 5 seconds until the  light (L) goes off.
- Discharge steam into the air for a few seconds to completely eliminate any residues from the internal circuits.



Please note:

- If the appliance is turned off without rinsing the steam generator, the next time it is turned on, the  light (L) flashes.

Cleaning

- Before cleaning, make sure the appliance is turned off, unplugged from the mains and completely cold.
- The surface of the soleplate must be kept clean. To clean, just wipe the cold surface with a damp cloth.
- Never use abrasive pads, vinegar or other chemicals.

DISPOSAL



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the ON/OFF button (G).
Steam comes out of the bottom of the appliance.	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact the manufacturer's Customer Services.
Water leaks out from the holes in the bottom of the soleplate.	The iron thermostat dial is not in the area indicated in the section "Adjusting the iron thermostat (P)".	Set the iron thermostat dial in the steam area (see "Adjusting the iron thermostat (P)")
	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The ironing system is positioned on an unstable and/or sloping surface.	The iron must be used and rested on a stable surface.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water reservoir or steam generator.	Never pour products into the water reservoir (see our tips in the quick guide). Clean the soleplate with a damp cloth.
The first time the appliance is turned on, you notice smoke.	Some parts have been treated with sealant/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal.
	The water reservoir is empty.	Fill the reservoir with water.
All the lights flash.	System error	Unplug the system from the mains, then plug it back in again and press the ON/OFF switch (G). If the problem persists, turn the appliance off immediately and contact the manufacturer's Customer Services.
Steam escapes from the cleaning cap (C).	The cleaning cap (C) has not been closed correctly	Close the cleaning cap correctly
	The cleaning cap (C) gasket may be damaged	Contact the manufacturer's Customer Services
The appliance indicates "steam ready" but no steam is delivered from the iron.	The "no water" indication has been reset without filling the water reservoir	Fill the water reservoir and press the steam button (O) for at least 1 minute until the pump starts filling the system with water