

SAFETY WARNINGS



Danger of electric shock!

Failure to comply may cause lesions due to electrical shock with life-threatening danger.

- This is an electrical appliance and may cause electric shock. You should therefore follow these safety warnings:
- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets and/or extensions should not be used.
- To fill or add water, turn the ironing system off by rotating knob M and detaching the plug from the power socket.
- If the power cord is damaged, it must be replaced by the manufacturer or by their help centre, so as to prevent all risks.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.



Danger of burns!

Surfaces marked with this symbol become hot during use.

Failure to observe the warnings may result in burns or scalds.

- Never aim the steam at persons or animals.
- The iron must not be left unattended while it is connected to the mains.

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- The appliance must not be moved during operation.
- All contact between the hot base and electrical wires must be rigorously avoided.



Important

Failure to observe the warnings may result in lesions or damage to the appliance.



- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel.
- Dispose of the plastic bag as it represents a hazard to children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- During use, rest the appliance only on working surfaces (e.g. ironing board or table) (fig. 1).
- Use the removable iron rest on working surfaces (e.g. ironing board or table) (fig. 1).
- NEVER rest the iron on its shell when the iron rest has been removed (fig. 2).
- The appliance must be used and rested on a stable surface, resistant against high temperatures. When the iron is placed on its iron rest, ensure that the surface on which the appliance is rested is stable.
- NEVER store the iron in a vertical position! (fig. 3).
- Do not use the appliance if it has been dropped and there are visible signs of damage or leaks. If the ironing system is dropped causing visible damage to the appliance, do not use. Take to Customer Services.

DESIGNATED USE

This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.

The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

DESCRIPTION OF APPLIANCE

- A Iron
- B Thermostat knob
- C Light indicating iron is ready for use
- D Steam release button
- E Removable iron rest
- F Water tank
- G Power cord compartment
- H Power cord
- I Hook to replace single pipe
- L Control panel
- M Knob to turn on appliance:
Dry ironing 
Steam ironing 
- N Power light

WHAT TYPE OF WATER TO USE?





Important




- Only use demineralized water to fill tank F. DO NOT USE TAP WATER.
- Do not use chemical substances or detergents or additives (e.g. perfumed water, essences, descaling solutions, etc.).
- Do not use mineral water or other types of water (e.g. rain-water, battery water, air conditioning water, etc.).

USE

When used for the first time, the device may release some smoke for a few minutes and an odour due to the heating and subsequent drying of the sealants used to assemble the appliance. It is advisable to ventilate the room. It is also normal to hear the sound of the pump channelling the water to the iron. Proceed as follows:

- Ensure the power plug is detached from the household power socket. Open the water tank hatch door F (fig. 4).
- Fill the tank, taking care not to exceed the MAX level (fig. 5) and close the hatch door.
- Connect the appliance to a power socket (fig. 6).
- Turn the start knob M into position  (fig. 7) for dry ironing or into position  (fig. 10) for steam ironing.
- Turn the thermostat knob B depending on the temperature

suitable for the fabric being ironed (fig. 8 and 11):

-  Acetate, acrylic, nylon, polyester, rayon
- ●  Silk, wool
- ● ●  Linen, cotton

- Wait for light C to turn off. The appliance is ready for use (fig. 9 and 12).
- For steam ironing, in particular when used for the first time, position the iron on a cloth and press the steam release button D at intervals of 2-3 seconds for the first minute of use in order to fill the hydraulic circuit.
- To turn the appliance off turn the start knob M to position 0. Detach the plug and leave the appliance to cool before storing it. When you have finished ironing, it is not necessary to drain the water left in the tank. It is nonetheless advisable to do so if the appliance will remain unused for long periods of time.

FILLING



Important

Once the water in the tank has finished, the pump will make a louder noise. This constitutes the normal operation of the appliance: it is recommended to immediately replace the water in the tank. To fill or add water, turn the ironing system off and detach the plug from the power socket.

CLEANING




- Before cleaning, always ensure the appliance is turned off, disconnected and completely cooled down.
- The surface of the hotplate must be kept clean: to clean it, it is sufficient to pass a moist cloth over its cold surface.
- Never use steel wool, vinegar or other chemical substances.

DISPOSING OF THE APPLIANCE



Do not dispose of the appliance together with household waste but rather take it to an authorised waste separation centre.

PROBLEM RESOLUTION

PROBLEM	CAUSE	SOLUTION
The appliance doesn't turn on.	The appliance is not connected to a power supply.	Check that the appliance is properly connected and turn the appliance's start knob.
Water leaks from the holes of the iron hotplate.	The water in tank F is almost finished.	Add water in tank F.
	There is condensate inside the tubes because steam has been released for the first time or the appliance hasn't been used for some time.	Press the steam release button D several times away from the ironing board: this will allow the elimination of cold water from the steam circuit.
	The iron's thermostat knob B is not in the steam sector.	Position the iron's thermostat knob B in the steam sector.
Dark coloured run-off from the iron's hotplate.	Descaling chemical products or additives have been poured into the water tank.	Products must never be poured into the water tank (see para. "What type of water to use?"). Clean the hotplate with a moist cloth.
	The iron's thermostat knob B is not in the steam sector.	Position the iron's thermostat knob B in the steam sector.
When the appliance is turned on for the first time, it emits smoke.	Some parts are treated with sealants/ lubricants which evaporate the first time the appliance is heated.	This is entirely normal, this phenomenon will disappear after a few uses.
The appliance emits an intermittent noise associated with vibrations.	This is the sound of the pump in-taking water.	This phenomenon is entirely normal.
	The water in tank F is almost finished.	Add water in tank F.
No steam is released	The hydraulic circuit is empty.	This normally occurs during first use. Turn the start knob M into position  . When the iron reaches temperature, press the steam button D at intervals of 2-3 seconds for the first minute of use. This will allow the hydraulic circuit to fill up and begin releasing steam. If the problem persists, disconnect the ironing system and contact an authorised Help Centre.
	The M start knob is in position 	Turn the start knob M into position  .