

Contents

1st use	4
Tips.....	5
Espresso	6
Cappuccino	7
Cleaning after Cappuccino	8
Hot Water.....	8
Cleaning	9
Descaling and Rinse	10
Description	14
Description of the appliance.....	14
Description of the control panel	14
Description of the accessories.....	14
Controlling the appliance	14
Technical data	14
Disposal	14
Troubleshooting	15
Safety warnings	16
Symbols used in these instructions	16
Fundamental recommendations regarding safety.....	16
Use in compliance with destination	16
Instructions for use	16

Description of the appliance

(page 3 - A)

- A1. Removable water tank lid
- A2. Removable water tank
- A3. Cup warmer plate
- A4. Steam/hot water knob
- A5. Boiler outlet
- A6. Cappuccino maker
- A7. Hot water/steam nozzle
- A8. Cup tray
- A9. Indicator for drip tray maximum water level
- A10. Drip tray

Description of the control panel

(page 3 - B)

- B1. ON/OFF with built-in "ON" light
- B2. Coffee button with built-in "coffee ready" light
- B3. Steam button with built-in "steam ready" light

Description of the accessories

(page 2 - C)

- C1. Filter-holder cup
- C2. Cream filter 1 cup with ground coffee or pods
- C3. Cream filter 2 cups with ground coffee
- C4. Dispenser/tamper measure

Controlling the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present.

Do not use the appliance in the presence of obvious damage. Contact the De'Longhi After-Sales Service.

Technical data

Mains voltage:	220-240V-50/60Hz
Absorbed power:	1100W
Sizes LxHxD:	208x325x305 (380) mm
Pressure:	15 bar
Water tank capacity:	1 L
Power supply cable length:	1,2 m
Weight:	3,8 kg



The appliance is in compliance with the following CE

Directives:

- Stand-by Directive 1275/2008
- Low voltage Directive 2006/95/CE and successive amendments;
- EMC Directive 2004/108/CE and successive amendments;
- The materials and items intended for contact with food comply with the requirements of European Regulation 1935/2004.

Disposal



Recommendations for the correct disposal of the product in compliance with the 2002/96/EC European Directive and Legislative Decree n. 151 dated 25 July 2005.

The product must not be disposed of as urban waste at the end of its working life. It must be taken to appropriate local authority separate waste collection centres or to dealers providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from unsuitable disposal and allows to recover the materials of which it is made in order to make significant savings of energy and resources. The product has the crossed-out wheeled bin mark as a reminder of the obligation to dispose of household appliances separately. The illegal disposal of the product by the user entails the application of administrative sanctions envisioned by the Standard in force.

Problem	Possible causes	Solution
Espresso coffee does not flow out	There is no water in the tank	Fill the water tank
	The holes in the filter-holder are blocked	Clean the holes in the filter-holder spouts
	The espresso boiler outlet is blocked	Clean as indicated in the "Cleaning" paragraph
Espresso coffee drips from the edges of the filter-holder instead of through the holes	The filter-holder is not correctly inserted or is dirty	Attach the filter-holder correctly and turn it fully home firmly
	The espresso boiler gasket has lost elasticity or it is dirty	Replace the espresso boiler gasket at an After-Sales Centre
	The holes in the filter-holder spout are blocked	Clean the holes in the filter-holder spouts
Loud pump noise	The water tank is empty	Fill the tank
	The tank is inserted incorrectly and the valve on the bottom is not open	Press the tank lightly to open the valve on the bottom
The coffee cream is dark (it flows slowly from the spout)	The ground coffee is pressed too tightly	Tamper the coffee less
	There is too much ground coffee	Reduce the amount of ground coffee
	The espresso boiler outlet is blocked	Clean as indicated in the "Cleaning" paragraph
	The filter is blocked	Clean as indicated in the "Cleaning" paragraph
	The coffee is ground too finely	Only use coffee specifically ground for espresso coffee machines
	The ground coffee is too fine or is moist	Only use coffee specifically ground for espresso coffee machines. The coffee should not be moist
	Incorrect type of ground coffee	Change the quality of the ground coffee powder
The coffee has an acid flavour	Rinsing after descaling was not sufficient	The milk does not froth when making a cappuccino
The milk does not froth when making a cappuccino	The milk is not cold enough	Always use milk at fridge temperature
	The cappuccino maker is dirty	Thoroughly clean the holes of the cappuccino maker

Symbols used in these instructions

The important recommendations have these symbols. These recommendations must be followed.



Danger!

Failure to comply can be or is the cause of injury due to life-threatening electric shocks.



Important!

Failure to comply can be or is cause of injury or damage to the appliance.



Scalding hazard!

Failure to comply can be or is the cause of scalding or burns.



Please note:

This symbol highlights recommendations and important information for the user.

Fundamental recommendations regarding safety



Danger!

As the appliance operates using electricity, electric shocks can not be excluded.

Therefore, follow the safety recommendations given:

- Do not touch the appliance when you have wet hands or feet.
- Do not touch the plug with wet hands.
- Make sure that the socket used can always be easily reached, so that the plug can be removed when required.
- Remove the plug from the socket by acting directly on the plug itself. Do not pull the cable as damage could be caused.
- Remove the plug from the socket to disconnect the appliance completely.
- Do not attempt to repair the appliance if it should breakdown. Turn it off, unplug from the mains socket and contact the Technical Assistance service.
- If the plug or power supply cable are damaged, have them replaced exclusively by the De'Longhi After-Sales Service, in order to prevent risks
- During cleaning, never immerse the machine in water: it is an electric appliance.
- Before performing any cleaning operations of the external parts of the appliance, switch the machine off, remove the plug from the socket and let the machine cool down.



Important:

Keep the packaging material (plastic bags, expanded polystyrene) out of the reach of children.



Important:

Do not allow the appliance to be used by persons (also children) with reduced psycho-physical-sensorial capacities or that have insufficient experience and knowledge, unless they are carefully monitored and trained by a person responsible for their safety. Watch children, do not let them play with the appliance.



Scalding hazard!

This appliance produces hot water and steam may form when it is operating.

Pay attention not to come into contact with hot water sprays or steam.

Do not touch the cup warmer plate when the appliance is on because it is hot.

Use in compliance with destination

This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper. This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance. This is an household appliance only. It is not intended to be used in:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Instructions for use

Read these instructions carefully before using the appliances. Failure to comply with these instructions can lead to injury to persons and damage to the machine.

The manufacturer is not liable for damage deriving from the failure to comply with the user instructions.



Please note:

Keep these instructions carefully. If the appliance should be transferred to other persons, these instructions must accompany it.



Please note: first use

Upon first use, rinse the internal ducts of the device, and operate the device like one would to make coffee until at least one water tank has been emptied; then, proceed to making coffee.